



NOTE: CONNECT TO ERV WHEN AVAILABLE

EVAPORATOR SECTION :
 EEV ELECTRONIC EXPANSION VALVE
 ST SUCTION TEMPERATURE

BLOWER SECTION :
 SAT SUPPLY AIR TEMPERATURE
 MAT MIXED AIR TEMPERATURE

CONTROL PANEL :
 TB TERMINAL BLOCK

ECONOMIZER SECTION :
 DS DAMPER SWITCH

CONDENSER SECTION :
 SPT SUCTION PRESSURE TRANSDUCER
 DPT DISCHARGE PRESSURE TRANSDUCER
 HPS HIGH PRESSURE SWITCH
 OATH OUTDOOR TEMP AND HUMIDITY SENSOR
 RAT RETURN AIR TEMP SENSOR
 CCT CONDENSER COIL TEMPERATURE

	Factory	Field	Optional
High Voltage			
Low Voltage			
0-10VDC			