



NOTE: CONNECT TO ERV WHEN AVAILABLE

- EVAPORATOR SECTION :**
 EEV ELECTRONIC EXPANSION VALVE
 ST SUCTION TEMPERATURE
 DPT DISCHARGE PRESSURE TRANSDUCER
 SPT SUCTION PRESSURE TRANSDUCER
 HPS HIGH PRESSURE SWITCH
 OATH OUTDOOR TEMP AND HUMIDITY SENSOR
 RAT RETURN AIR TEMP SENSOR
 CCT CONDENSER COIL TEMPERATURE
- CONDENSER SECTION :**
 SPT SUCTION PRESSURE TRANSDUCER
 DPT DISCHARGE PRESSURE TRANSDUCER
 HPS HIGH PRESSURE SWITCH
 OATH OUTDOOR TEMP AND HUMIDITY SENSOR
 RAT RETURN AIR TEMP SENSOR
 CCT CONDENSER COIL TEMPERATURE
- BLOWER SECTION :**
 SAT SUPPLY AIR TEMPERATURE
 MAT MIXED AIR TEMPERATURE
- CONTROL PANEL :**
 TB TERMINAL BLOCK
 TB TERMINAL BLOCK
- ECONOMIZER SECTION :**
 DS DAMPER SWITCH

	Factory	Field	Optional	Replacement Fuses
High Voltage				ERV 10A Class CC
Low Voltage				Non-ERV 7A Class CC
0-10VDC				