



**Outdoor Section**

**Control Panel Section**

**Indoor Section**

6 Motor Capacitor

5 Transformer  
Move Red Wire to 208V tap for 208V Operation

4 Outdoor Fan Motor

3 Compressor

15 Low Pressure Bypass

16 Emergency Heat Relay

17 Low Ambient Bypass (Optional)

12 Low Pressure Switch

13 High Pressure Switch

14 Low Ambient Control (optional)

19 Reversing Valve

Compressor Contactor

18 Heat Pump Control

21 Defrost Sensor

Note: Factory set on 60 min. cycle. Reconnect on 30 min. for 30 min. cycle or 90 min. for 90 min. cycle.

SEN JMP SPEEDUP 90 60 30

	Factory	Field	Optional
High Voltage			
Low Voltage			

230/208-60-3 Diagram

**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD  
DISCONNECT POWER BEFORE SERVICING.



4110-202

99 Wire Identification numbers for Bard use only.

230/208-60-3

11 3 pin plug for Indoor Blower Motor

10 16 pin plug for Indoor Blower Motor

9 6 pin plug for Heater Package