



- 1 FOR ANTIFREEZE LOOP APPLICATIONS, CHANGE LOW PRESSURE SWITCH TO YELLOW LEADS ON LPC TERMINALS OF GEOTHERMAL LOGIC CONTROL BOARD
- 2 H.P.S = Green fault light illuminated when fault indicated.
- 3 L.P.S = Orange fault light illuminated when fault indicated.
- 4 F.S. = Red fault light illuminated when fault indicated.
- 5 COND. = Yellow fault light illuminated when fault indicated.
- 6 Status = Green Status LED will blink in normal operation.

⚠ DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

99 Wire Identification numbers for Bard use only.

⚠ WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4117-101 F