


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

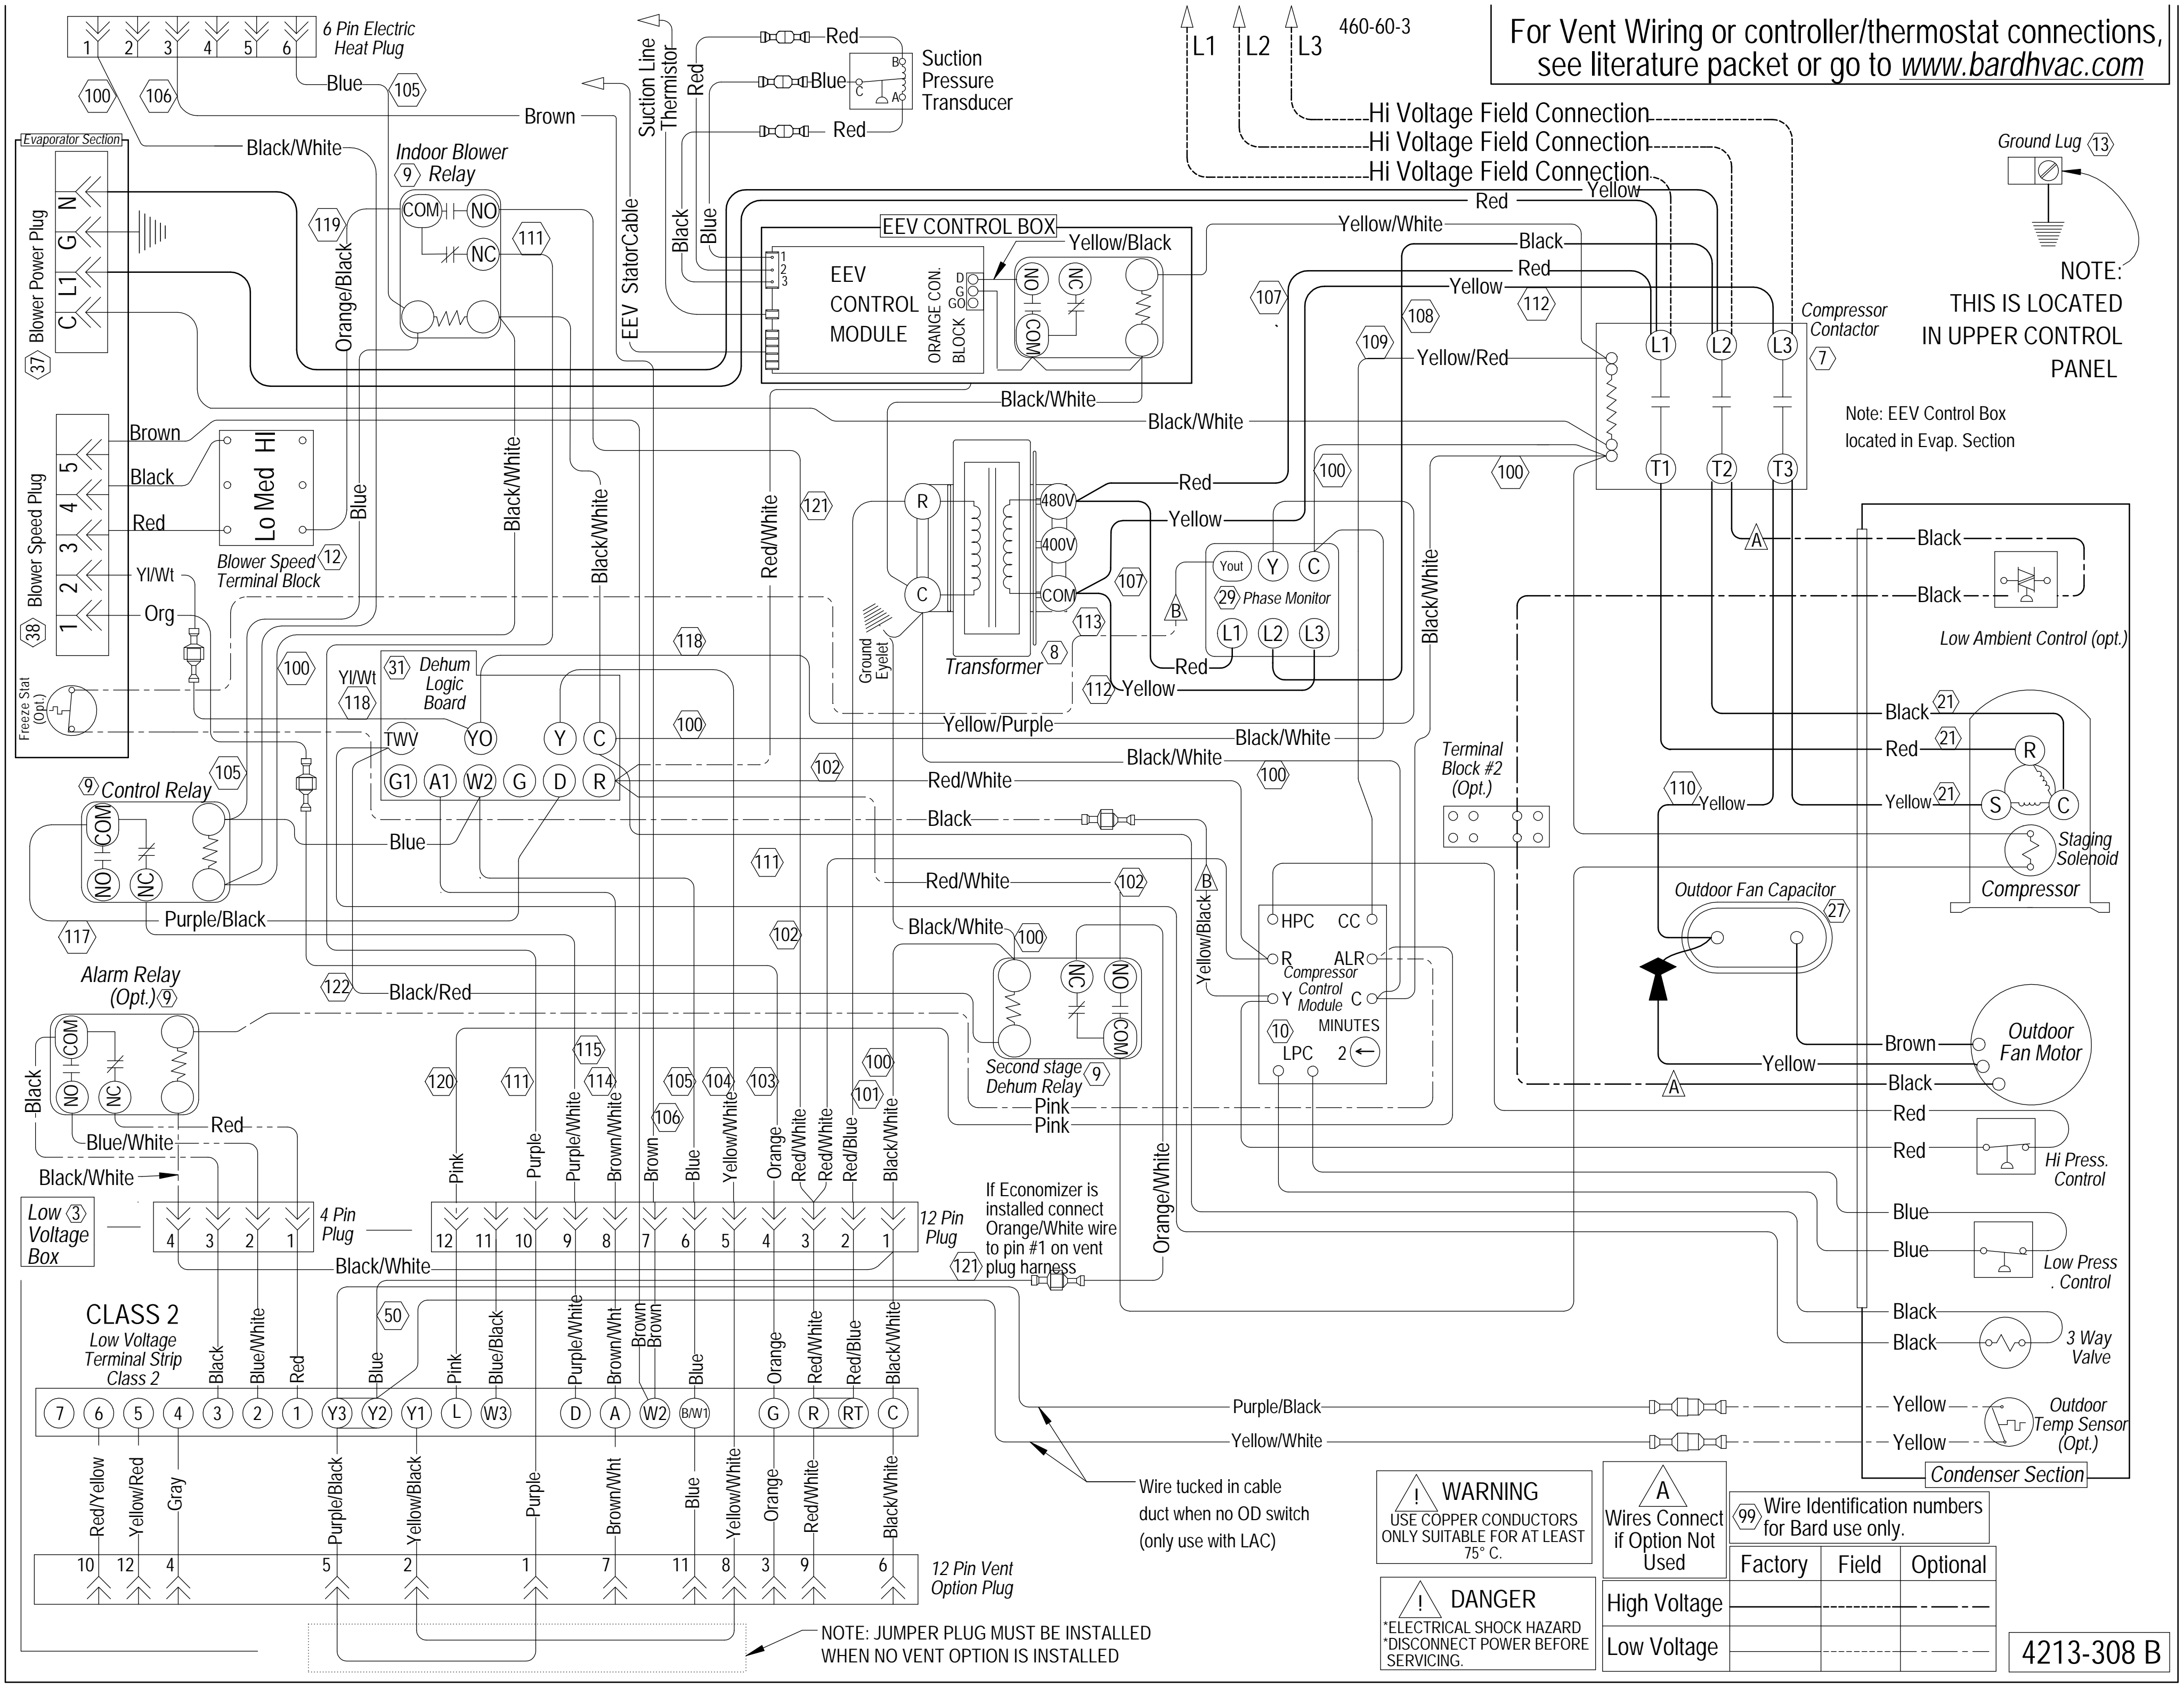

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL

Note: EEV Control Box
located in Evap. Section

Low Ambient Control (opt.)

Staging
Solenoid

Compressor

Outdoor Fan Motor

Hi Press.
Control

Low Press.
Control

3 Way
Valve

Outdoor
Temp Sensor
(Opt.)

Condenser Section

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

A
Wires Connect
if Option Not
Used

99 Wire Identification numbers
for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4213-308 B

NOTE: JUMPER PLUG MUST BE INSTALLED
WHEN NO VENT OPTION IS INSTALLED

Wire tucked in cable
duct when no OD switch
(only use with LAC)

If Economizer is
installed connect
Orange/White wire
to pin #1 on vent
plug harness