SUPPLEMENTAL INSTRUCTIONS

8612-065 Display Board Replacement Kit

Overview

The 8612-065 display board replacement kit is for use with the MC5300/MC5600 Series controller. Using this kit will replace a non-functioning touchscreen display.

Installation

IMPORTANT: Bard recommends the use of personal grounding straps to prevent static electricity shorts to electronic controls.

- 1. Disconnect power to the controller by disabling power to all connected units.
- Open door of controller and disconnect the 5-pin connector plugged into the back of the display (see Figure 1). Disconnect Ethernet cable connector too, if applicable. Be sure to use care when removing connectors to avoid damage to plug or display port.
- 3. Remove the four (4) screws located on the back of the display. Be sure to support the display from the front when removing screws.
- 4. Separate the display back bezel from the display, making sure to support the display from the front, and carefully remove the display from the controller door.
- 5. The display board replacement comes with the front bezel attached. Align replacement display with holes in controller door and attach back bezel using four (4) screws.
- 6. Connect 5-pin plug to back of display. Reconnect Ethernet cable, if applicable.
- 7. Power up the controller by reapplying power to all connected units. If the replacement display has been installed correctly, the Home Screen will appear on the display.

FIGURE 1 Remove 5-Pin Connector from Back of Display Board


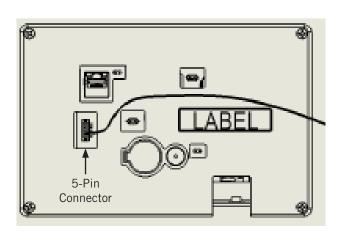


FIGURE 2 Display Board Components



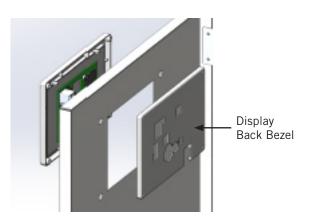

Bard Manufacturing Company, Inc. Bryan, Ohio 43506

www.bardhvac.com

Manual: 7960-900 Supersedes: **NEW** Date: 12-7-20