


USE COPPER OR ALUMINUM WIRE

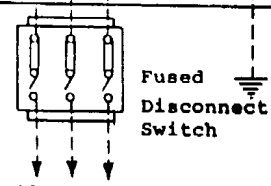

460-60-3

Factory Wiring ———
Field Wiring - - - -

- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A.
- ⚠ For low speed operation, disconnect the black motor lead and connect it to the orange motor lead. Connect the red motor lead to blower relay terminal number 1.

4009-330D