


TO SET CRV AIRFLOW FOR BLOWER ONLY, JUMPER R,G,01. ADJUST POT #1.
 TO SET CRV AIRFLOW FOR 1ST STAGE COOLING, JUMPER R,G,Y1,01. ADJUST POT #2.
 TO SET CRV AIRFLOW FOR 2ND STAGE COOLING, JUMPER R,G,Y1,Y2,01. ADJUST POT #3.
 REMOVE JUMPER AFTER COMPLETION OF ADJUSTMENT

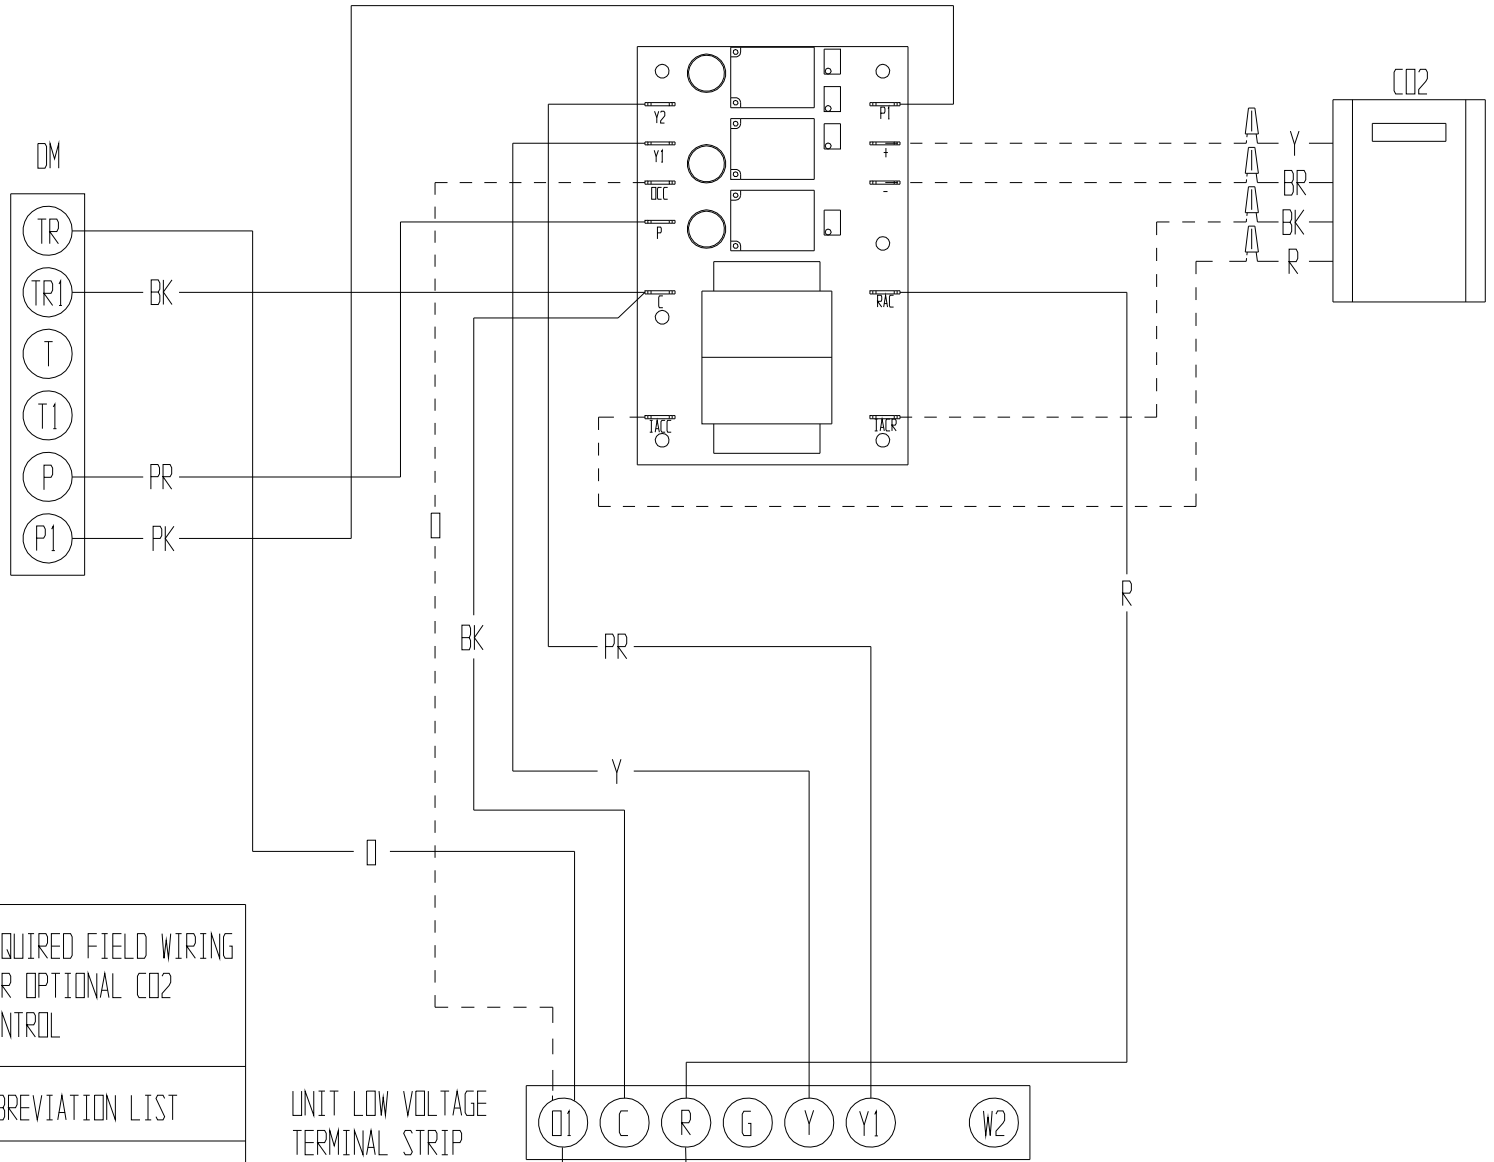

⚠ REMOVE JUMPER WHEN UNIT IS USED WITH OCCUPIED SIGNAL FROM THERMOSTAT.

WIRE COLOR	COLOR CODE ABBREVIATION
BLACK	BK
BROWN	BR
RED	R
ORANGE	Ø
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	V(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

----- REQUIRED FIELD WIRING FOR OPTIONAL CO2 CONTROL

PART ABBREVIATION LIST	
CCB	CRV CONTROL BOARD
CO2	CARBON DIOXIDE SENSOR
COO	CHANGE OVER RELAY
DM	DAMPER MOTOR

UNIT LOW VOLTAGE TERMINAL STRIP

01 C R G Y Y1 W2

⚠ AIR CONDITIONER CONNECTION DIAGRAM