

DOES NOT APPLY IF CO2 CONTROL IS USED


TO SET CRV AIRFLOW FOR BLOWER ONLY, JUMPER R,G,01. ADJUST POT #1.

TO SET CRV AIRFLOW FOR 1ST STAGE COOLING, JUMPER R,G,Y1,01. ADJUST POT #2.

TO SET CRV AIRFLOW FOR 2ND STAGE COOLING, JUMPER R,G,Y1,Y2,01. ADJUST POT #3.

TO SET CRV AIRFLOW FOR CO2 MINIMUM POSITION, JUMPER R TO 01, G.


REMOVE JUMPER AFTER COMPLETION OF ADJUSTMENT

 REMOVE JUMPER WHEN UNIT IS USED WITH OCCUPIED SIGNAL FROM THERMOSTAT.

WIRE COLOR	COLOR CODE ABBREVIATION
BLACK	BK
BROWN	BR
RED	R
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	V(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

----- REQUIRED FIELD WIRING FOR OPTIONAL CO2 CONTROL

PART ABBREVIATION LIST	
CCB	CRV CONTROL BOARD
CO2	CARBON DIOXIDE SENSOR
DM	DAMPER MOTOR

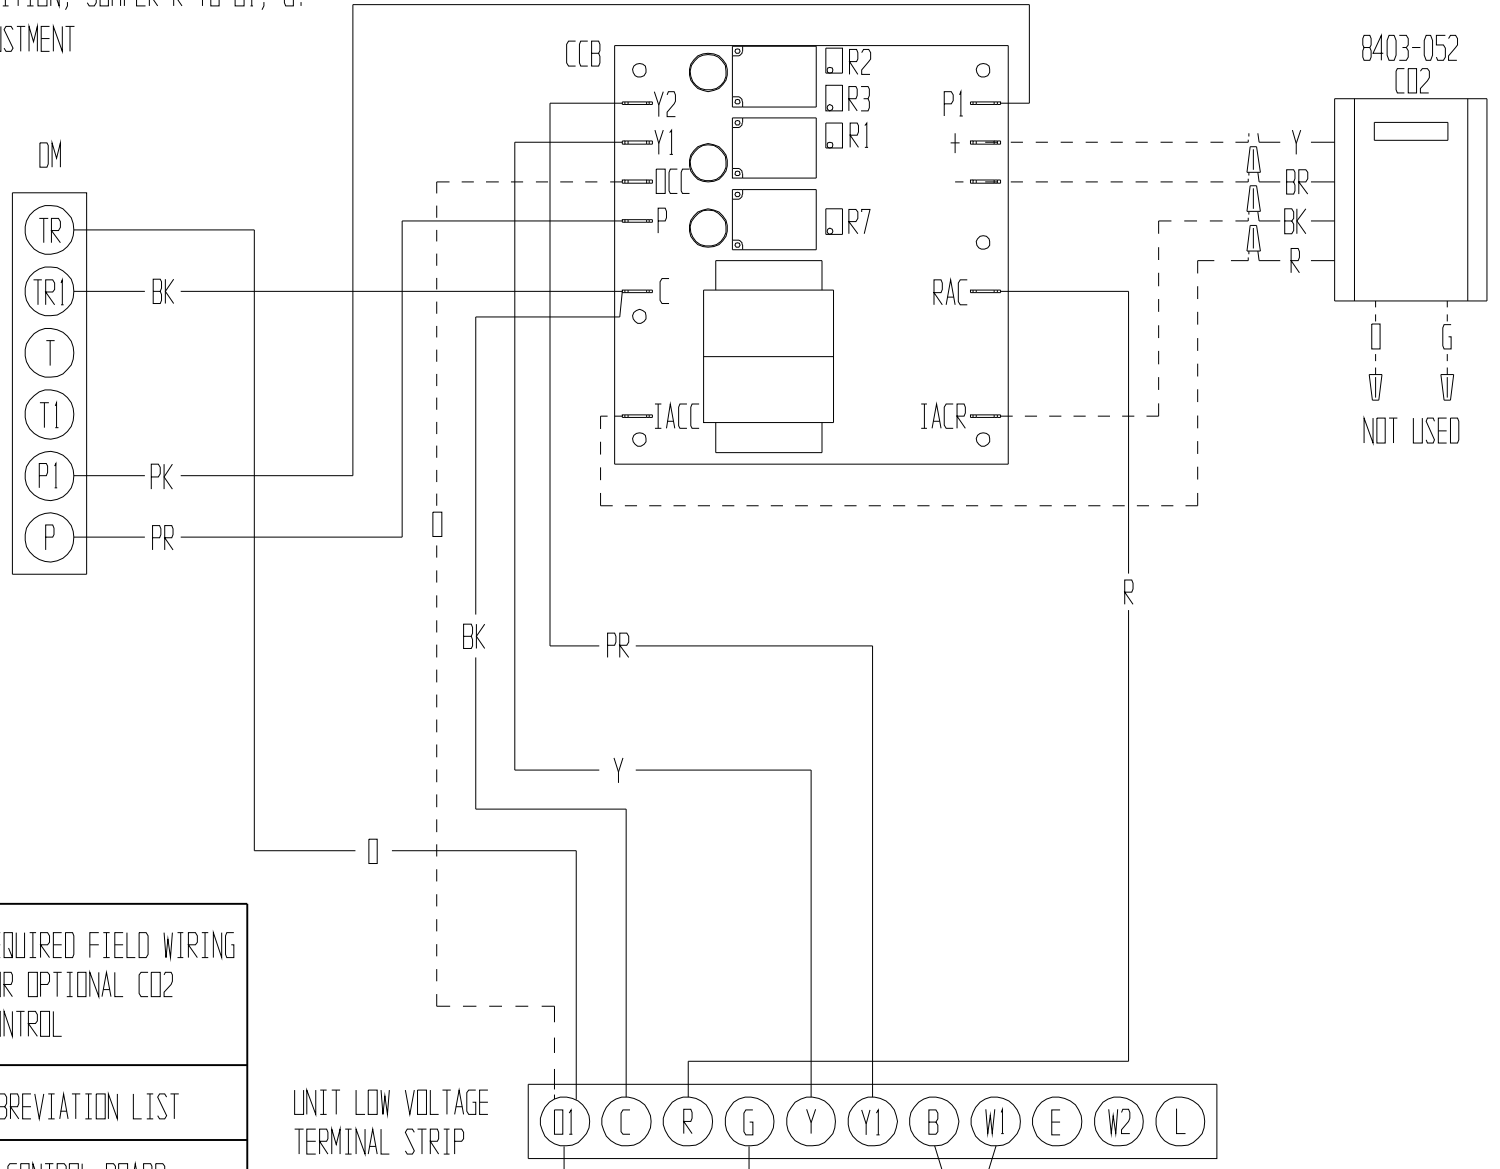

 HEAT PUMP CONNECTION DIAGRAM