


TO SET CRV AIRFLOW FOR BLOWER ONLY, JUMPER R,G,A. ADJUST POT R2.
 TO SET CRV AIRFLOW FOR 1ST STAGE COOLING, JUMPER R,G,Y1,A. ADJUST POT R1.
 TO SET CRV AIRFLOW FOR 2ND STAGE COOLING, JUMPER R,G,Y1,Y2,A. ADJUST POT R2.

THIS WIRE CONNECTS
 FOR CO2 SENSOR
 APPLICATIONS ONLY

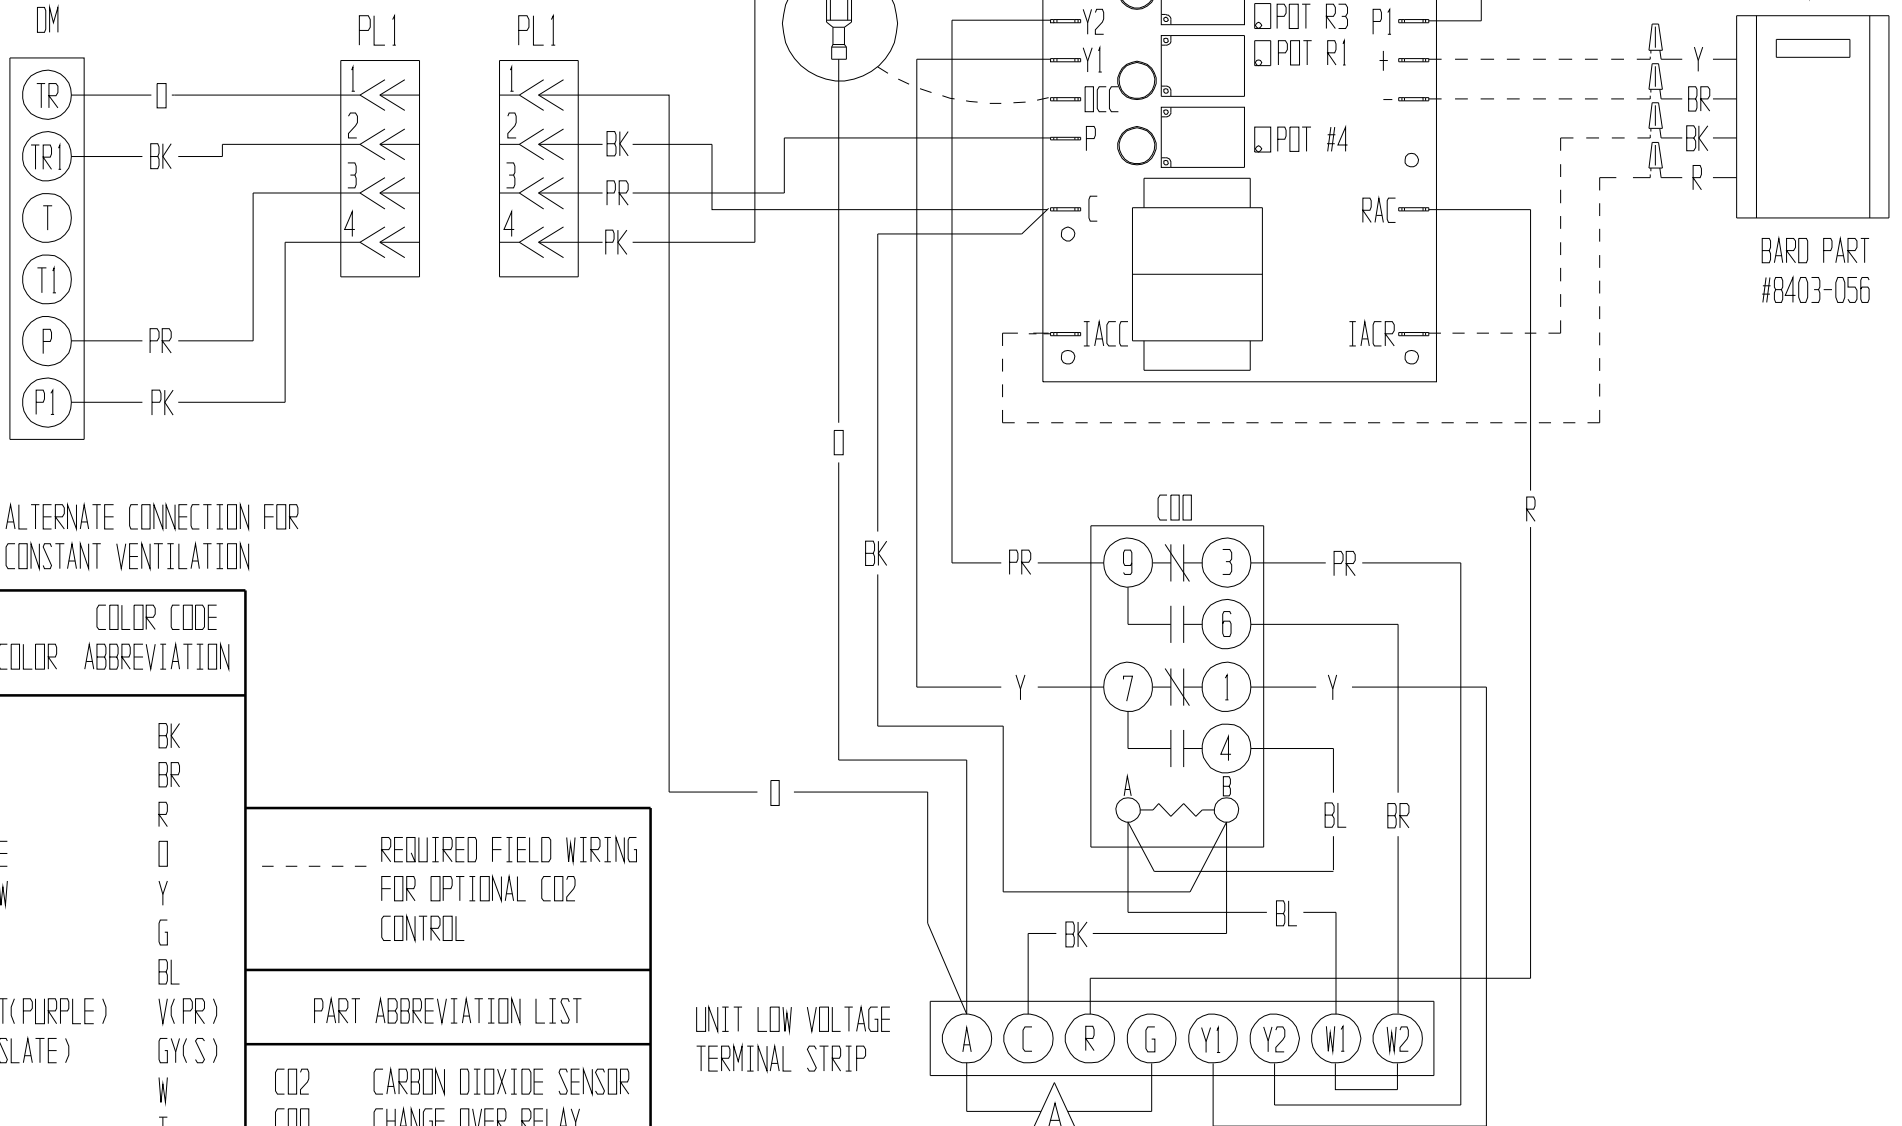

ALTERNATE CONNECTION FOR
 CONSTANT VENTILATION

COLOR CODE
 WIRE COLOR ABBREVIATION

BLACK	BK
BROWN	BR
RED	R
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	V(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

----- REQUIRED FIELD WIRING
 FOR OPTIONAL CO2
 CONTROL

PART ABBREVIATION LIST

CO2	CARBON DIOXIDE SENSOR
COO	CHANGE OVER RELAY
DM	DAMPER MOTOR
P1	PLUG

UNIT LOW VOLTAGE
 TERMINAL STRIP

AIR CONDITIONER CONNECTION DIAGRAM