


TO SET CRV AIRFLOW FOR BLOWER ONLY, JUMPER R,G,A. ADJUST POT R2.  
 TO SET CRV AIRFLOW FOR 1ST STAGE COOLING, JUMPER R,G,Y1,A. ADJUST POT R1.  
 TO SET CRV AIRFLOW FOR 2ND STAGE COOLING, JUMPER R,G,Y1,Y2,A. ADJUST POT R2.

8403-067  
 CO2

THIS WIRE CONNECTS  
 FOR CO2 SENSOR  
 APPLICATIONS ONLY

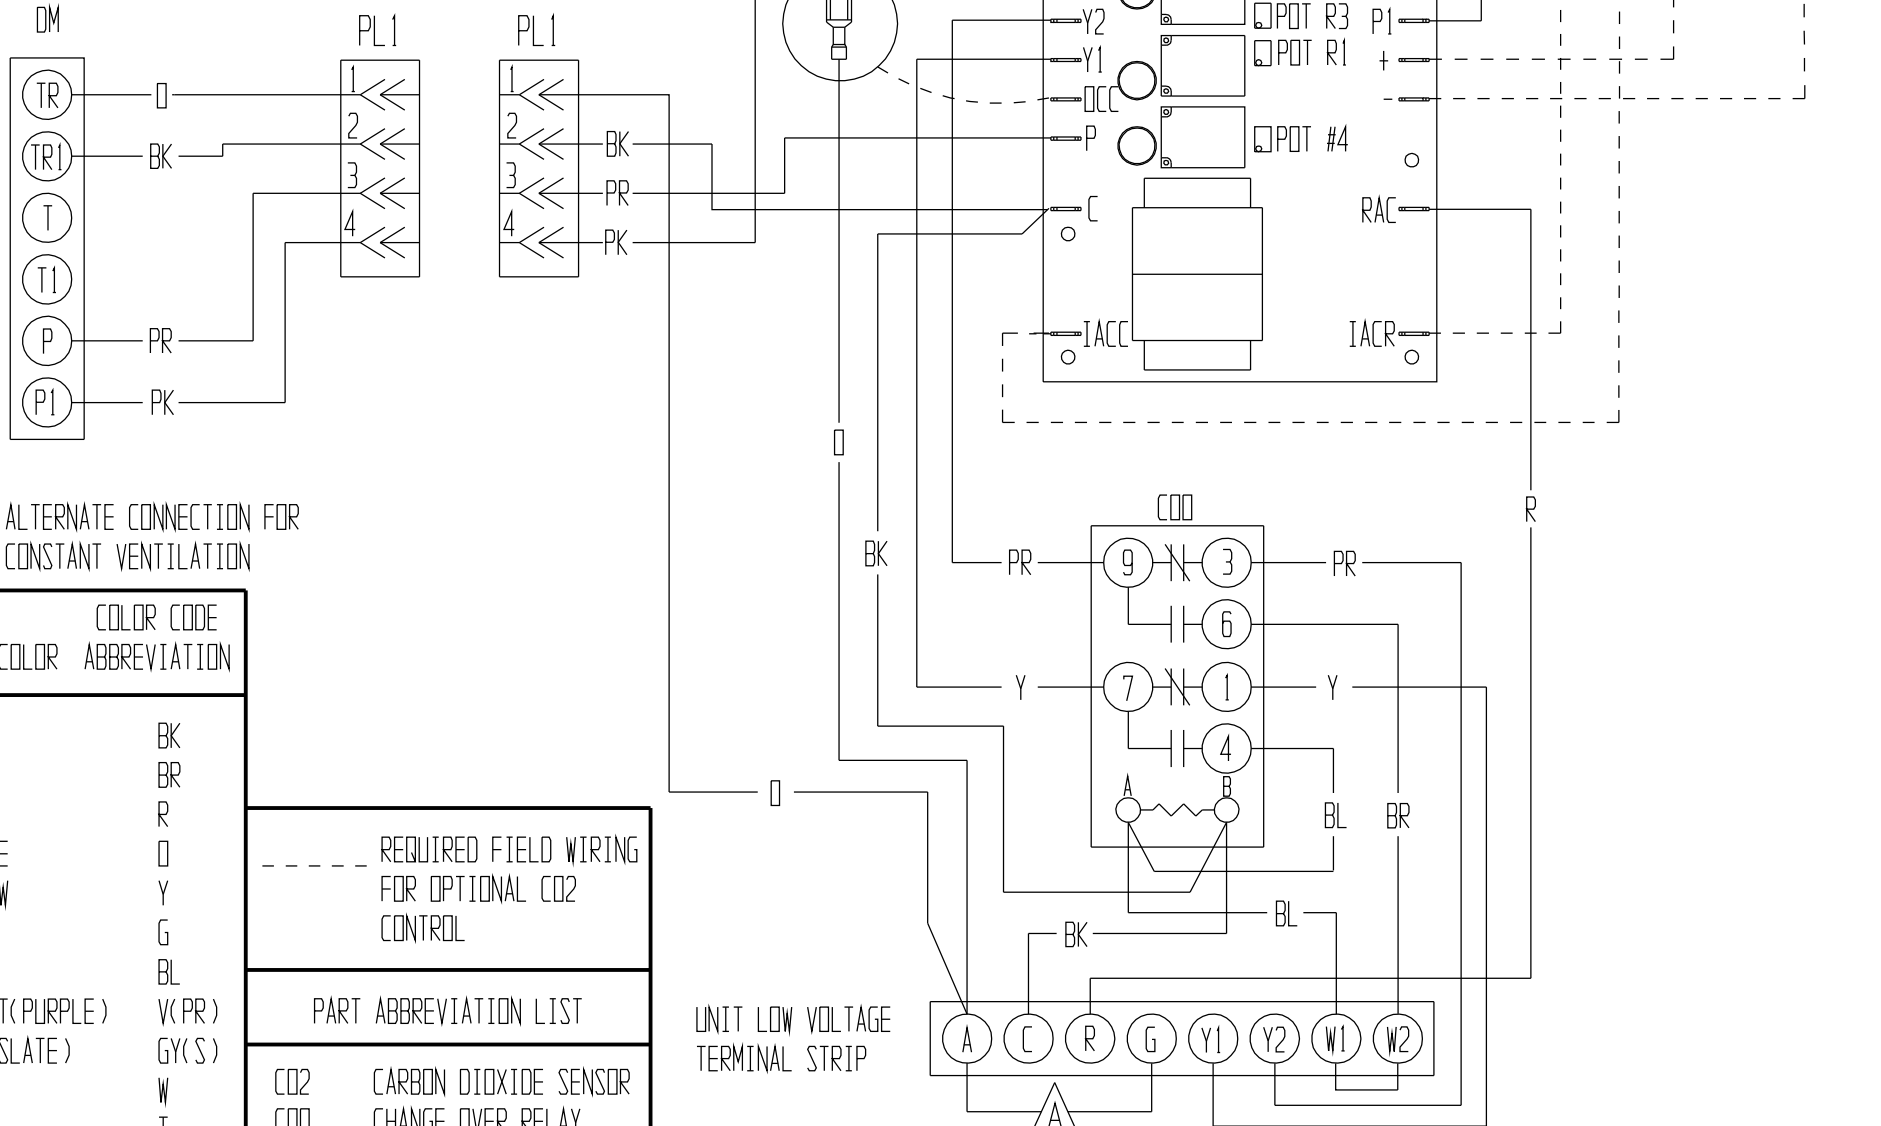

ALTERNATE CONNECTION FOR  
 CONSTANT VENTILATION

WIRE COLOR	COLOR CODE ABBREVIATION
BLACK	BK
BROWN	BR
RED	R
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	V(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

----- REQUIRED FIELD WIRING  
 FOR OPTIONAL CO2  
 CONTROL

PART ABBREVIATION LIST	
CO2	CARBON DIOXIDE SENSOR
COO	CHANGE OVER RELAY
DM	DAMPER MOTOR
PI	PLUG

UNIT LOW VOLTAGE  
 TERMINAL STRIP

AIR CONDITIONER CONNECTION DIAGRAM