


TO SET CRV AIRFLOW FOR BLOWER ONLY, JUMPER R,G,F. ADJUST POT #1.  
 TO SET CRV AIRFLOW FOR 1ST STAGE COOLING, JUMPER R,G,Y1,F. ADJUST POT #2.  
 TO SET CRV AIRFLOW FOR 2ND STAGE COOLING, JUMPER R,G,Y1,Y2,F. ADJUST POT #3.

THIS WIRE CONNECTS  
 FOR CO2 SENSOR  
 APPLICATIONS ONLY

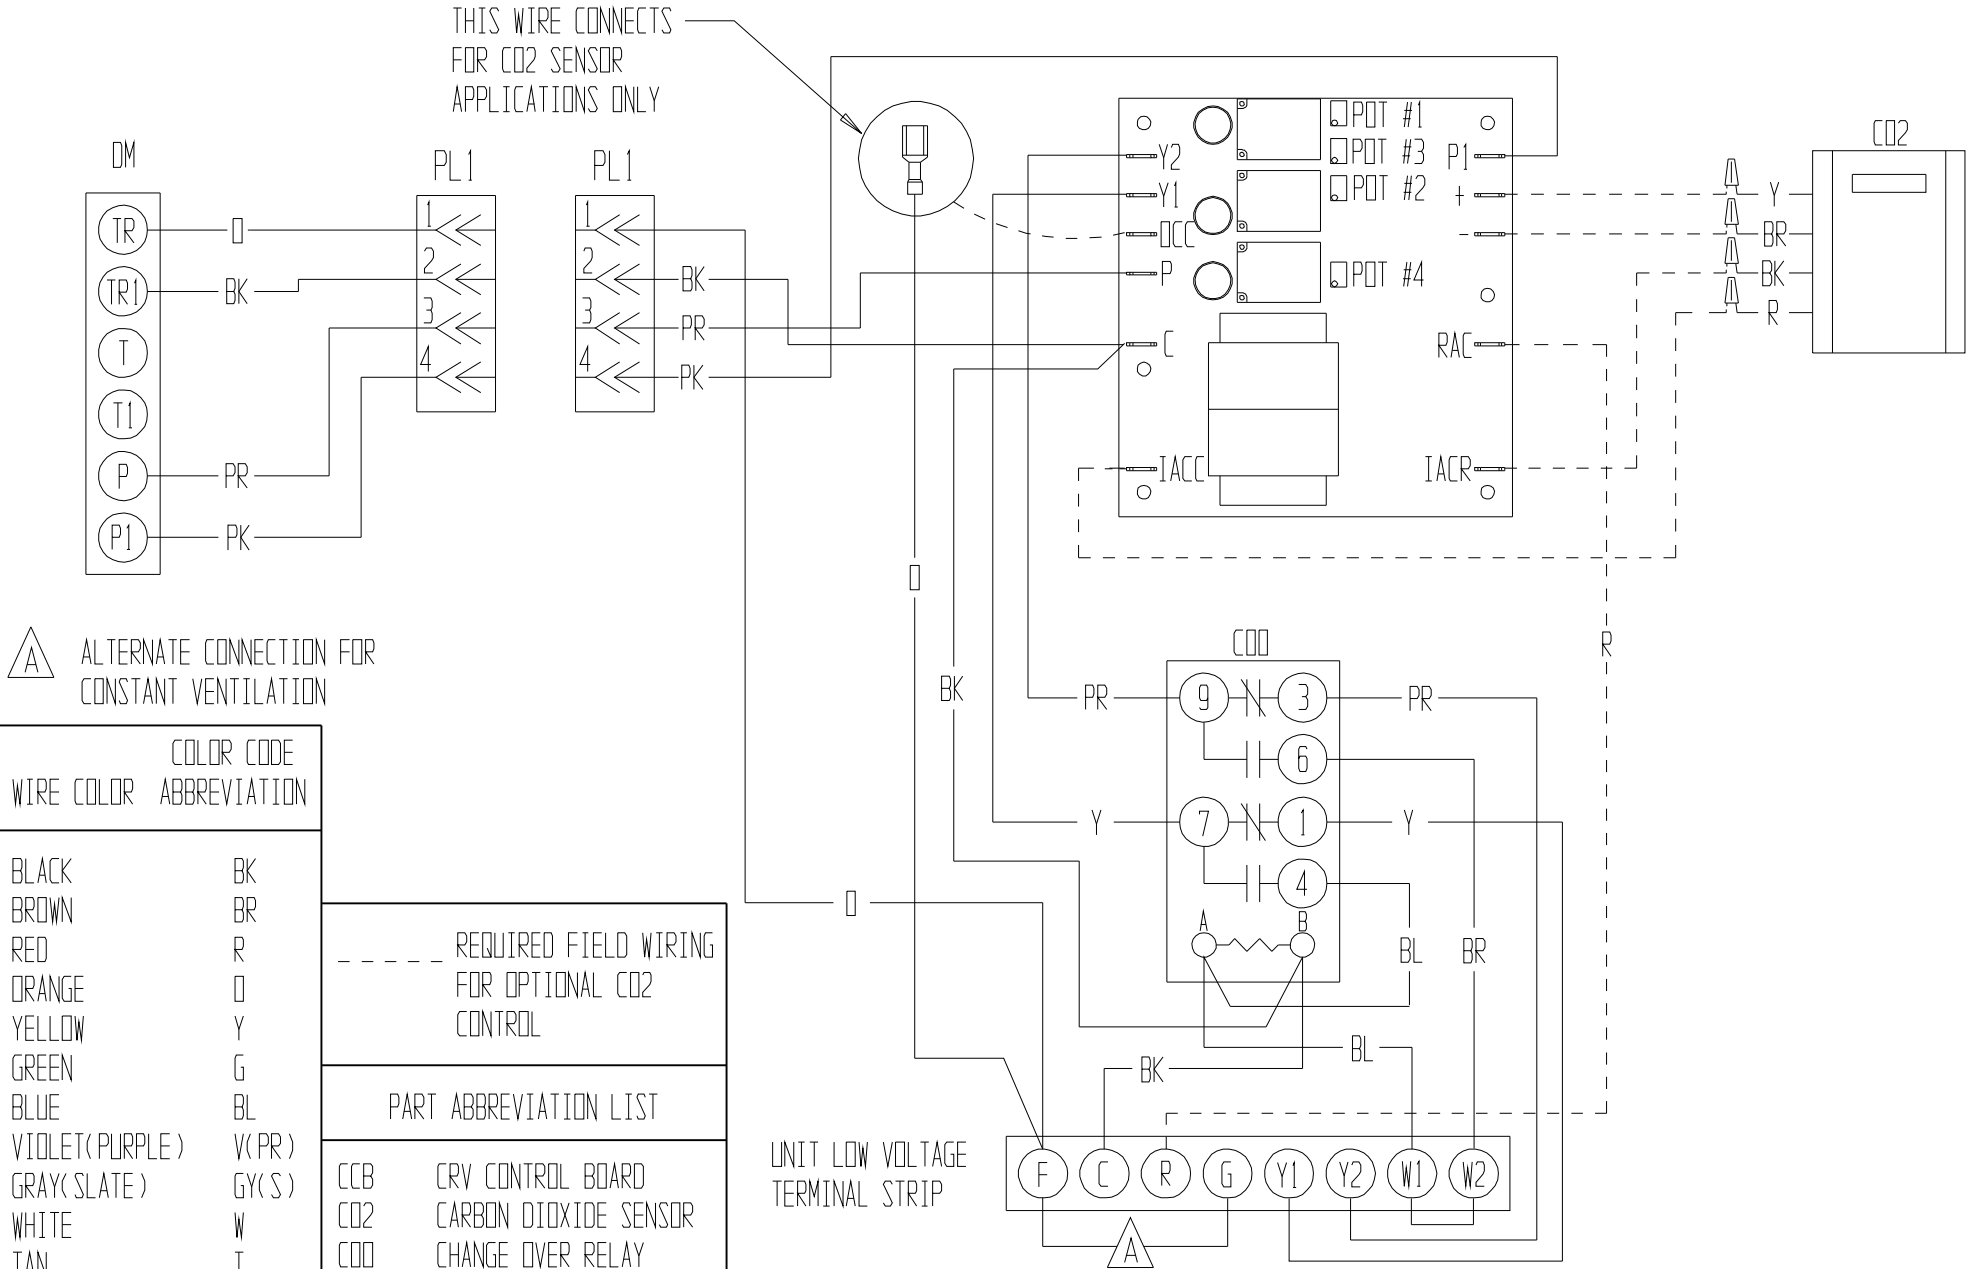

**A** ALTERNATE CONNECTION FOR  
 CONSTANT VENTILATION

COLOR CODE  
 WIRE COLOR ABBREVIATION

BLACK	BK
BROWN	BR
RED	R
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	V(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

----- REQUIRED FIELD WIRING  
 FOR OPTIONAL CO2  
 CONTROL

PART ABBREVIATION LIST

CCB	CRV CONTROL BOARD
CO2	CARBON DIOXIDE SENSOR
COO	CHANGE OVER RELAY
DM	DAMPER MOTOR
P1	PLUG

UNIT LOW VOLTAGE  
 TERMINAL STRIP

**A** AIR CONDITIONER CONNECTION DIAGRAM