- THIS OPTIONAL CONTROL ACCESSORY HAS CONTROL KIT TO BASIC UNIT CONNECTION DIAGRAM BEEN ADDED TO THIS UNIT -- FACTORY WIRE TO BE REMOVED ---- FACTORY WIRE TO BE RECONNECTED - IF ECONOMIZER IS INSTALLED, CONTROL KIT IS - FACTORY WIRING LOCATED BEHIND COMPRESSOR PARTITION IN THE - FIELD WIRING CONNECTION RETURN AIR OPENING -HEAT PUMP MODELS REMOVE FROM #1 DEF. TIMER — (C)(G) (Y1)(B) (W1) (W2) (W3) (E) (L) (DH) (O1) (R)(Y)AND RECONNECT TO FASTON QUICK CONNECT FASTON QUICK CONNECT LOW AMBIENT CONTROL TIME DELAY RELAY **DEFROST** TIMER CONTROL KIT Е 0 FAN RELAY — RED -– BLACK -- BLUE -SECONDARY TRANSFORMER PRIMARY FAN ADD MOTOR MULTIPLIER **DEFROST** FAN RELAY CAPACITOR ADD MULTIPLIER REMOVE THIS WIRE BLACK THIS WIRE ATTACHES TO TERMINAL #2 OF THE FAN 460V DEFROST RELAY ON 460 - 60 - 3 COMMON 4084-125 A