


# CONTROL KIT TO BASIC UNIT CONNECTION DIAGRAM

- RECONNECT
- FACTORY WIRING
- FIELD WIRING CONNECTION

- THIS OPTIONAL CONTROL ACCESSORY HAS BEEN ADDED TO THIS UNIT -

- IF ECONOMIZER IS INSTALLED, CONTROL KIT IS LOCATED BEHIND COMPRESSOR PARTITION IN THE RETURN AIR OPENING -

## AIR CONDITIONING MODELS

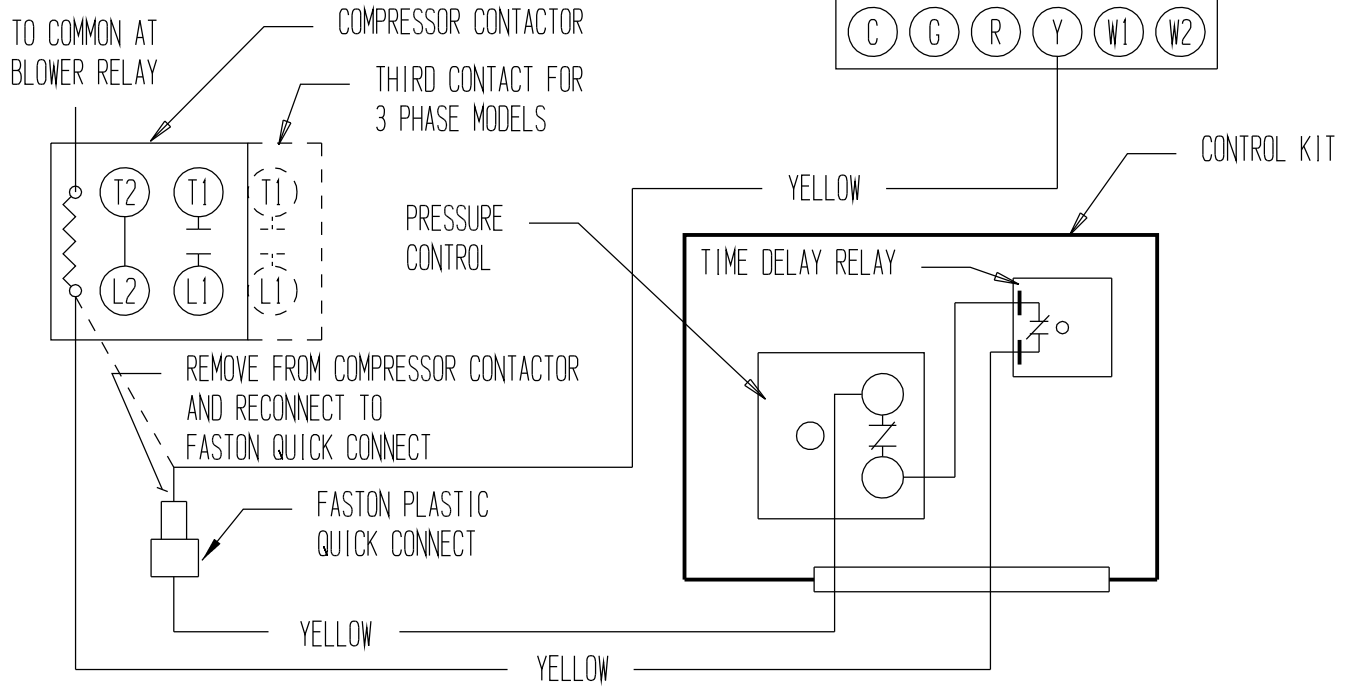

## HEAT PUMP MODELS

