


LOW VOLTAGE SENSOR CONNECTIONS

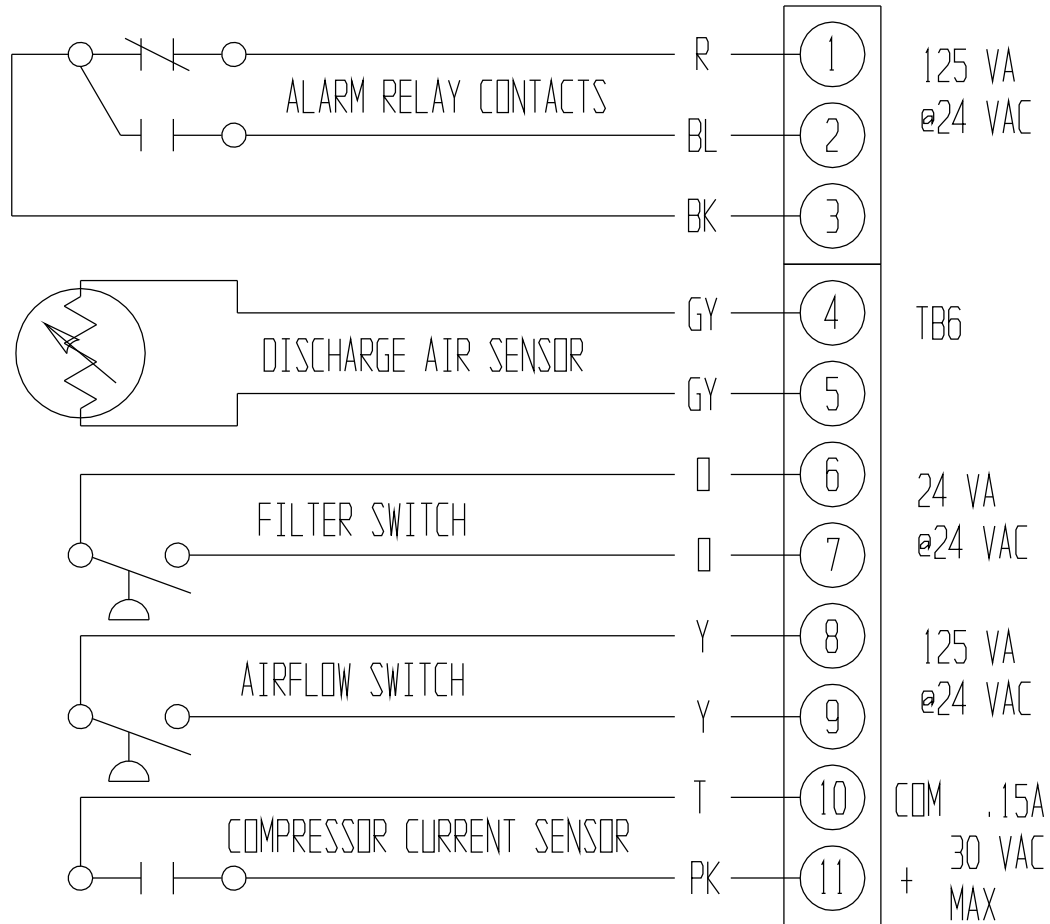

NOTE: USE CLASS ONE WIRING FOR CONNECTION TO THE LOW VOLTAGE TERMINAL BLOCK