


HEAT PUMP CONNECTION DIAGRAM

VENT OPTION WILL BE ENERGIZED DURING OCCUPIED PERIODS WHEN THE BLOWER OF THE UNIT IS ENERGIZED. IF THE THERMOSTAT IS SET TO CONTINUOUS FAN THE VENT WILL ENERGIZE CONTINUOUSLY. IF THE BLOWER IS SET TO AUTO THE VENT WILL ENERGIZE ON A CALL FOR HEAT OR COOL.

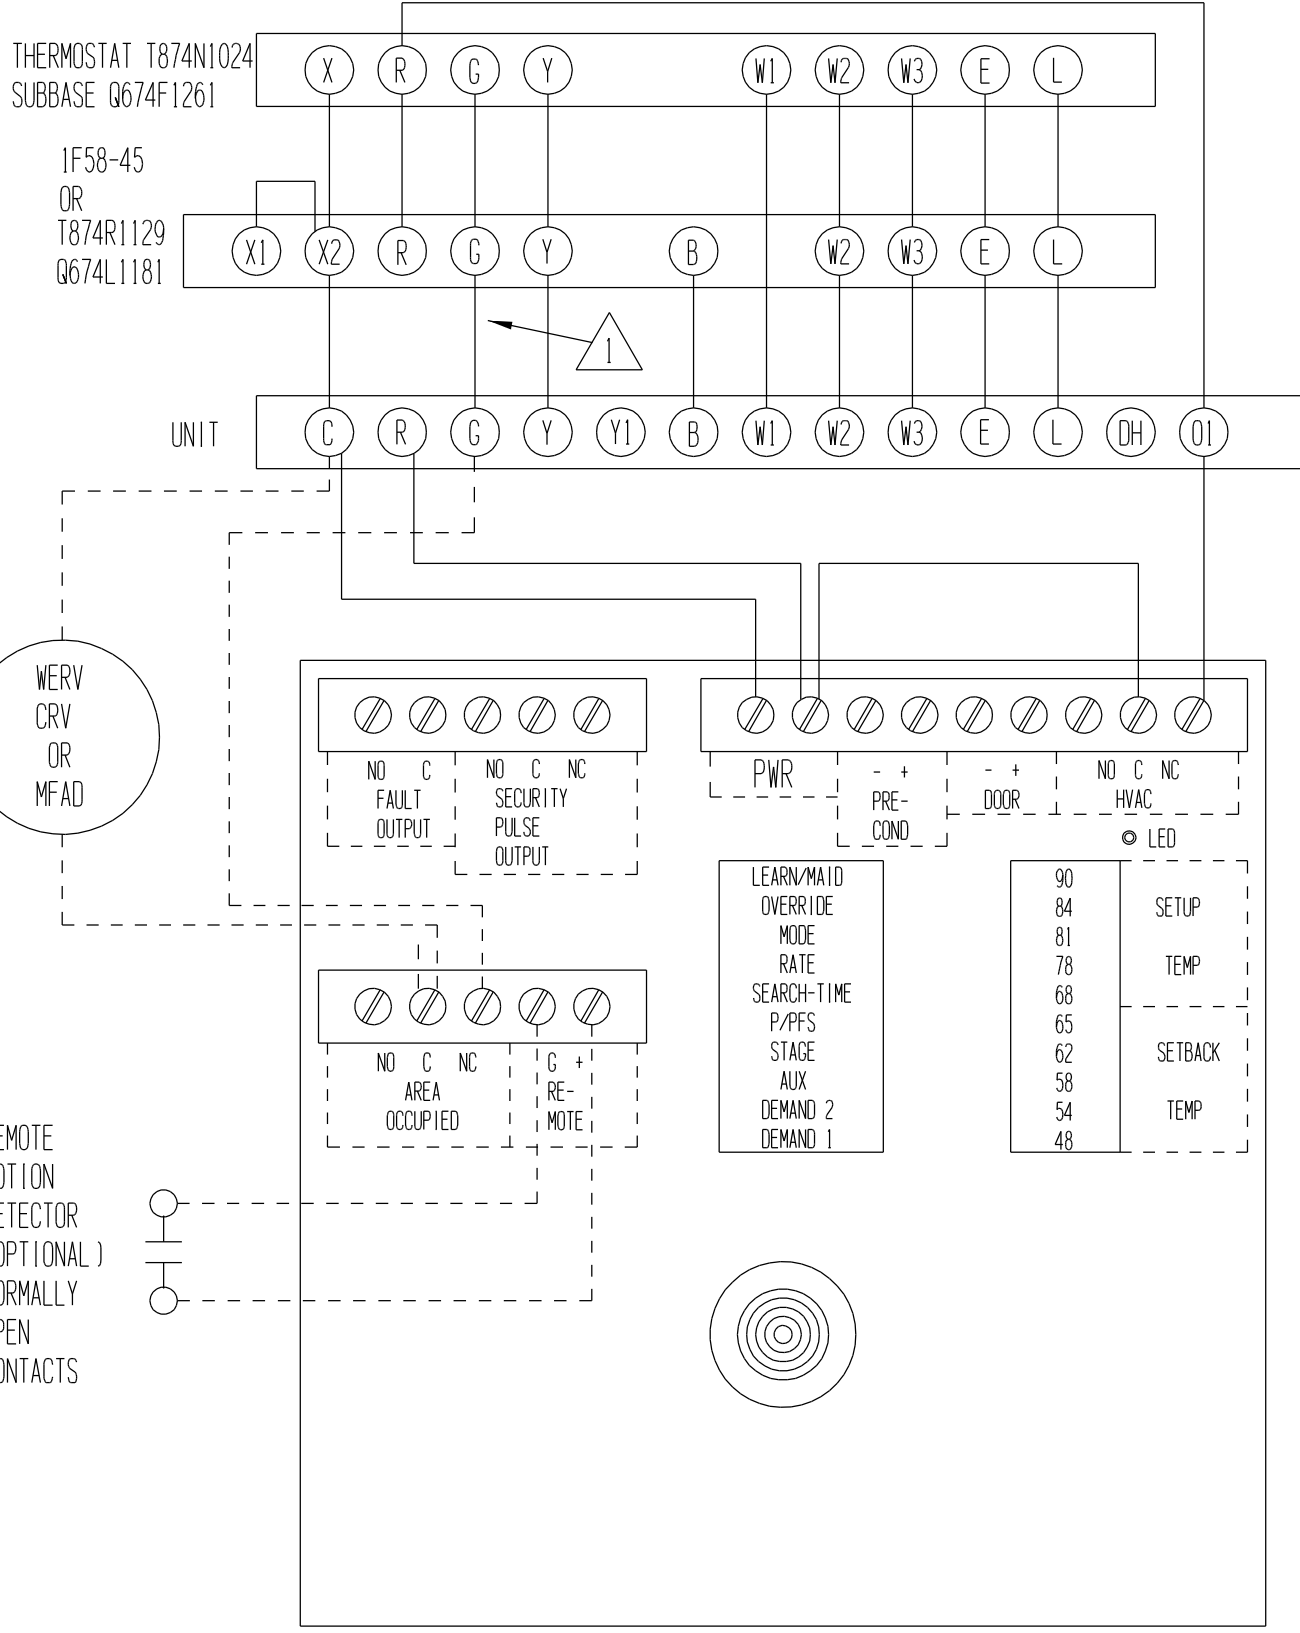

REMOVE THIS WIRE WHEN EMPLOYING OPTIONAL CONTINUOUS BLOWER RELAY.



THIS RELAY ENERGIZES THE INDOOR BLOWER RELAY WHEN THE ROOM IS OCCUPIED TO PROVIDE CONTINUOUS FRESH AIR THROUGH THE BARD VENTILATION PACKAGE.

RECOMMENDED SWITCH SETTINGS SHOWN BELOW

THIS SYSTEM MAY BE CUSTOMIZED TO INDIVIDUAL INSTALLATIONS. REFER TO CS2000 TECHNICAL REFERENCE MANUAL FOR CUSTOMIZATION OPTIONS.

FUNCTION SWITCHES

LEARN/MAID	
OVERRIDE	
MODE	
RATE	
SEARCH-TIME	
P/PFS	
STAGE	
AUX	
DEMAND 2	
DEMAND 1	

TEMPERATURE SWITCHES

	90
	84
	81
	78
	68
	65
	62
	58
	54
	48