


HEAT PUMP CONNECTION DIAGRAM

USE AUTOMATIC CHANGEOVER THERMOSTAT. THERMOSTAT WILL CYCLE ON DEMAND TO BRING ON ELECTRIC HEAT TO MAINTAIN SHELTER TEMPERATURE.

OPTIONAL CONTINUOUS BLOWER RELAY PART #8201-062 SEE NOTE

THERMOSTAT T874N1024 SUBBASE Q674F1261

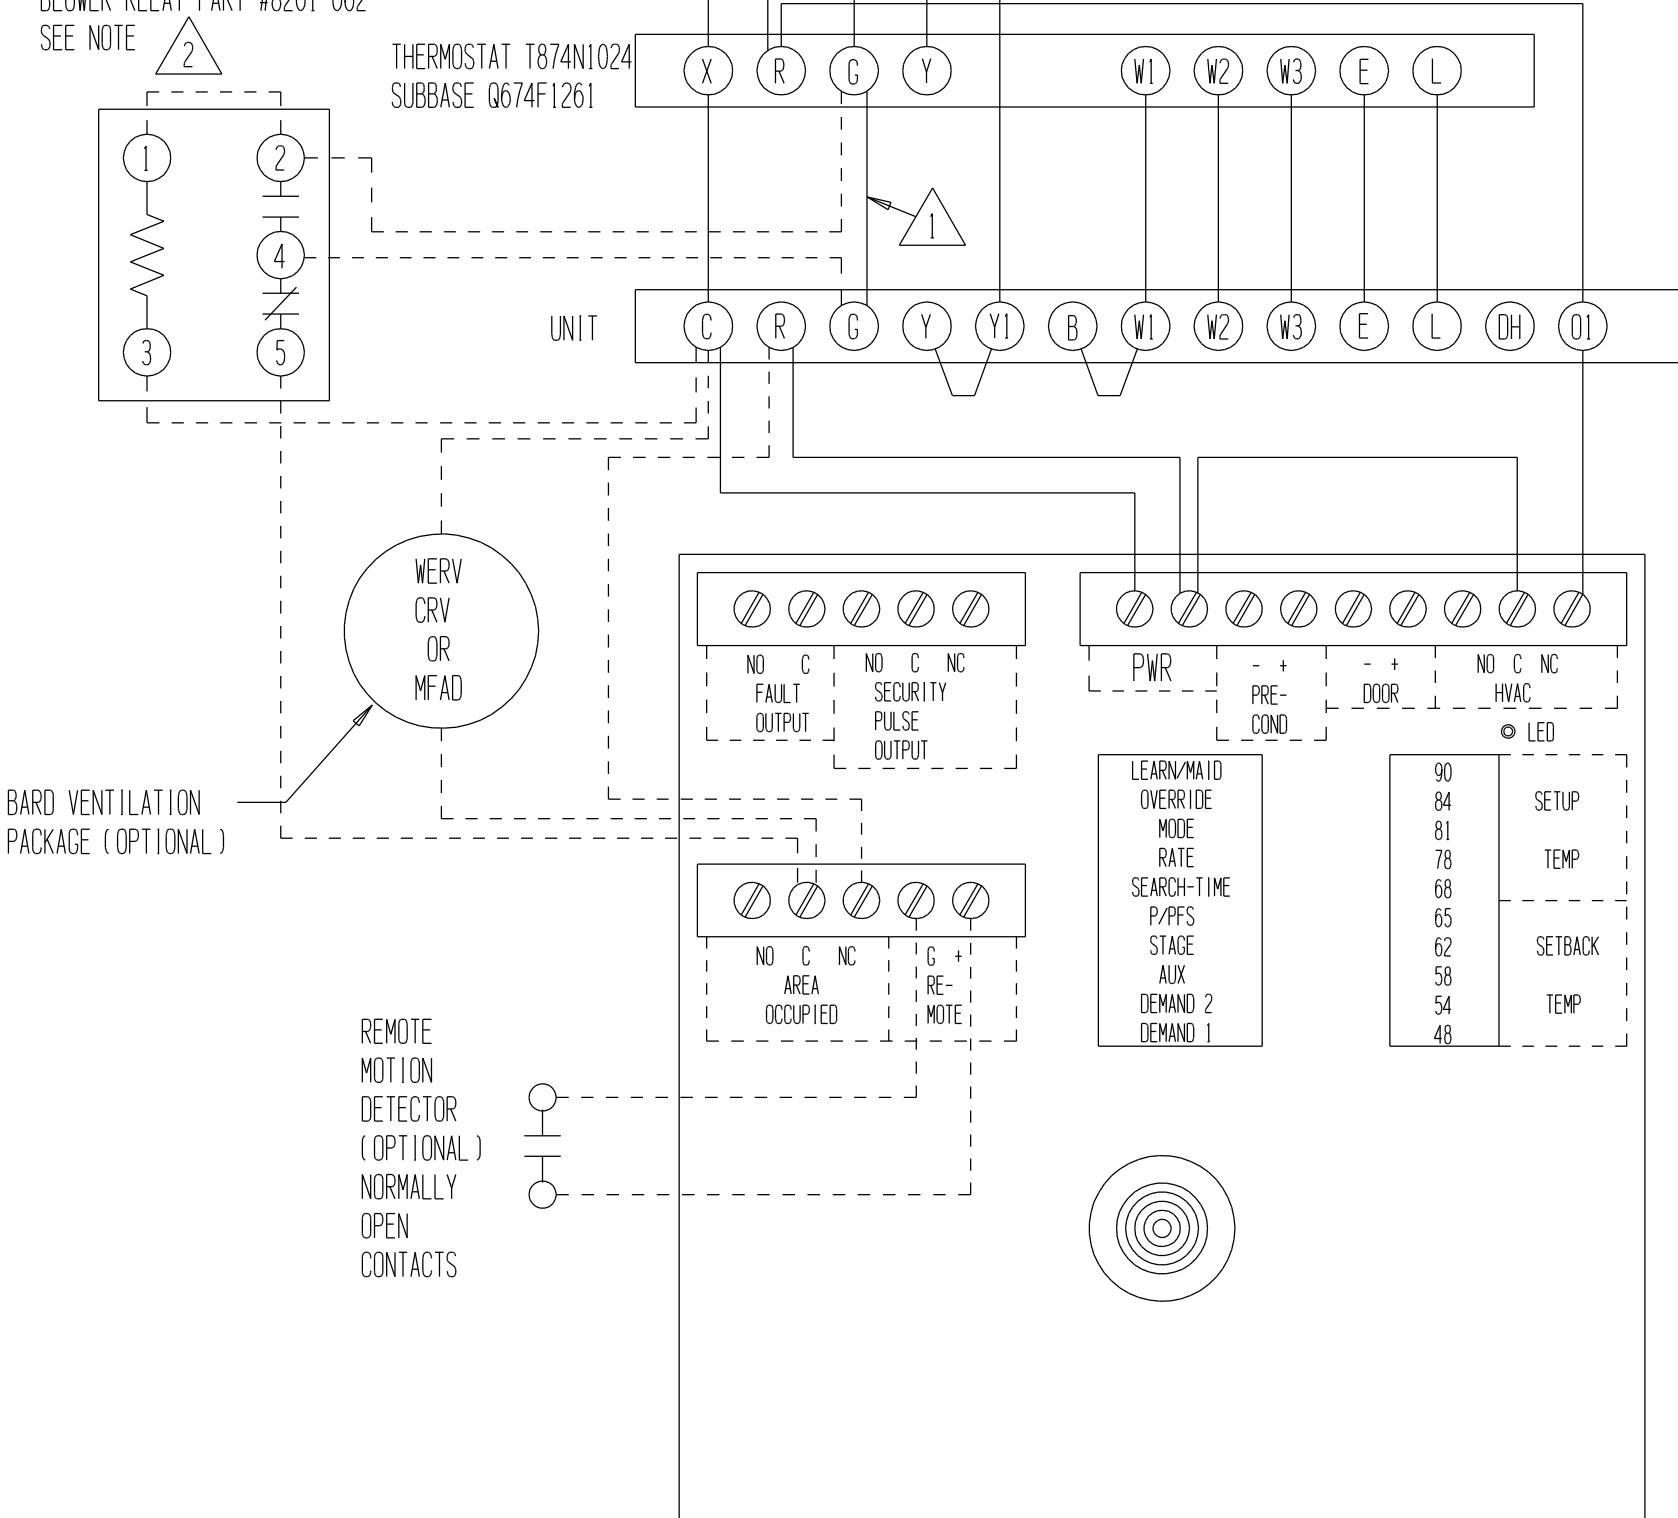

1 REMOVE THIS WIRE WHEN EMPLOYING OPTIONAL CONTINUOUS BLOWER RELAY.

2 THIS RELAY ENERGIZES THE INDOOR BLOWER RELAY WHEN THE ROOM IS OCCUPIED TO PROVIDE CONTINUOUS FRESH AIR THROUGH THE BARD VENTILATION PACKAGE.

RECOMMENDED SWITCH SETTINGS SHOWN BELOW

THIS SYSTEM MAY BE CUSTOMIZED TO INDIVIDUAL INSTALLATIONS. REFER TO CS2000 TECHNICAL REFERENCE MANUAL FOR CUSTOMIZATION OPTIONS.

FUNCTION SWITCHES

LEARN/MAID	<input type="checkbox"/>
OVERRIDE	<input type="checkbox"/>
MODE	<input type="checkbox"/>
RATE	<input type="checkbox"/>
SEARCH-TIME	<input type="checkbox"/>
P/PFS	<input type="checkbox"/>
STAGE	<input type="checkbox"/>
AUX	<input type="checkbox"/>
DEMAND 2	<input type="checkbox"/>
DEMAND 1	<input type="checkbox"/>

TEMPERATURE SWITCHES

<input type="checkbox"/>	90
<input type="checkbox"/>	84
<input type="checkbox"/>	81
<input type="checkbox"/>	78
<input type="checkbox"/>	68
<input type="checkbox"/>	65
<input type="checkbox"/>	62
<input type="checkbox"/>	58
<input type="checkbox"/>	54
<input type="checkbox"/>	48