



- 1 REMOVE JUMPER FOR COMP DISABLE FEATURE
  - 2 REMOVE JUMPER WHEN CONNECTING GEN CONTACT
  - 3 REMOVE JUMPER WHEN CONNECTING FIRE SHUTDOWN CONTACT
- - - - - FIELD WIRING (OPTIONAL)  
 ————— FACTORY WIRING