



- 1 REMOVE JUMPER WHEN CONNECTING GEN CONTACT
- 2 REMOVE JUMPERS FOR COMPRESSOR DISABLE FEATURE
- 3 REMOVE JUMPER WHEN CONNECTING FIRE SHUT DOWN CONTACT
- 4 REMOVE JUMPERS AND WIRES FROM ADV TERMINALS TO DISABLE UNIT SWAP FEATURE