


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

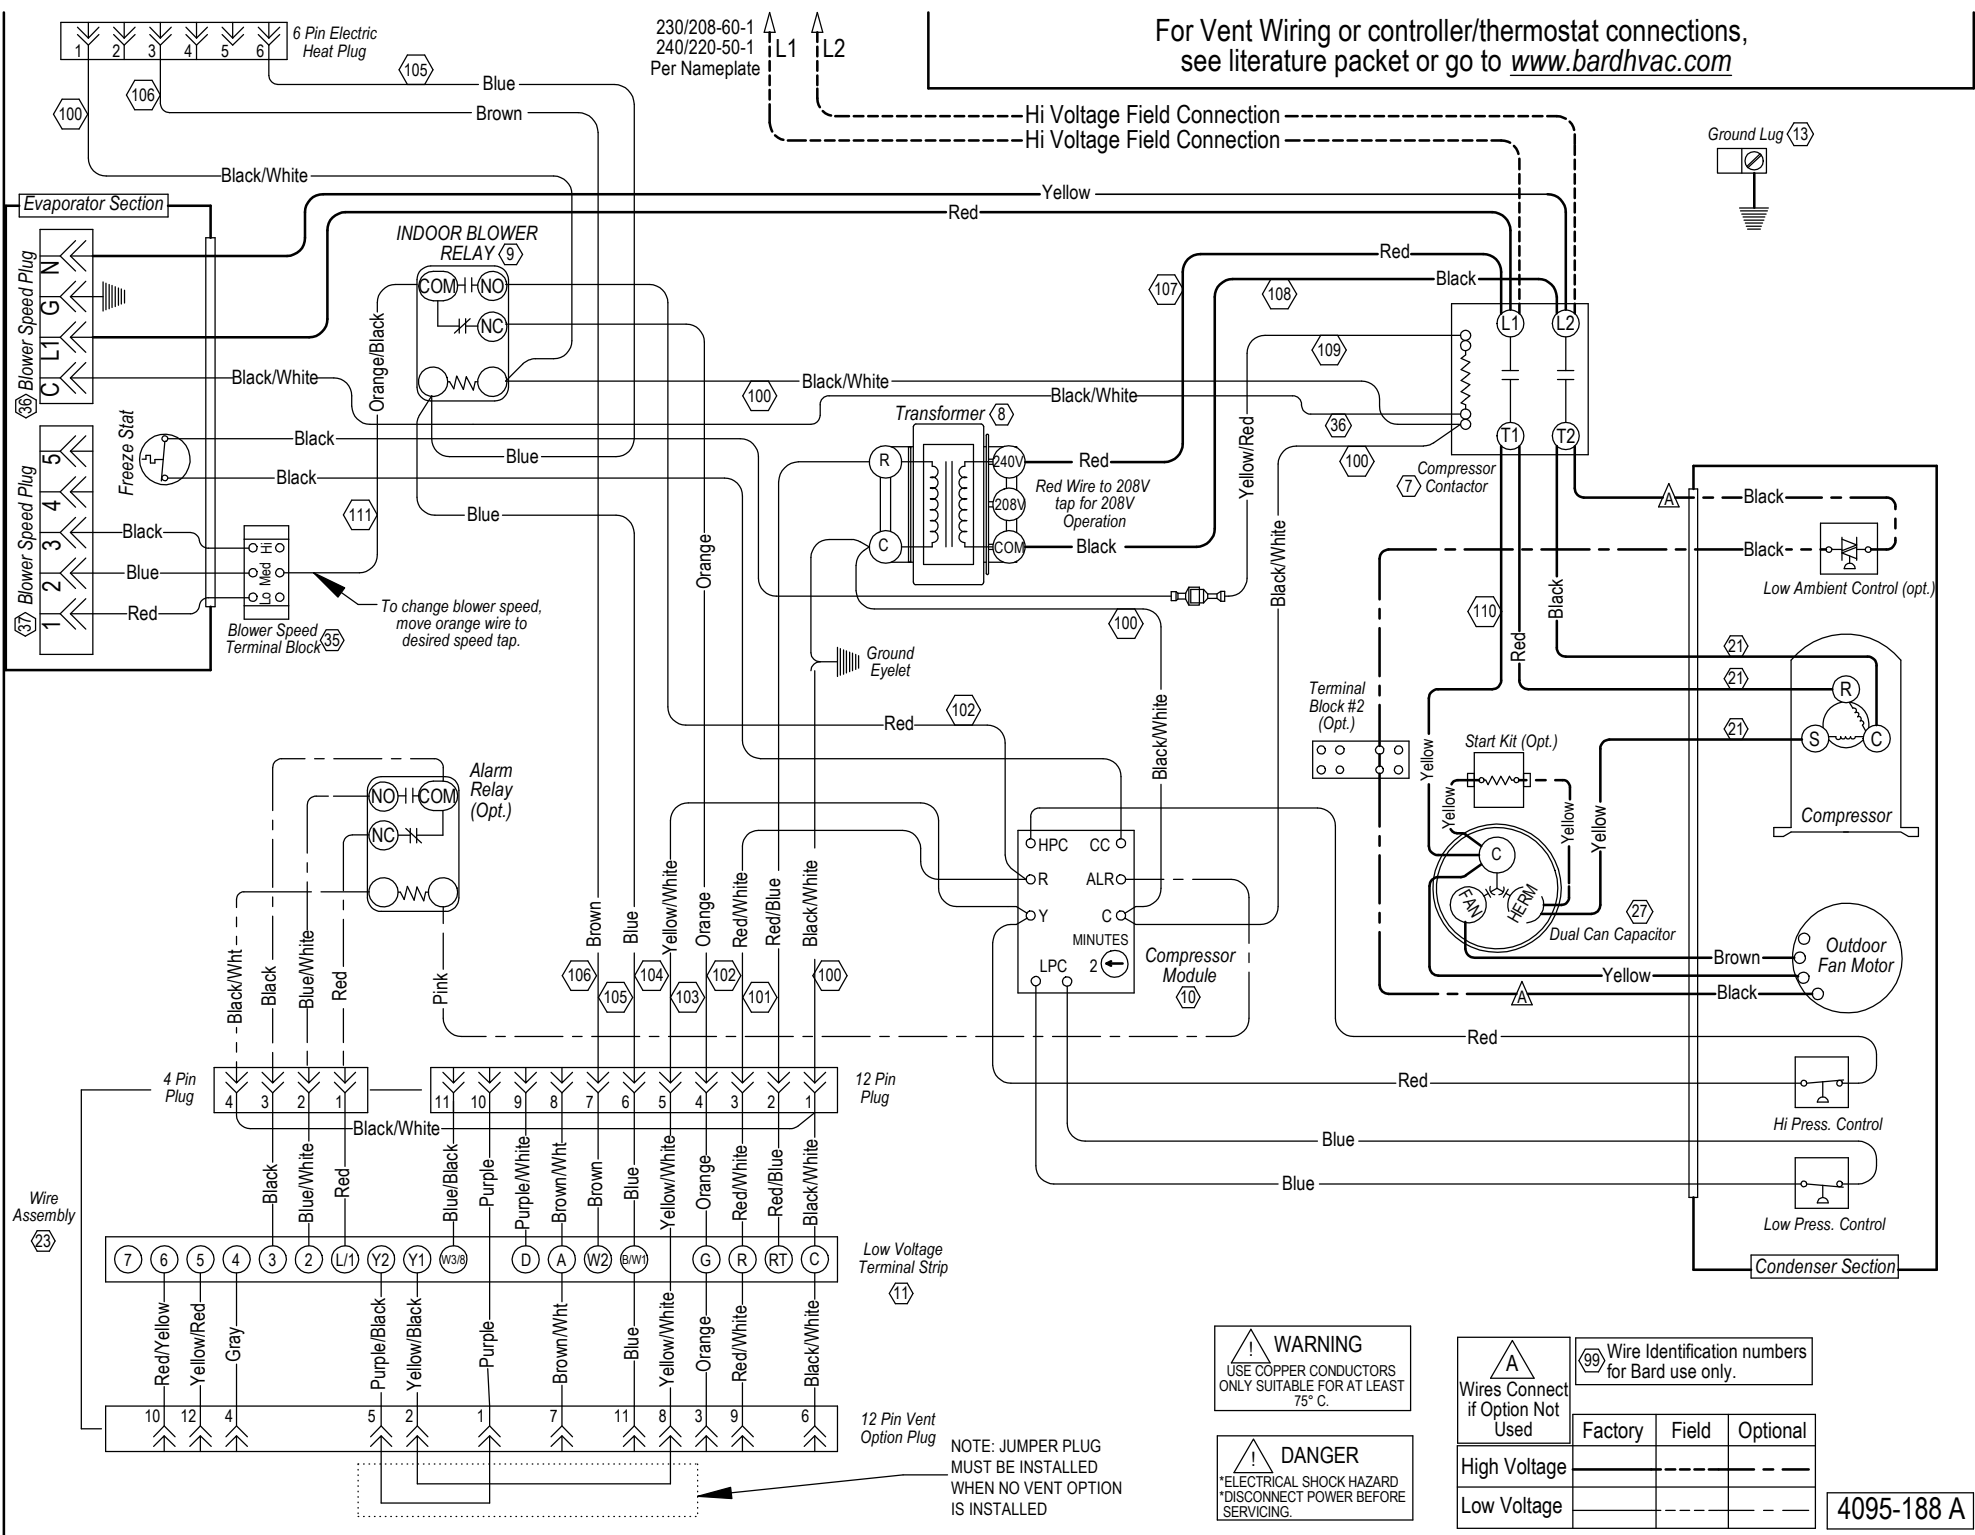

230/208-60-1
240/220-50-1
Per Nameplate

Ground Lug (13)

---Hi Voltage Field Connection---
---Hi Voltage Field Connection---

To change blower speed, move orange wire to desired speed tap.

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.

Wires Connect if Option Not Used	Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

4095-188 A