


For Unit Ladder Diagram, Vent Wiring, or controller/thermostat connections, see installation instructions or go to [www.bardhvac.com](http://www.bardhvac.com)

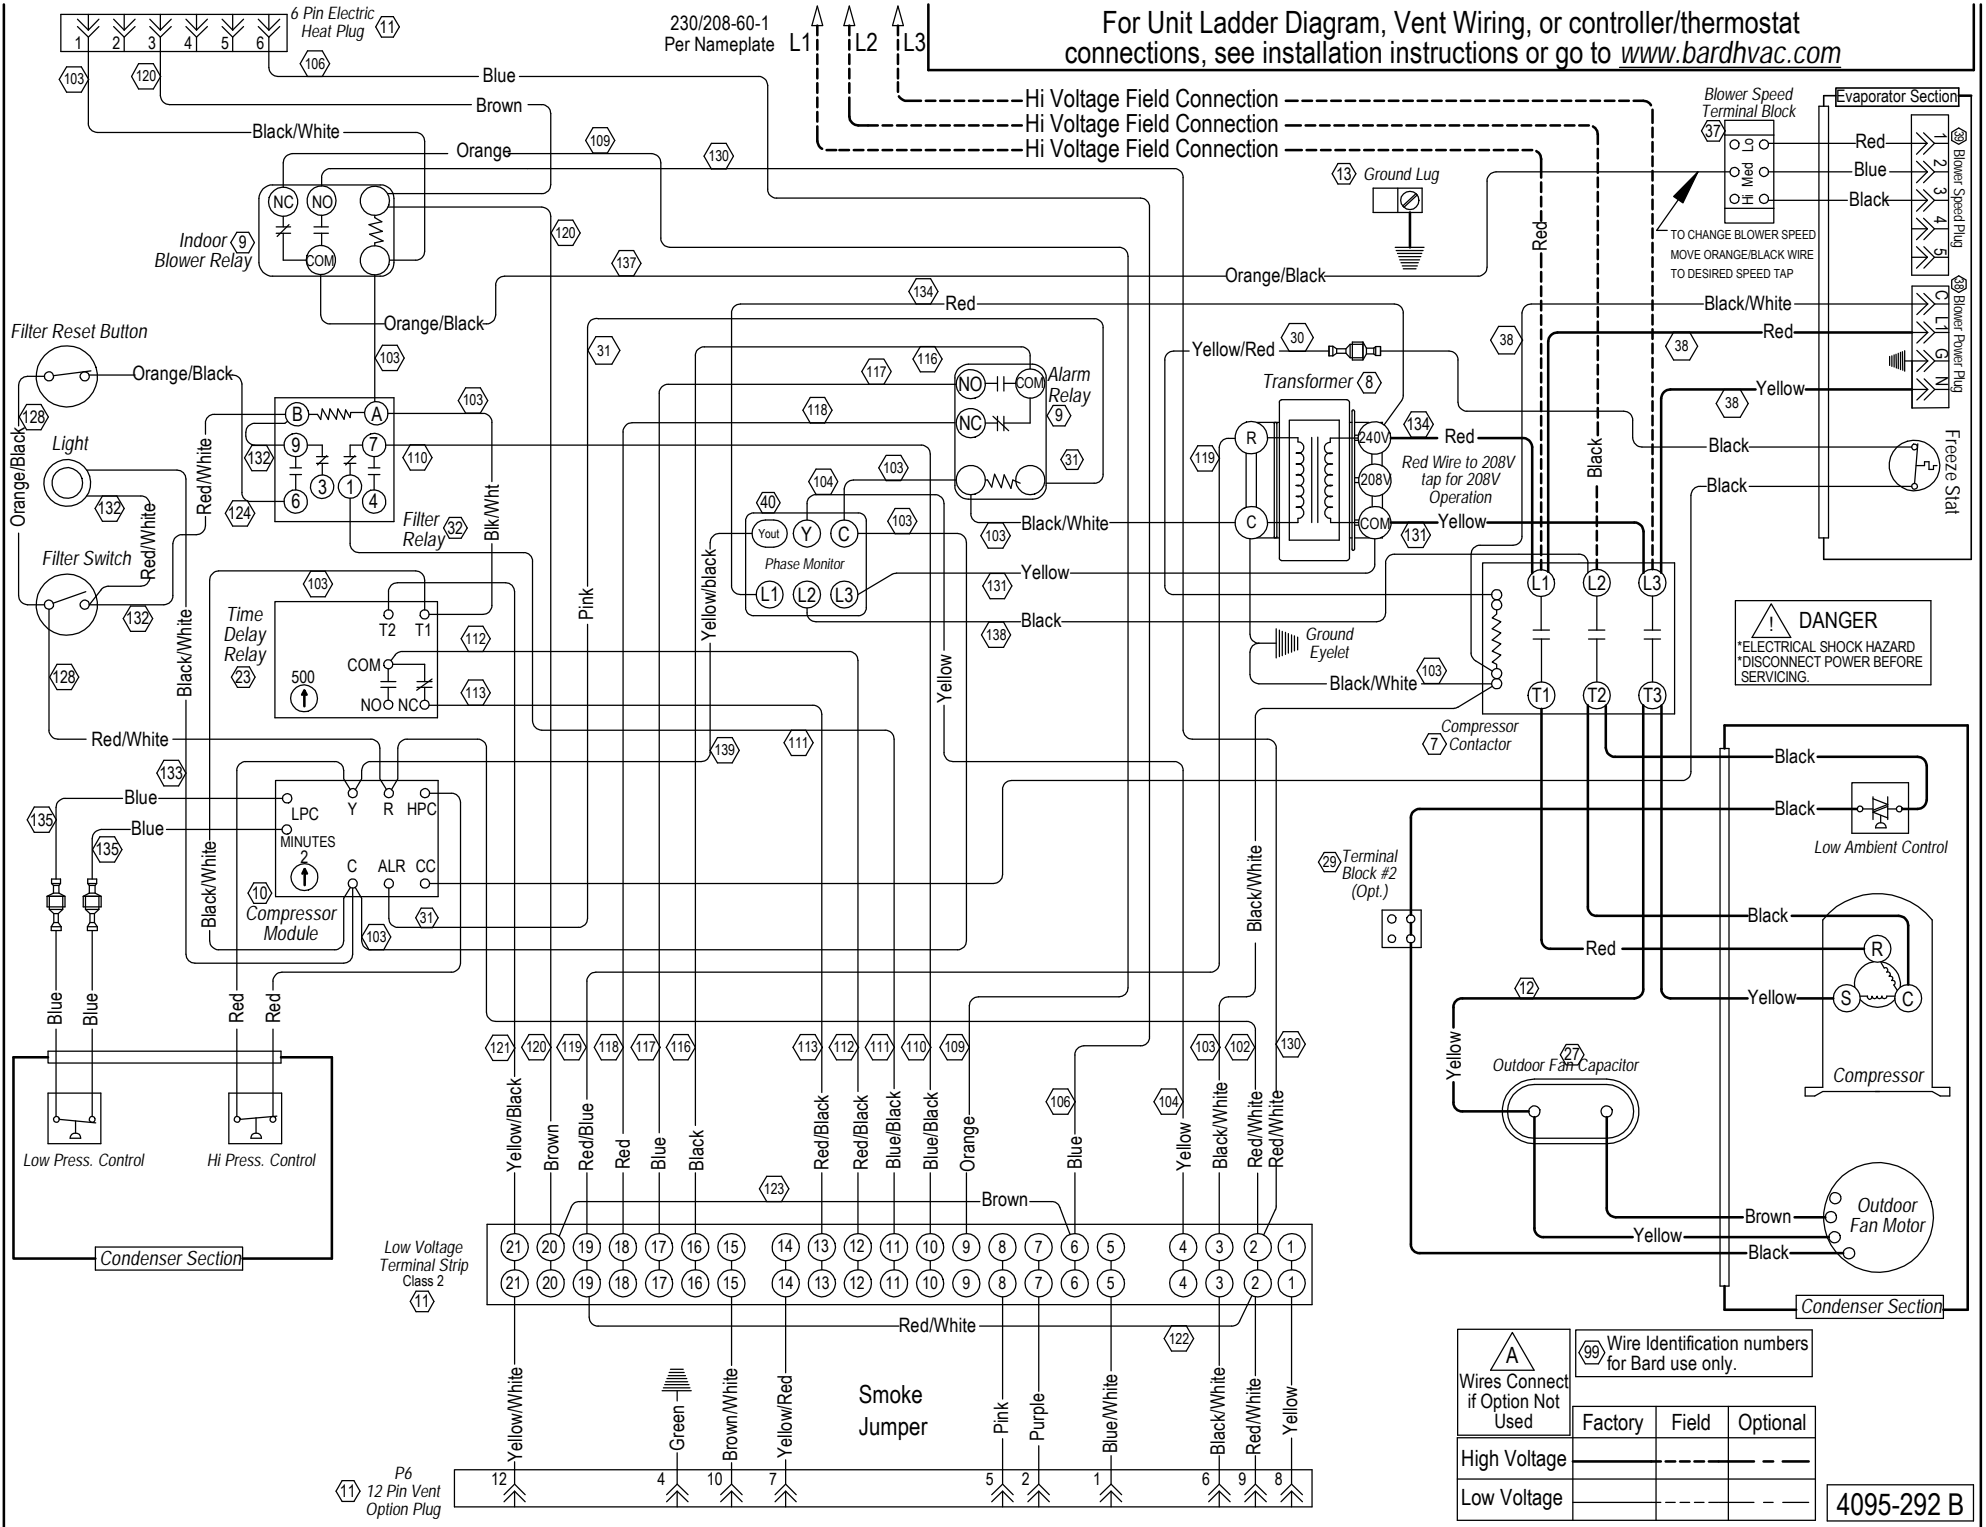

**⚠ DANGER**  
 \*ELECTRICAL SHOCK HAZARD  
 \*DISCONNECT POWER BEFORE SERVICING.

Wires Connect if Option Not Used	(99) Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

4095-292 B