


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

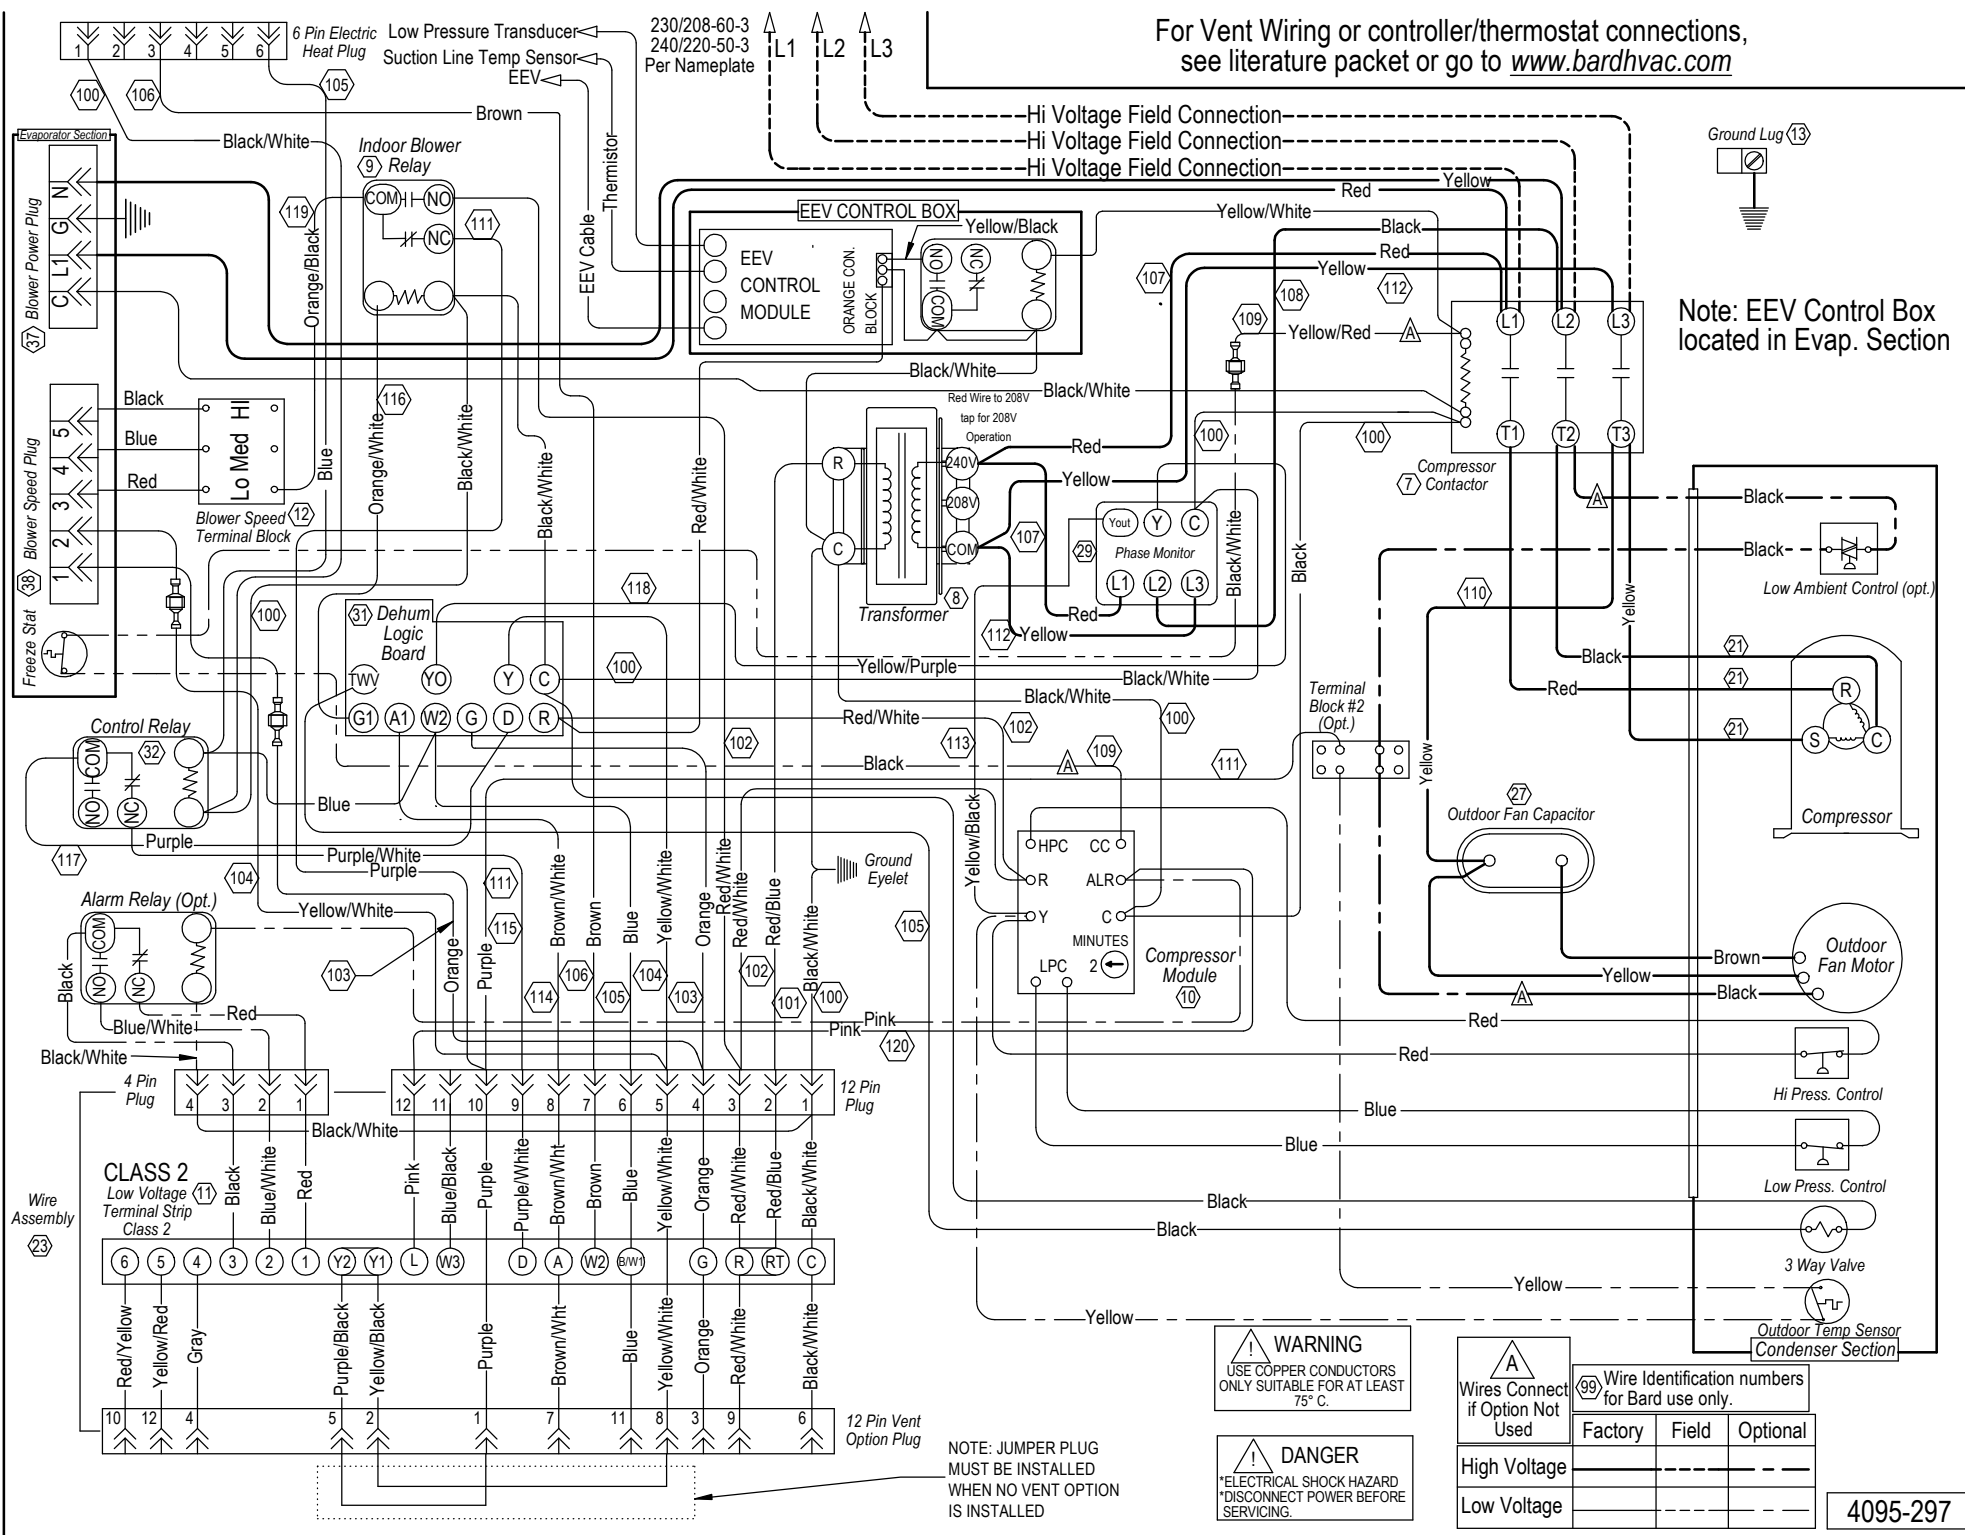

Note: EEV Control Box located in Evap. Section

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE
SERVICING.

A
Wires Connect
if Option Not
Used

| | | | |
|--------------|--|--|--|
| High Voltage | | | |
| Low Voltage | | | |

99 Wire Identification numbers for Bard use only.

| | Factory | Field | Optional |
|--------------|---------|-------|----------|
| High Voltage | | | |
| Low Voltage | | | |

NOTE: JUMPER PLUG
MUST BE INSTALLED
WHEN NO VENT OPTION
IS INSTALLED