


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

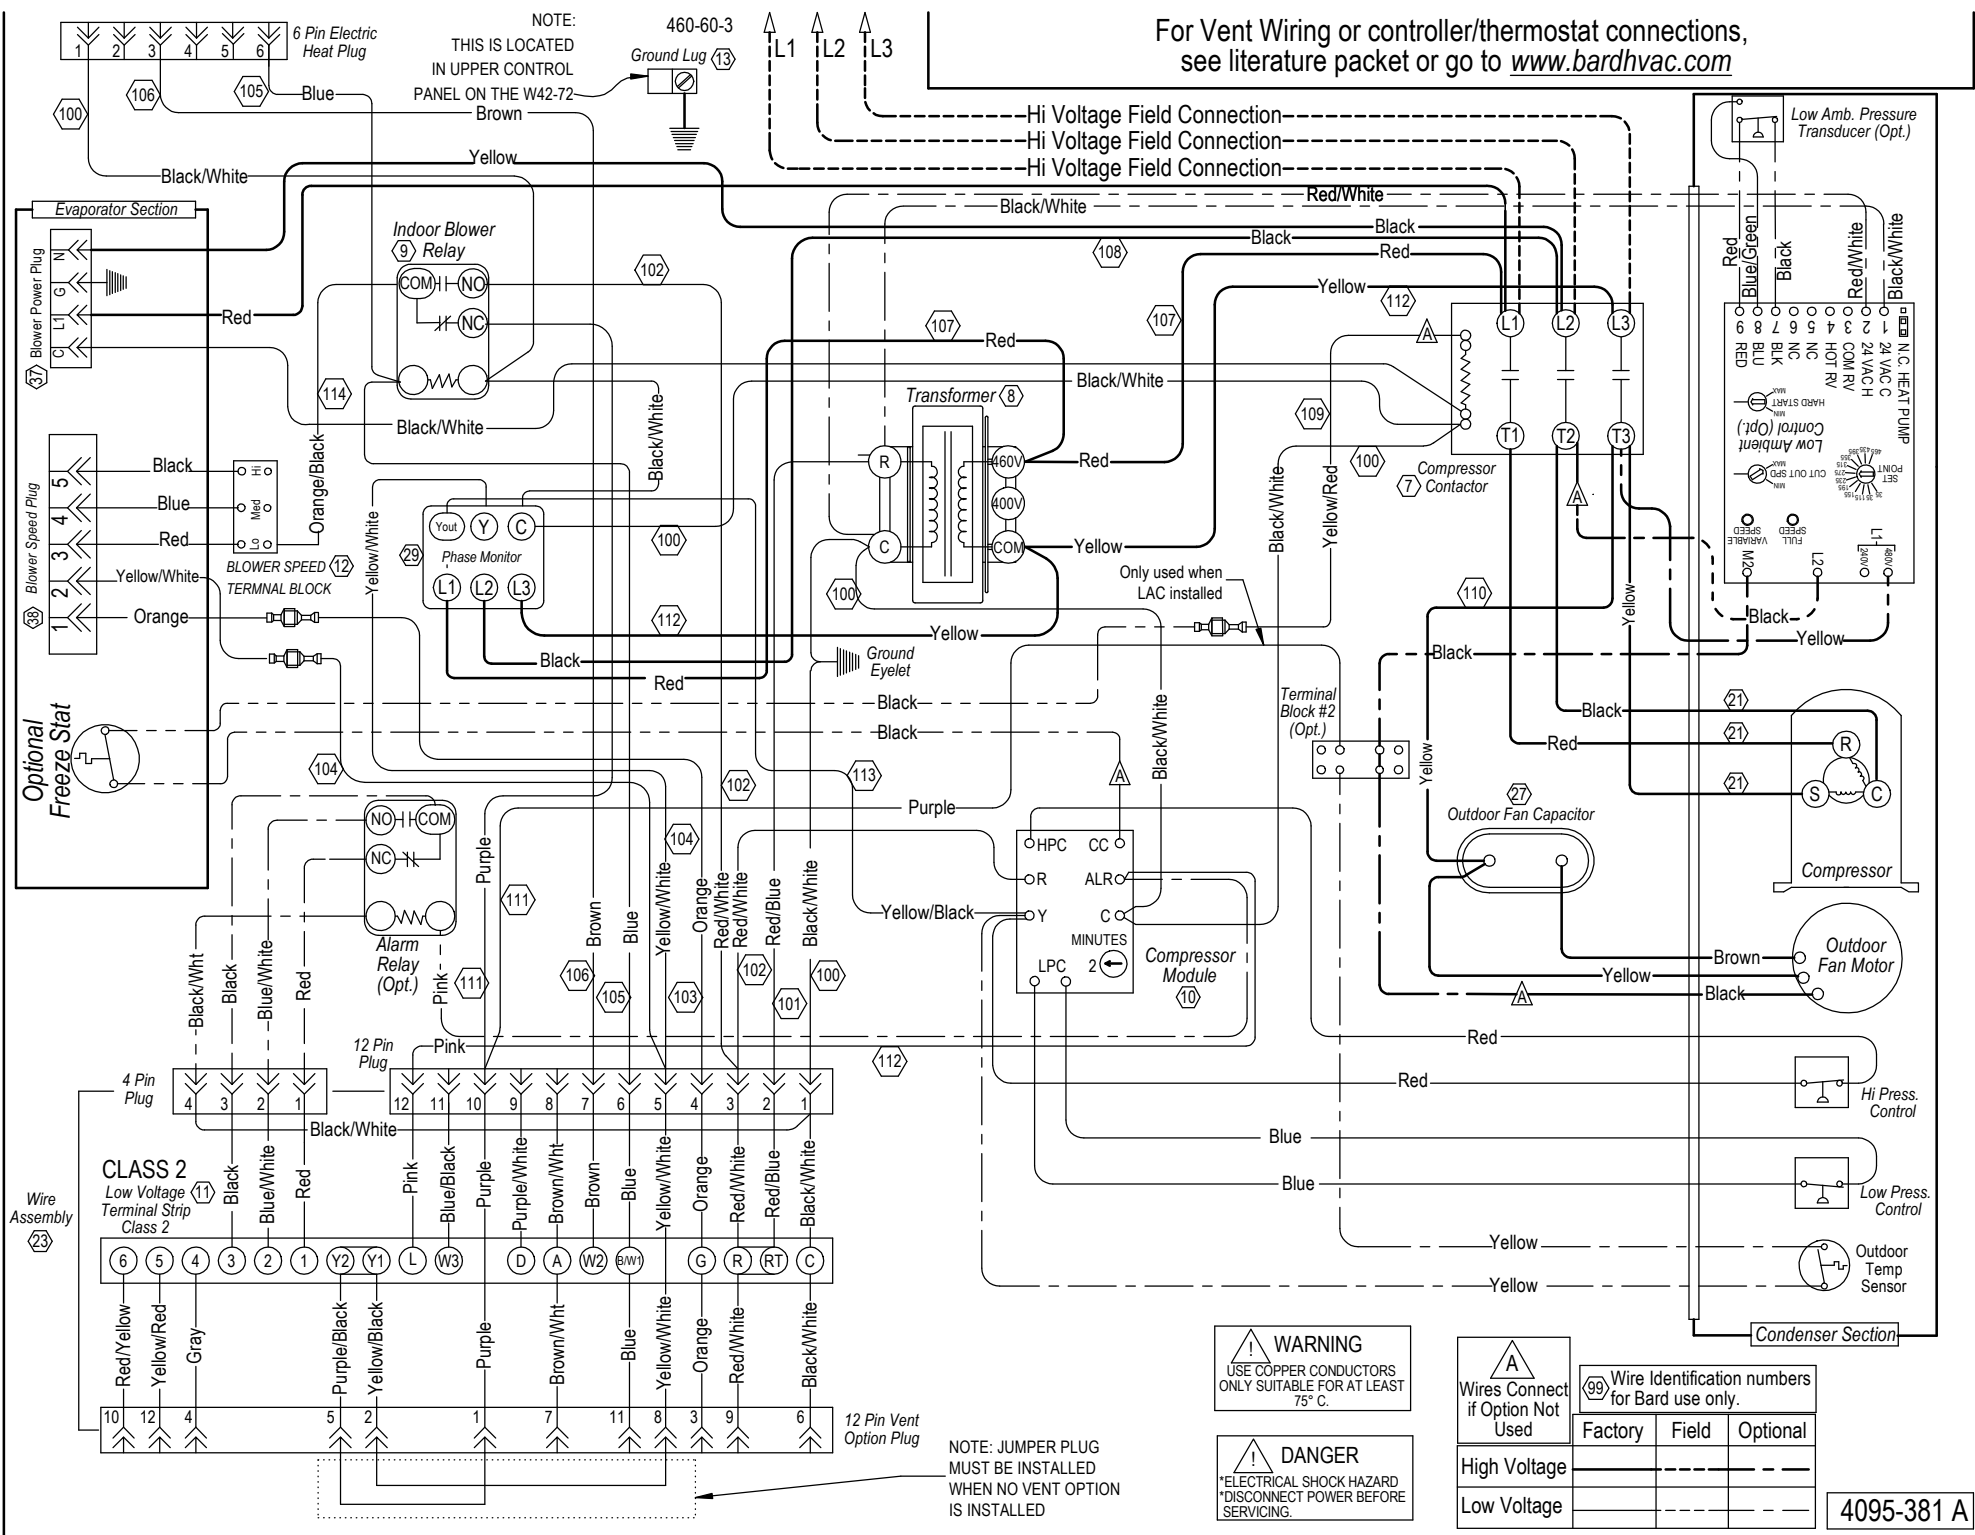

 
 
 
 






 

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL ON THE W42-72

460-60-3
Ground Lug (13)

L1 L2 L3


Hi Voltage Field Connection
Hi Voltage Field Connection
Hi Voltage Field Connection

Low Amb. Pressure Transducer (Opt.)

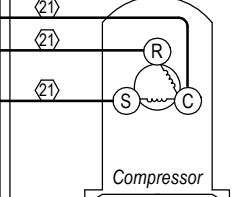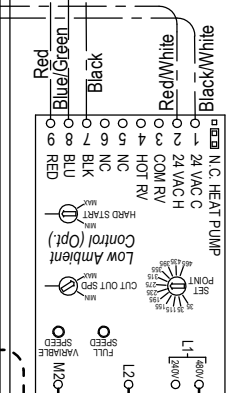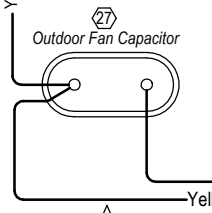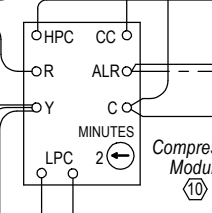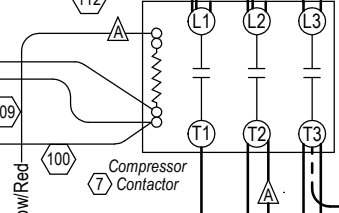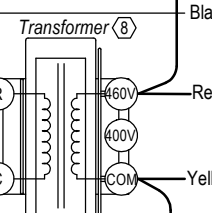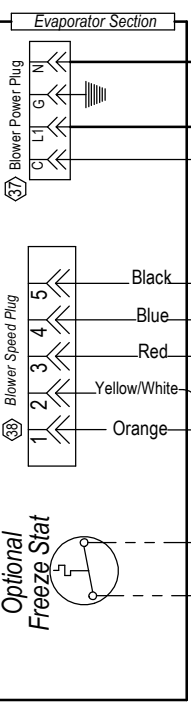

Condenser Section

CLASS 2 Low Voltage Terminal Strip Class 2

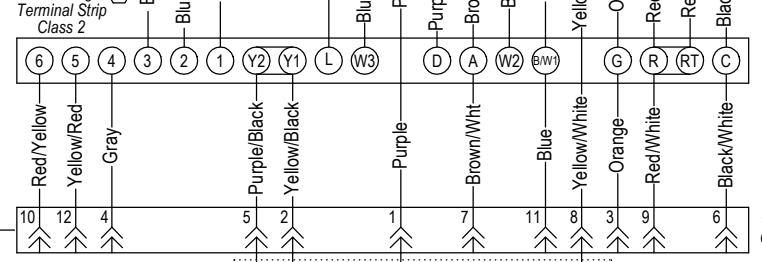

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.

A
Wires Connect if Option Not Used

High Voltage			
Low Voltage			

Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4095-381 A