


For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

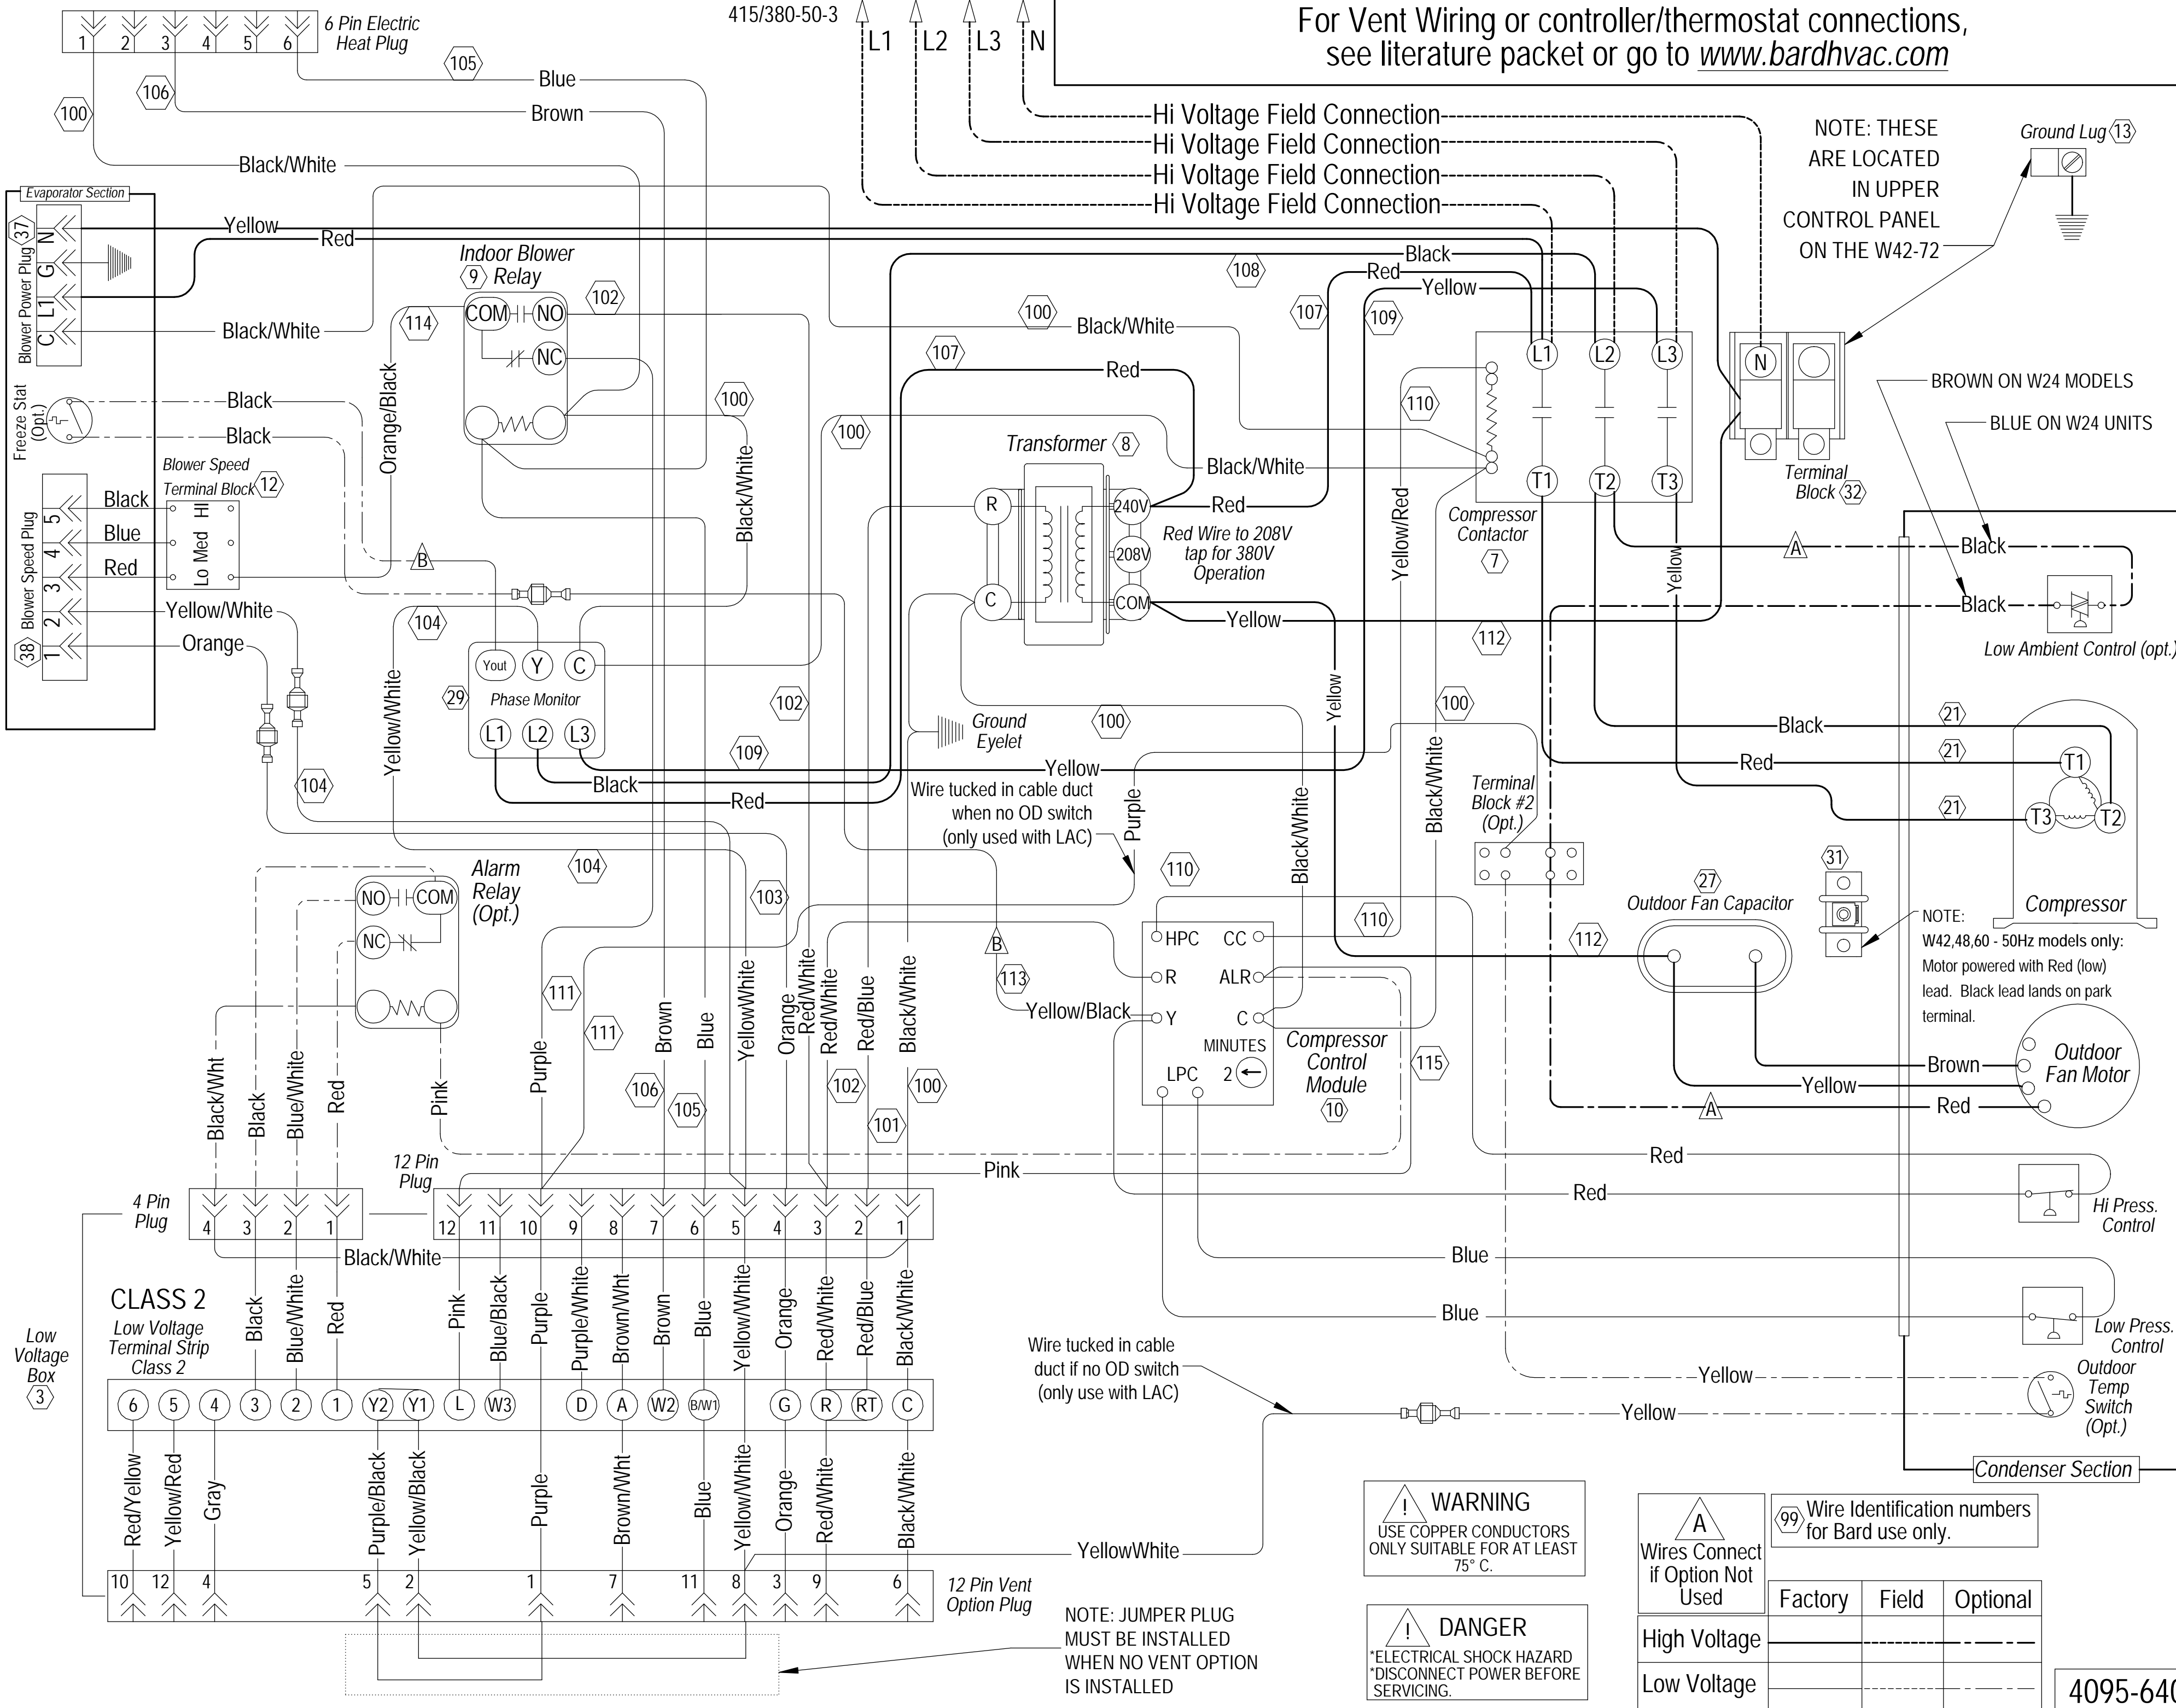

NOTE: THESE ARE LOCATED IN UPPER CONTROL PANEL ON THE W42-72

BROWN ON W24 MODELS  
BLUE ON W24 UNITS

NOTE: W42,48,60 - 50Hz models only: Motor powered with Red (low) lead. Black lead lands on park terminal.

**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**  
\*ELECTRICAL SHOCK HAZARD  
\*DISCONNECT POWER BEFORE SERVICING.

**99** Wire Identification numbers for Bard use only.

	Factory	Field	Optional
Wires Connect if Option Not Used			
High Voltage			
Low Voltage			

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED