



For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

**WARNING**  
USE COPPER CONDUCTORS  
ONLY SUITABLE FOR AT LEAST  
75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD  
DISCONNECT POWER BEFORE  
SERVICING.

High Voltage	Factory	Field	Optional
Low Voltage			

Wire Identification numbers for Bard (99) use only.  
**4096-169**

**A → A**  
Same Letter Designated  
Wires Connect if  
Option Not Used

**NOTE:** JUMPER PLUG MUST BE INSTALLED  
WHEN NO VENT OPTION IS INSTALLED