



USE COPPER CONDUCTORS ONLY
SUITABLE FOR AT LEAST 75° C

COMPONENT CODE			
CB1	CIRCUIT BREAKER #1	HC2	HEATER CONTACTOR #2
CB2	CIRCUIT BREAKER #2	HPC	HIGH PRESSURE CONTROL
CC	COMPRESSOR CONTACTOR	IBC	INDOOR BLOWER CAPACITOR
CCH	COMPRESSOR CRANKCASE HEATER	IBM	INDOOR BLOWER MOTOR
COMP	COMPRESSOR	IBR	INDOOR BLOWER RELAY
DCC	DUAL CAN CAPACITOR	LAB	LOW AMBIENT BYPASS CONTROL
DFC	DEFROST CONTROL	LAC	LOW AMBIENT CONTROL
EMR	EMERGENCY HEAT RELAY	LPB	LOW PRESSURE BYPASS
ERV	ENERGY RECOVERY VENTILATOR	LPC	LOW PRESSURE CONTROL
FT	FREEZE T-STAT	LS	LIMIT SWITCH
GND	EQUIPMENT GROUND	OFM	OUTDOOR FAN MOTOR
H1	HEAT STRIP #1	PL1	PLUG #1
H2	HEAT STRIP #2	RAT	RETURN AIR THERMOSTAT
HC1	HEATER CONTACTOR #1	RLB	RELAY LOGIC BOARD
		RV	REV. VALVE SOLENOID
		SK	START KIT
		T	TRANSFORMER
		TB	TERMINAL BLOCK
		TBL	LOW VOLTAGE TERMINAL BLOCK
		TCD	THERMAL CUTOFF
		TWV	THREE WAY VALVE

A, B LABELED WIRES CONNECT IF NO OPTIONS USED.
 A MOVE RED WIRE TO 208V TAP FOR 208V OPERATION
 A RED (LOW) BLACK (HIGH) WHERE APPLICABLE

		COLOR CODE															
FACTORY STD.	FIELD	OPTIONAL	BK	BR	R	O	Y	G	BL	W	V	(PR)	GY	(S)	T	PK	L
HIGH VOLTAGE	—————	- - - - -	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————
LOW VOLTAGE	—————	- - - - -	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————
ACCESSORY	—————	- - - - -	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————	—————

BARD MFG. CO.

4096-231