


For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

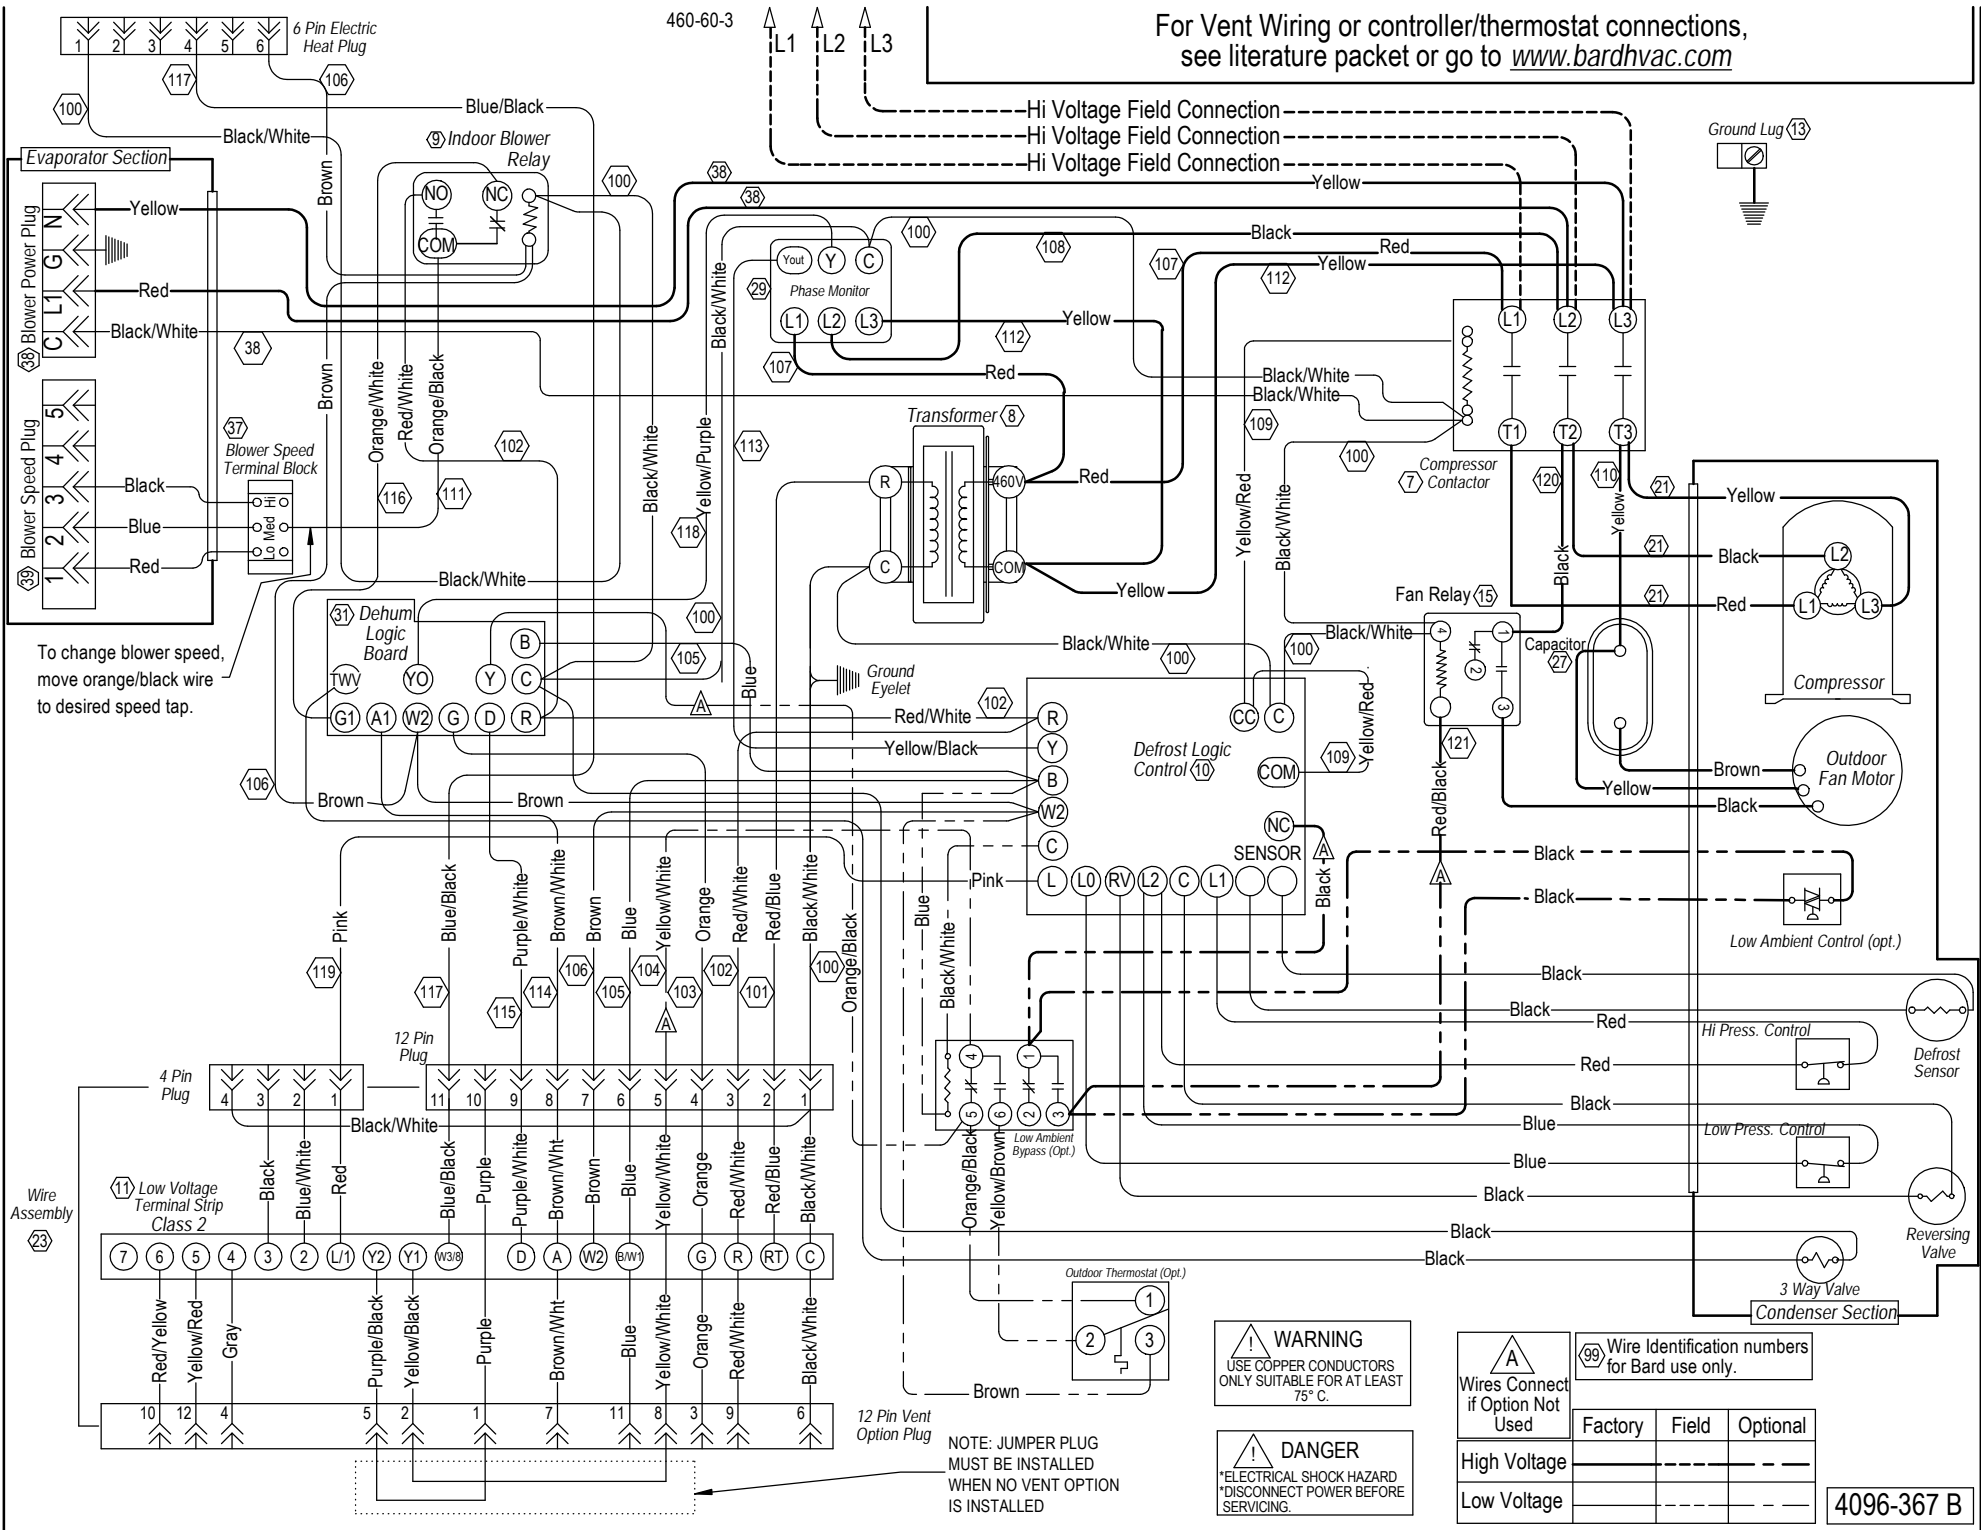

To change blower speed, move orange/black wire to desired speed tap.

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.

|   |  |       |          |
|---|--|-------|----------|
| <p><b>A</b></p> <p>Wires Connect if Option Not Used</p> | <p>99 Wire Identification numbers for Bard use only.</p> |       |          |
|   | Factory  | Field | Optional |
| High Voltage  |  |       |          |
| Low Voltage   |  |       |          |

4096-367 B