



For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

460-60-3
Per Nameplate

Ground Lug (13)

Evaporator Section

3-Way Valve

Compressor

Outdoor Fan Motor

Low Ambient Control (opt.)

Hi Press. Control

Low Press. Control

Reversing Valve

Outdoor Temp Switch (Opt.)

Condenser Section

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE
SERVICING.

	Factory	Field	Optional
High Voltage			
Low Voltage			

Wire Identification numbers for Bard (99) use only.
4096-375 B

A → A
Same Letter Designated
Wires Connect if
Option Not Used

NOTE: JUMPER PLUG MUST BE INSTALLED
WHEN NO VENT OPTION IS INSTALLED

Both the purple and yellow
wires are tucked in cable
duct. Connect two wires
together when using Balanced
Climate mode. Y1-Y2 jumper
on LVTS must first be removed