



For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

Remove wire for (-)10% Airflow Full & Part Loads

Same Letter Designated Wires Connect if Option Not Used  
 "A" No Control Option  
 "B" & "C" Only LAC Option

**WARNING**  
 USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.  
**DANGER**  
 ELECTRICAL SHOCK HAZARD  
 DISCONNECT POWER BEFORE SERVICING.

|              |         |       |          |
|--------------|---------|-------|----------|
| High Voltage | Factory | Field | Optional |
| Low Voltage  |         |       |          |

Wire Identification numbers for Bard (99) use only.  
**4096-386**