 
 
 
 
 

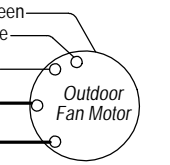


For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

Ground Lug (11)

R Vent option only

- 1
- 2
- 3

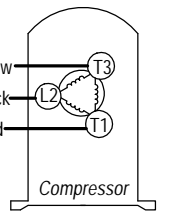

Condenser Section

**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75°C.

**DANGER**  
ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.

	Factory	Field	Optional
High Voltage			
Low Voltage			

Wire Identification numbers for Bard (99) use only.

4100-226 E

**A** → **A**  
Same Letter Designated Wires Connect if Option Not Used  
"A" & "C" No Control Option  
"B" Only Freeze Stat & No ODT

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED