



**230/208-60-1 VOLT PACKAGE  
UNIT DIAGRAM**

FOR ANTIFREEZE LOOP APPLICATIONS, CONNECT THE LOW PRESSURE SWITCH WITH YELLOW LEADS IN PLACE OF THE LOW PRESSURE SWITCH WITH BLUE LEADS. ONE LEAD WILL CONNECT TO BROWN LEAD FROM THE FLOW SWITCH, AND THE OTHER WILL CONNECT TO THE YELLOW LEAD COMING FROM THE LPC TERMINAL OF THE COMPRESSOR CONTROL MODULE.

- ▲ H.P.S=Green fault light illuminated when fault light indicated
- ▲ L.P.S=Orange fault light illuminated when fault light indicated
- ▲ F.S=Red fault light illuminated when fault light indicated
- ▲ COND=Yellow fault light illuminated when fault light indicated
- ▲ Status=Green status LED will blink in normal operation
- ▲ FOR 208 VOLT OPERATION, MOVE THIS RED WIRE TO 208 VOLT TRANSFORMER TAP

CAPACITOR CHART	
MODEL	CAPACITOR
QW2S	35/370
QW3S	40/370
QW4S	30/370
QW5S	40/440

**! DANGER**  
ELECTRICAL SHOCK HAZARD  
DISCONNECT POWER BEFORE  
SERVICING.

99 Wire Identification numbers  
for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

**! WARNING**  
USE COPPER CONDUCTORS  
ONLY SUITABLE FOR AT LEAST  
75° C.