



460 VOLT PACKAGE UNIT DIAGRAM

FOR ANTIFREEZE LOOP APPLICATIONS, CONNECT THE LOW PRESSURE SWITCH WITH YELLOW LEADS IN PLACE OF THE LOW PRESSURE SWITCH WITH BLUE LEADS. ONE LEAD WILL CONNECT TO THE BROWN LEAD FROM THE FLOW SWITCH, AND THE OTHER WILL CONNECT TO THE YELLOW LEAD COMING FROM THE LPC TERMINAL OF THE COMPRESSOR CONTROL MODULE.

- ▲ H.P.S=Green fault light illuminated when fault light indicated
- ▲ L.P.S=Orange fault light illuminated when fault light indicated
- ▲ F.S=Red fault light illuminated when fault light indicated
- ▲ COND=Yellow fault light illuminated when fault light indicated
- ▲ Status=Green status LED will blink in normal operation

MODEL	W / ERV	NO ERV
QW2S	5	3.2
QW3S	5	3.2
QW4S	7	3.2
QW5S	7	5

STEPDOWN TRANSFORMER CLASS CC FUSE

99 Wire Identification numbers for Bard use only.

⚠ DANGER ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.	⚠ WARNING USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
--	--

	Factory	Field	Optional
High Voltage			
Low Voltage			

4113-308 A