


WIRES TO VENTILATION MODULE

WIRES TO CIRCUIT BREAKER/HEATER MODULE

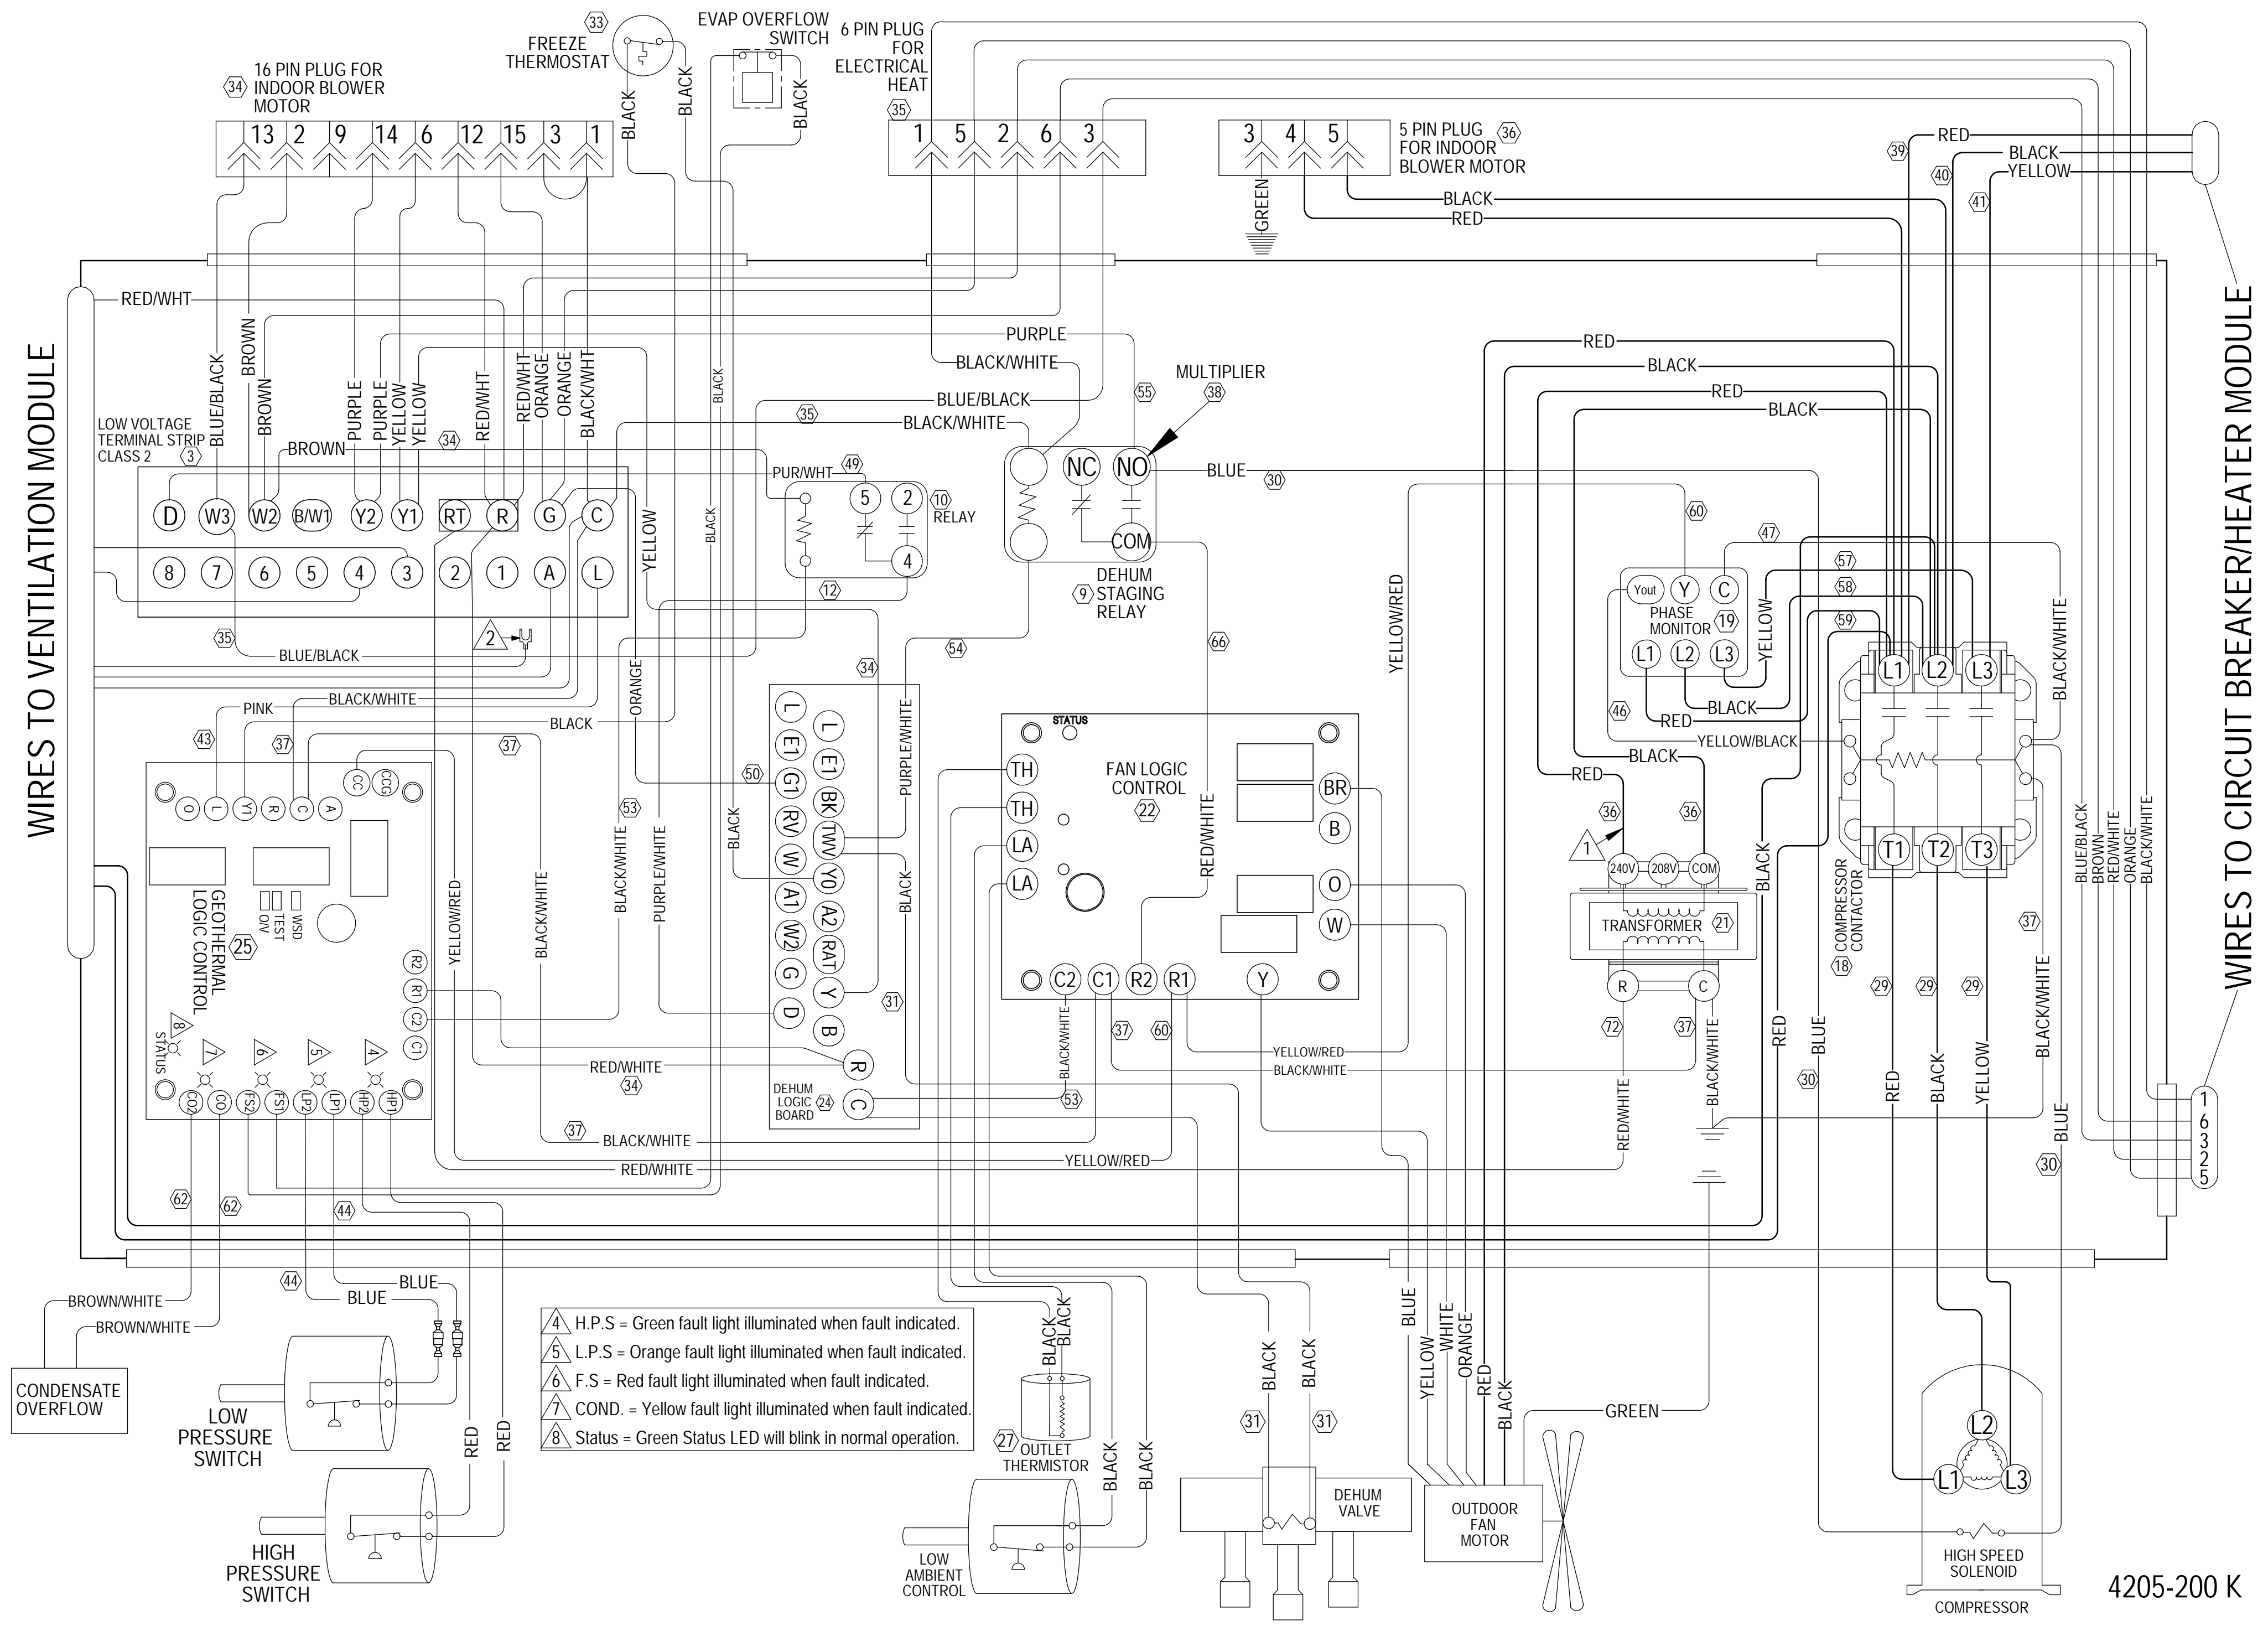

- 4 H.P.S = Green fault light illuminated when fault indicated.
- 5 L.P.S = Orange fault light illuminated when fault indicated.
- 6 F.S = Red fault light illuminated when fault indicated.
- 7 COND. = Yellow fault light illuminated when fault indicated.
- 8 Status = Green Status LED will blink in normal operation.