



NOTE:
REMOVE JUMPER TO
ENABLE BALANCE CLIMATE

NOTE:
W42,48,60 - 50Hz models only:
Motor powered with Red (low)
lead. Black lead lands on park
terminal.
Red (50 Hz only)
(Low) Black (High)
where applicable

- CCH CRANKCASE HEATER
- CCM COMPRESSOR CONTROL MODULE
- DS DAMPER SWITCH
- DFS DIRTY FILTER SWITCH
- FTS FREEZE TEMP SENSOR
- HPC HIGH PRESSURE CONTROL
- LPS LOW PRESSURE SWITCH
- MAT MIXED AIR TEMPERATURE
- OATH OUTDOOR TEMP AND HUMIDITY SENSOR
- RAT RETURN AIR SENSOR
- ☐ TERMINAL BLOCK

	Factory	Field	Optional
High Voltage	---	---	---
Low Voltage	---	---	---
0-10VDC	---	---	---