



For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL

Note: EEV Control Box
located in Evap. Section

Low Ambient Control (opt.)

Staging Solenoid

Outdoor Fan Motor

Hi Press. Control

Low Press. Control

3 Way Valve

Outdoor Temp Sensor (Opt.)

Condenser Section

<p>WARNING USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.</p>	<p>DANGER *ELECTRICAL SHOCK HAZARD *DISCONNECT POWER BEFORE SERVICING.</p>	<p>A Wires Connect if Option Not Used</p>	<p>99 Wire Identification numbers for Bard use only.</p>		
			Factory	Field	Optional
		High Voltage			
		Low Voltage			

4213-334 A