



For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

NOTE:  
THIS IS LOCATED  
IN UPPER CONTROL  
PANEL

Note: EEV Control Box  
located in Evap. Section

If Economizer is  
installed connect  
Orange/White wire  
to pin #1 on vent  
plug harness

Wire tucked in cable  
duct when no OD switch  
(only use with LAC)

NOTE: JUMPER PLUG MUST BE INSTALLED  
WHEN NO VENT OPTION IS INSTALLED

<p><b>WARNING</b> USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.</p>	<p><b>A</b> Wires Connect if Option Not Used</p>	<p>99 Wire Identification numbers for Bard use only.</p>		
		Factory	Field	Optional
<p><b>DANGER</b> *ELECTRICAL SHOCK HAZARD *DISCONNECT POWER BEFORE SERVICING.</p>	High Voltage			
	Low Voltage			

4213-335 A