



For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

NOTE:  
THIS IS LOCATED  
IN UPPER CONTROL  
PANEL ON THE W42-72

BROWN OR BLACK ON W24 MODELS  
BLUE OR WHITE ON W24 UNITS

NOTE:  
W42,48,60 - 50Hz models  
only:  
Motor powered with Red (low)  
lead. Black lead lands on park  
terminal.

**WARNING**  
USE COPPER CONDUCTORS  
ONLY SUITABLE FOR AT LEAST  
75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD  
DISCONNECT POWER BEFORE  
SERVICING.

**A**  
Wires Connect  
if Option Not  
Used

Wire Identification numbers  
for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4213-528 A

NOTE: JUMPER PLUG  
MUST BE INSTALLED  
WHEN NO VENT OPTION  
IS INSTALLED