

For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardvac.com](http://www.bardvac.com)

Note: EEV Control Box located in Evap. Section

NOTE: THIS IS LOCATED IN UPPER CONTROL PANEL ON THE W42-72

**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**  
\*ELECTRICAL SHOCK HAZARD  
\*DISCONNECT POWER BEFORE SERVICING.


Wires Connect if Option Not Used

	Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

Wire tucked in cable duct if no OD switch (only use with LAC)

Purple wire is tucked in cable duct. Connect with yellow wire on terminal block when using Balanced Climate mode. Y1-Y2 jumper on LVTS must first be removed.

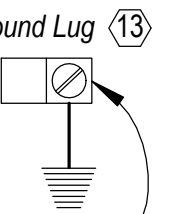

NOTE: THIS IS LOCATED IN UPPER CONTROL PANEL ON THE W42-72