


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

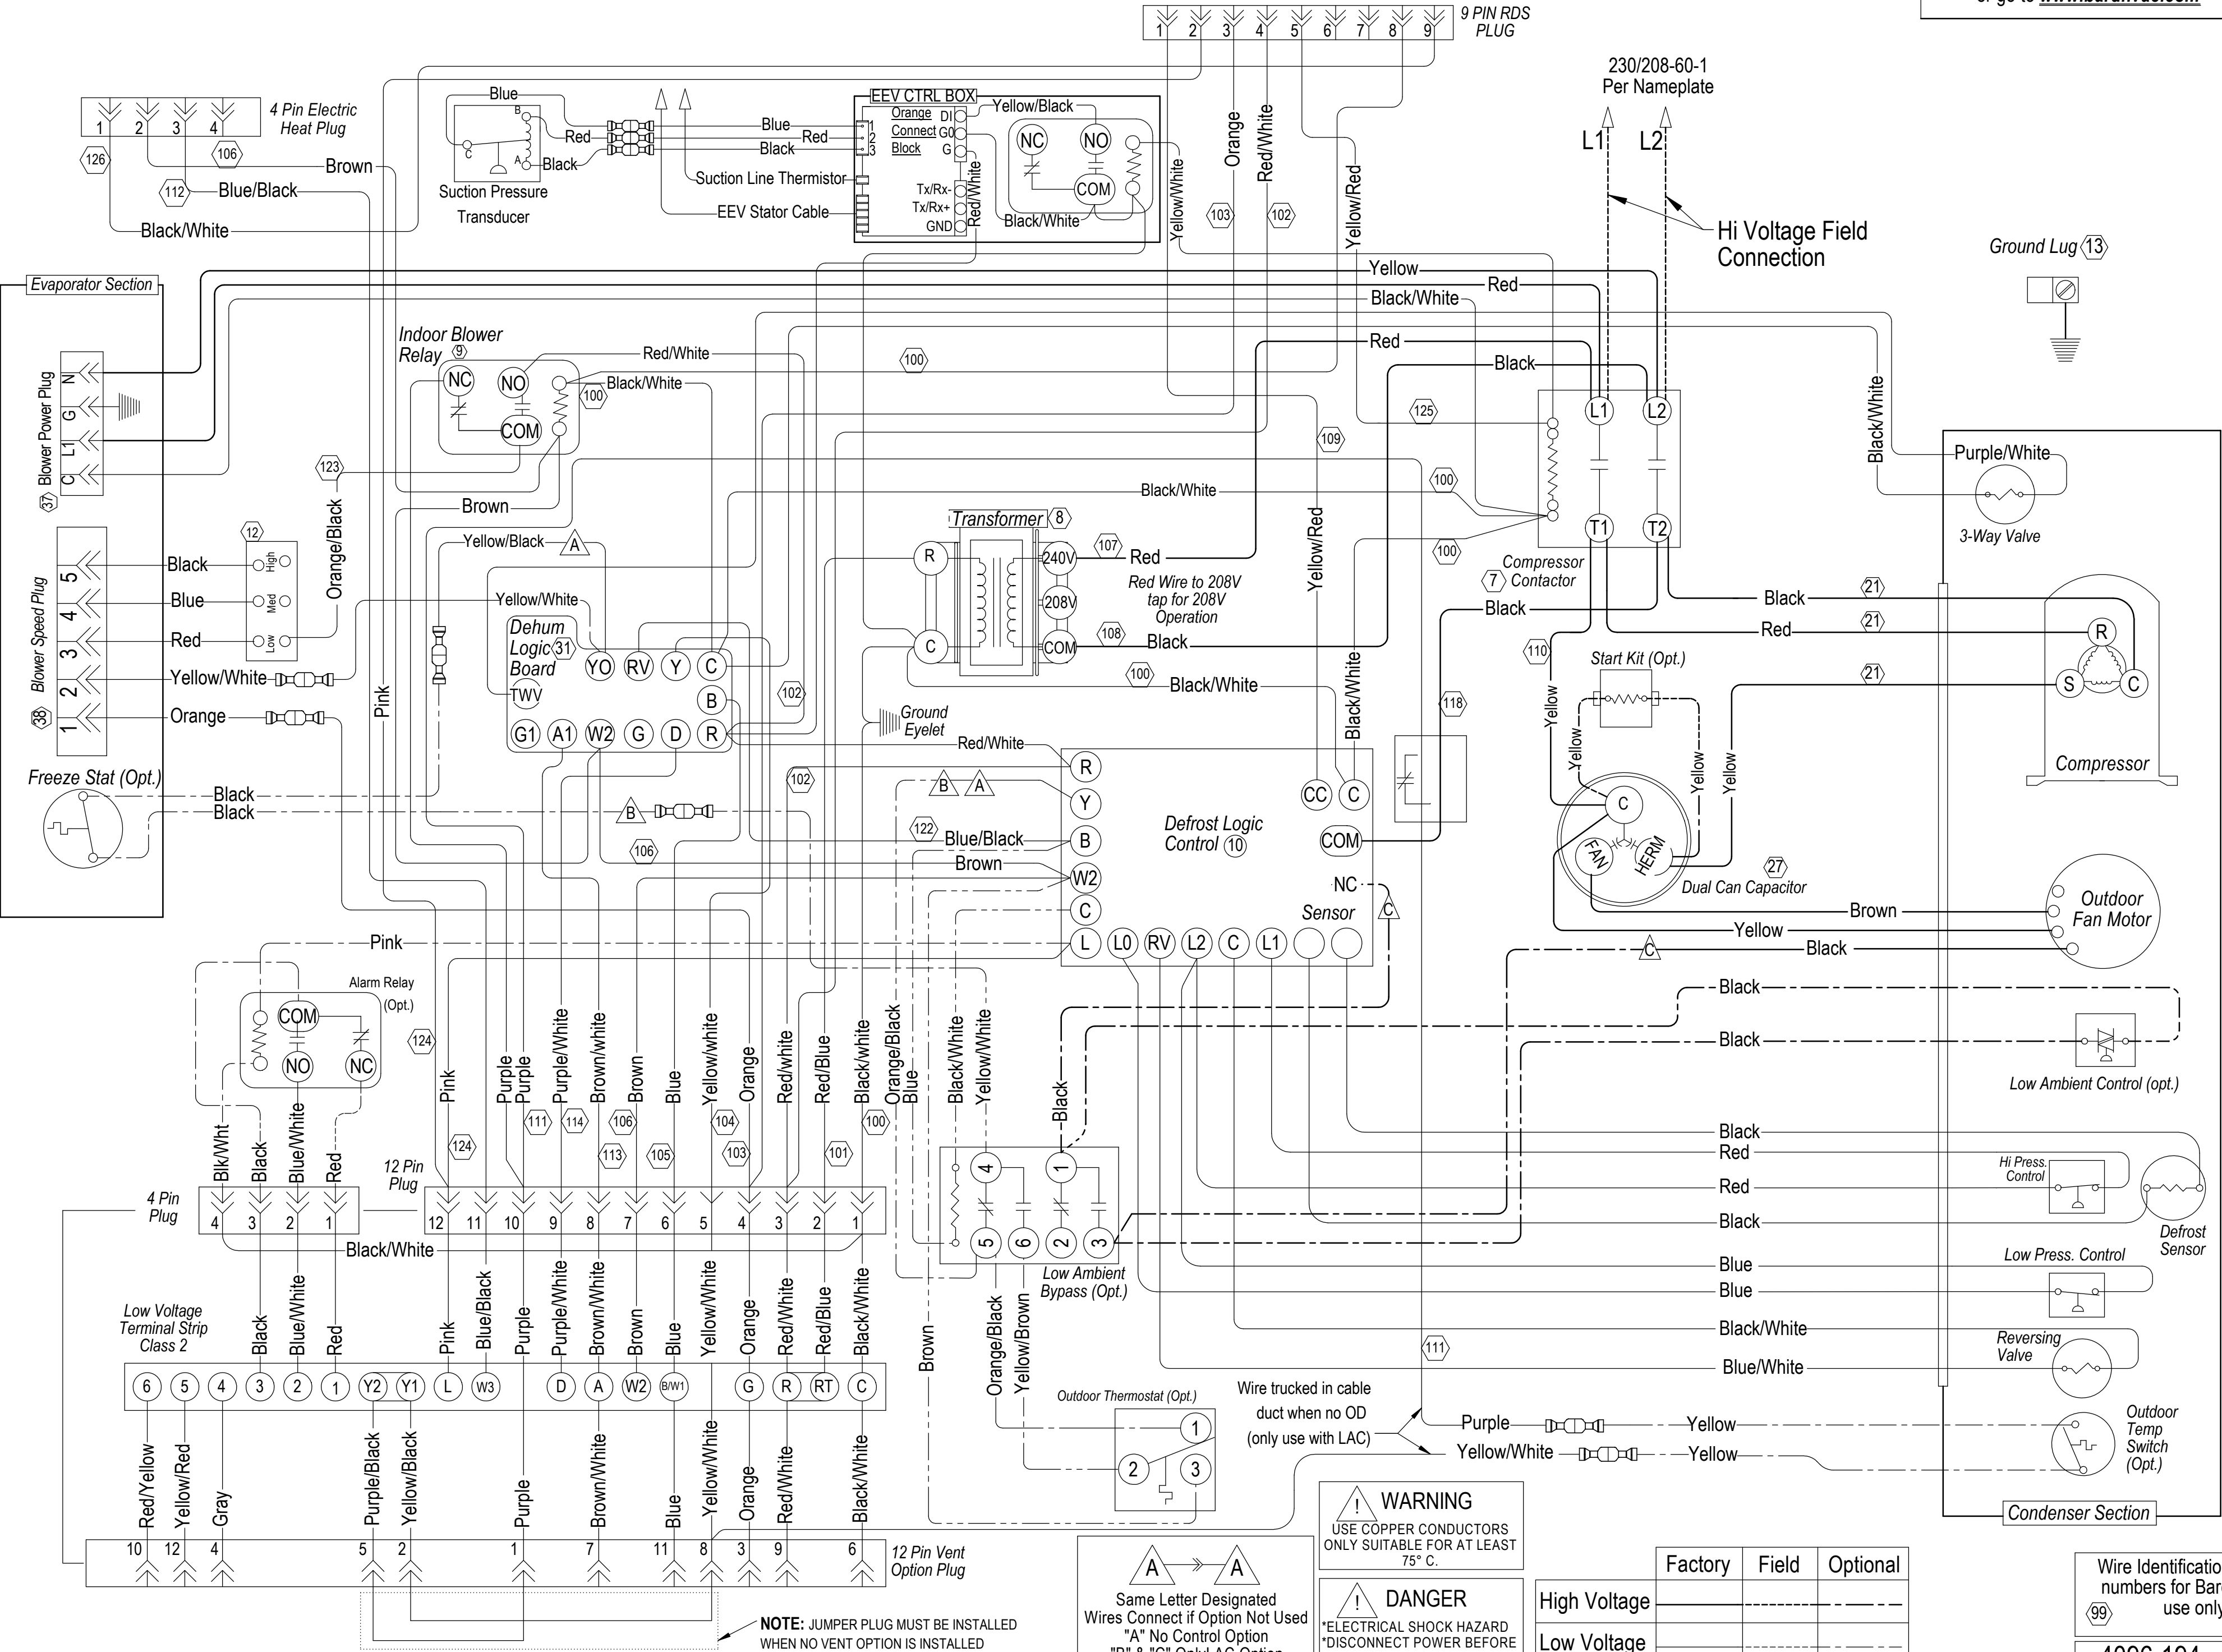

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE
SERVICING.

	Factory	Field	Optional
High Voltage			
Low Voltage			

Wire Identification
numbers for Bard
use only.
4096-194