 


For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

Hi Voltage Field Connections



**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD  
DISCONNECT POWER BEFORE SERVICING.

	Factory	Field	Optional
High Voltage			
Low Voltage			

Wire Identification numbers for Bard (99) use only.  
**4096-394**

**NOTE:** JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

Same Letter Designated Wires Connect if Option Not Used  
"A" No Control Option  
"B" & "C" Only LAC Option