


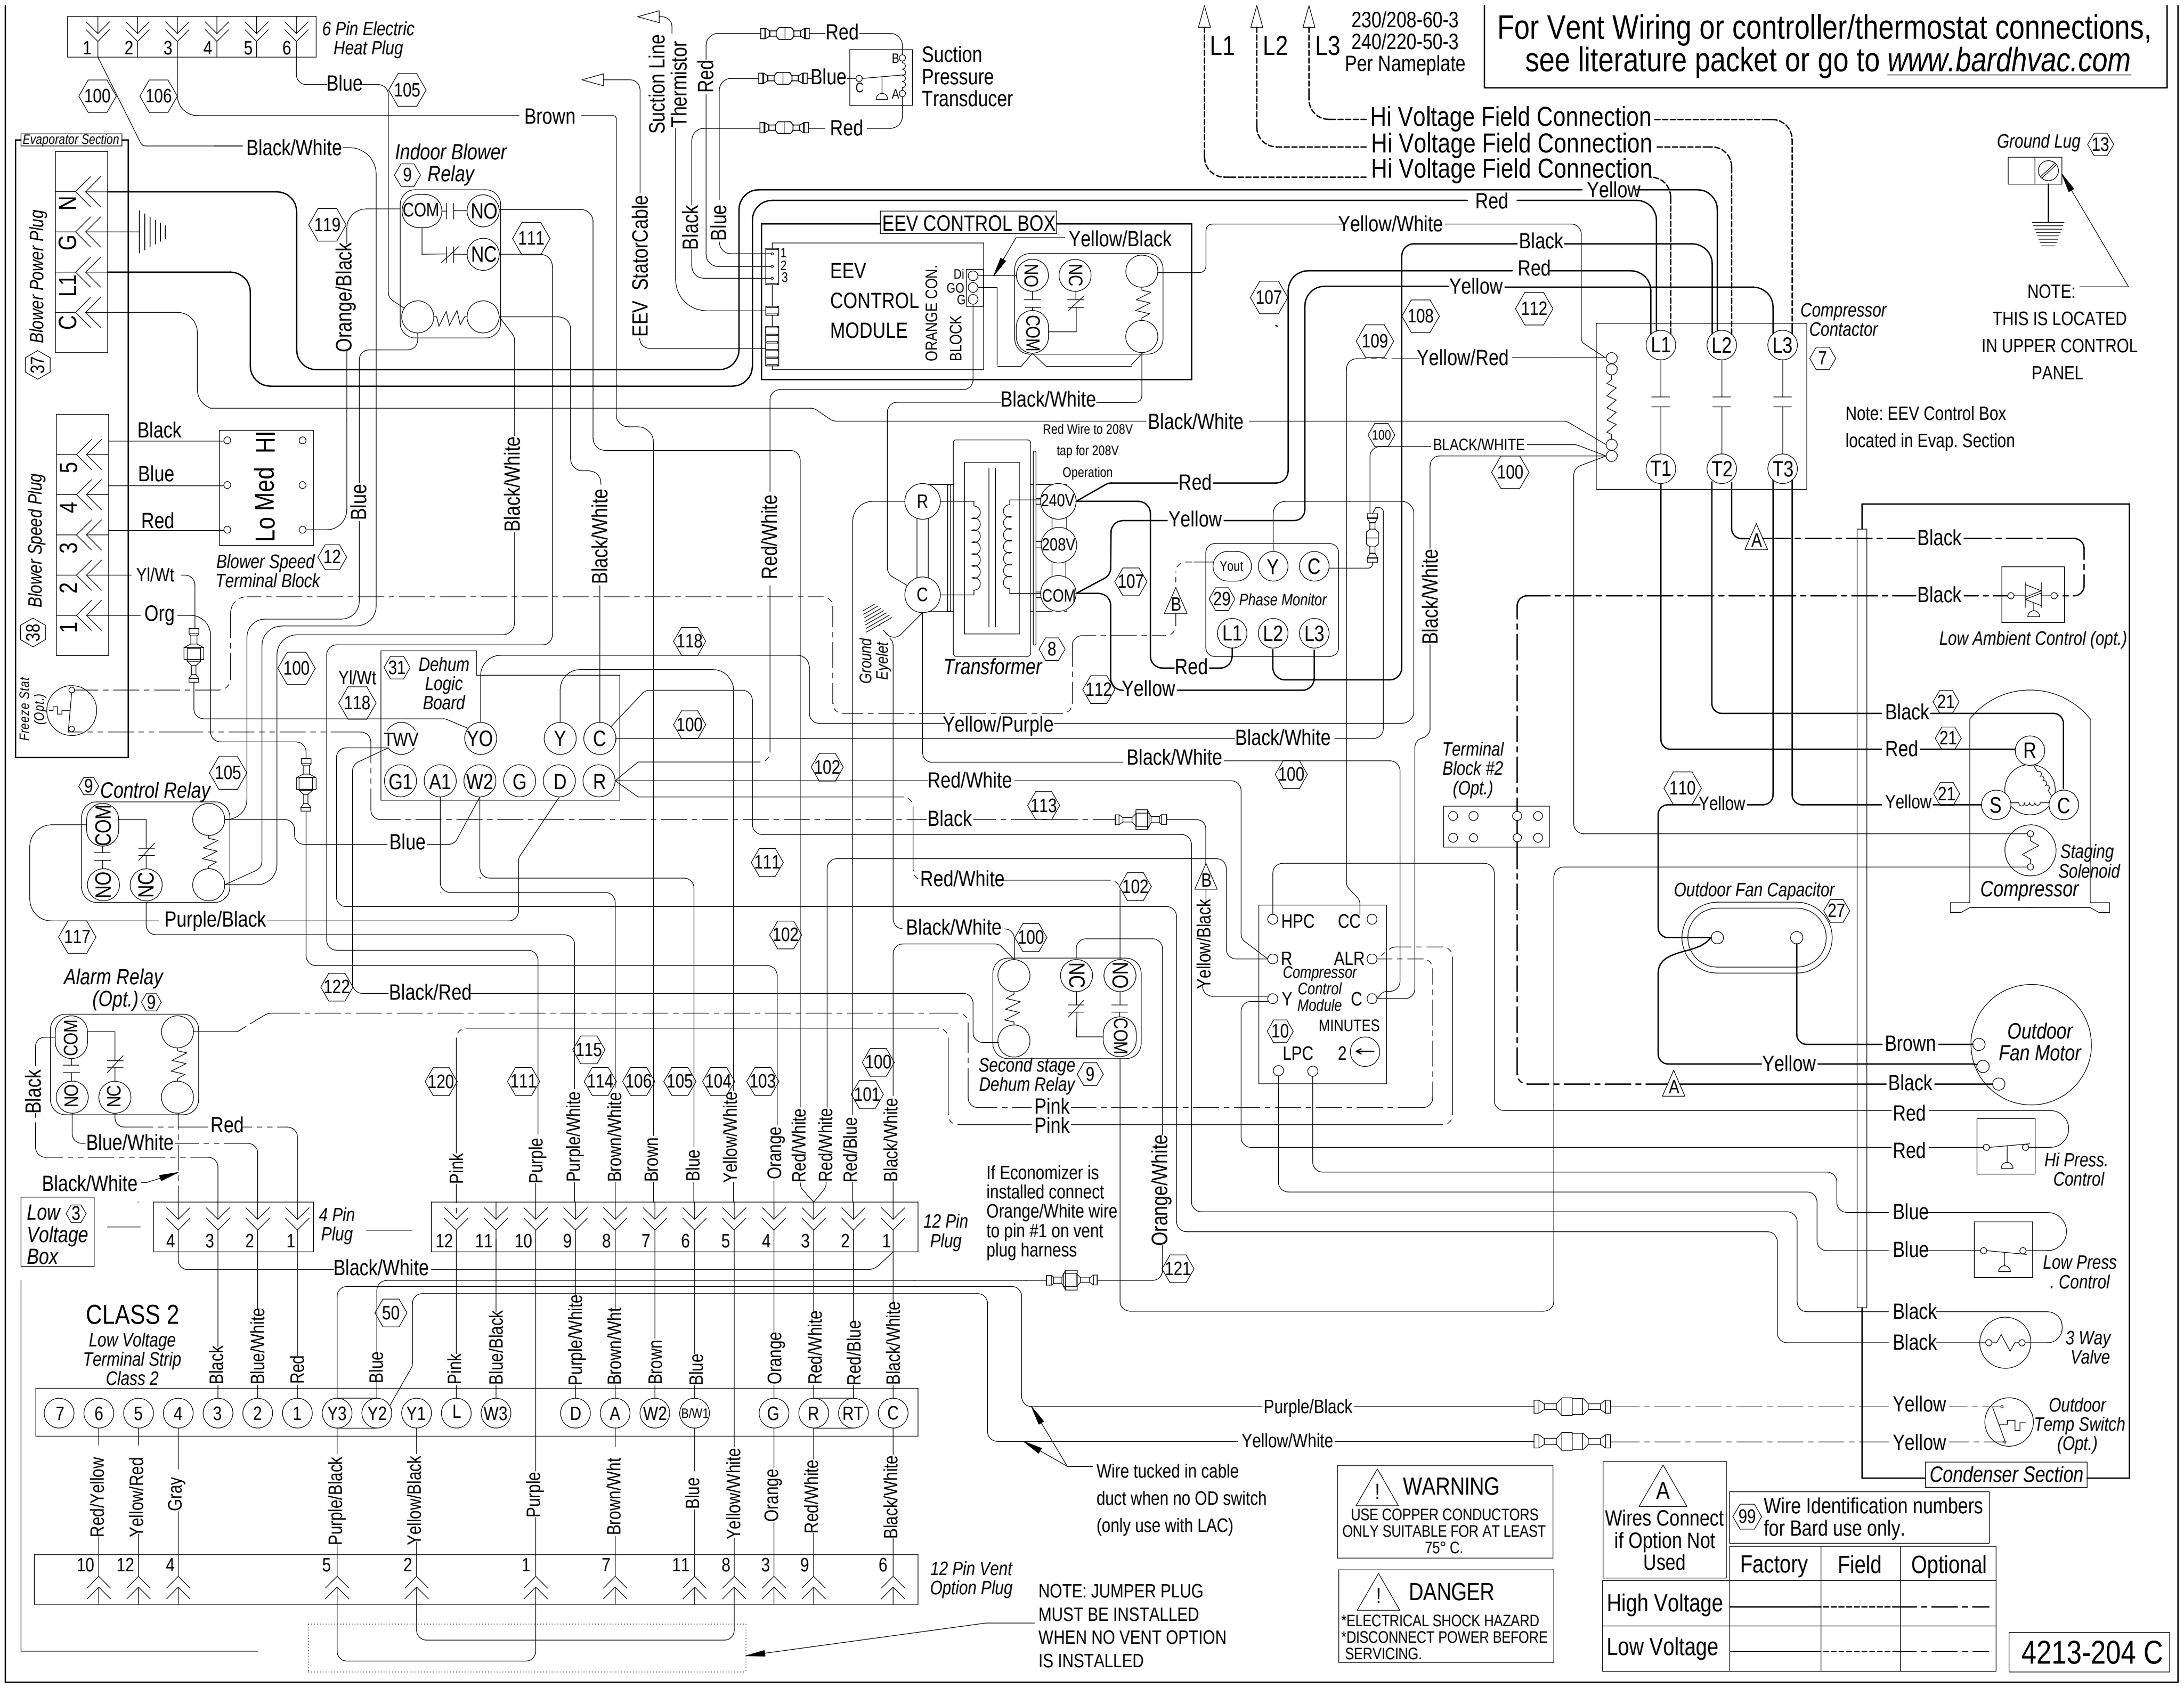

For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

Ground Lug (13)

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL

Note: EEV Control Box
located in Evap. Section

Low Ambient Control (opt.)

Staging Solenoid

Outdoor Fan Motor

Hi Press. Control

Low Press. Control

3 Way Valve

Outdoor Temp Switch (Opt.)

Condenser Section

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

A
Wires Connect
if Option Not
Used

High Voltage			
Low Voltage			

Wire Identification numbers for Bard use only.			
	Factory	Field	Optional
High Voltage			
Low Voltage			