



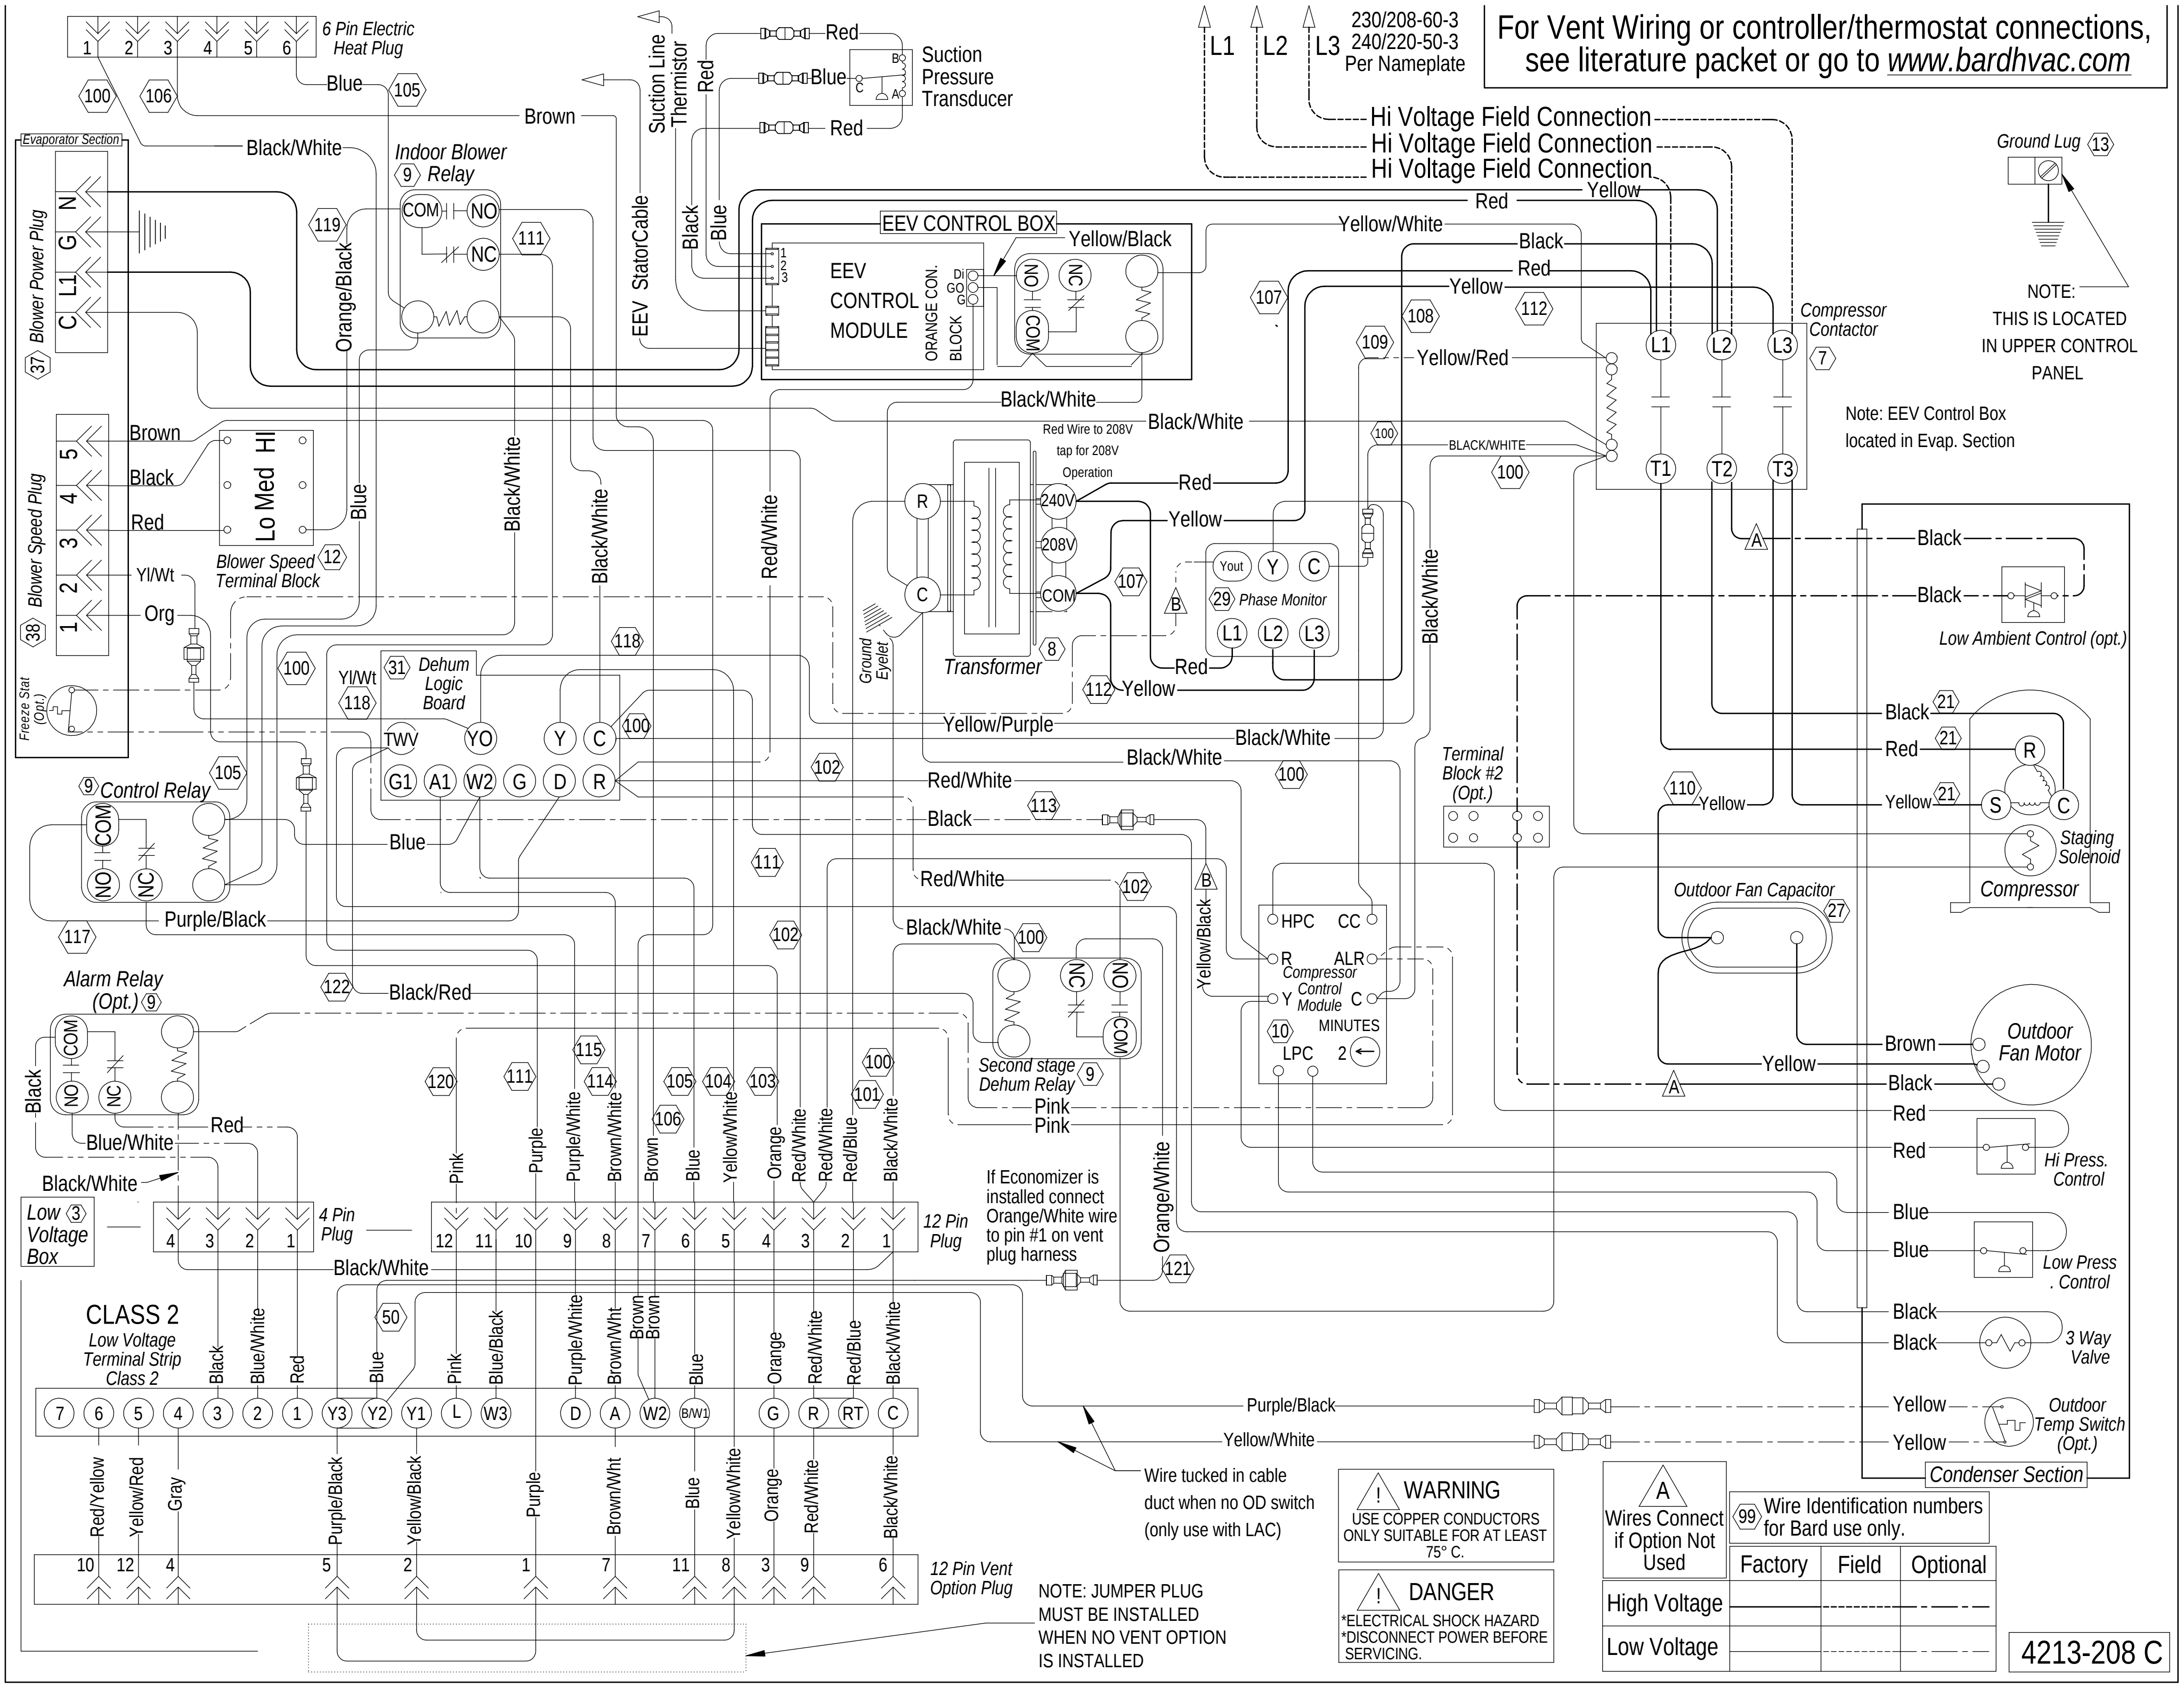

For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

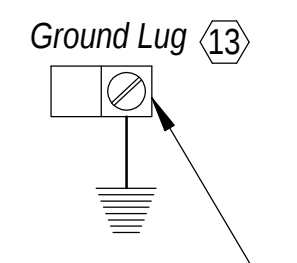

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL

Note: EEV Control Box
located in Evap. Section

NOTE: JUMPER PLUG
MUST BE INSTALLED
WHEN NO VENT OPTION
IS INSTALLED

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

A
Wires Connect
if Option Not
Used

High Voltage			
Low Voltage			

Wire Identification numbers for Bard use only.		
Factory	Field	Optional