


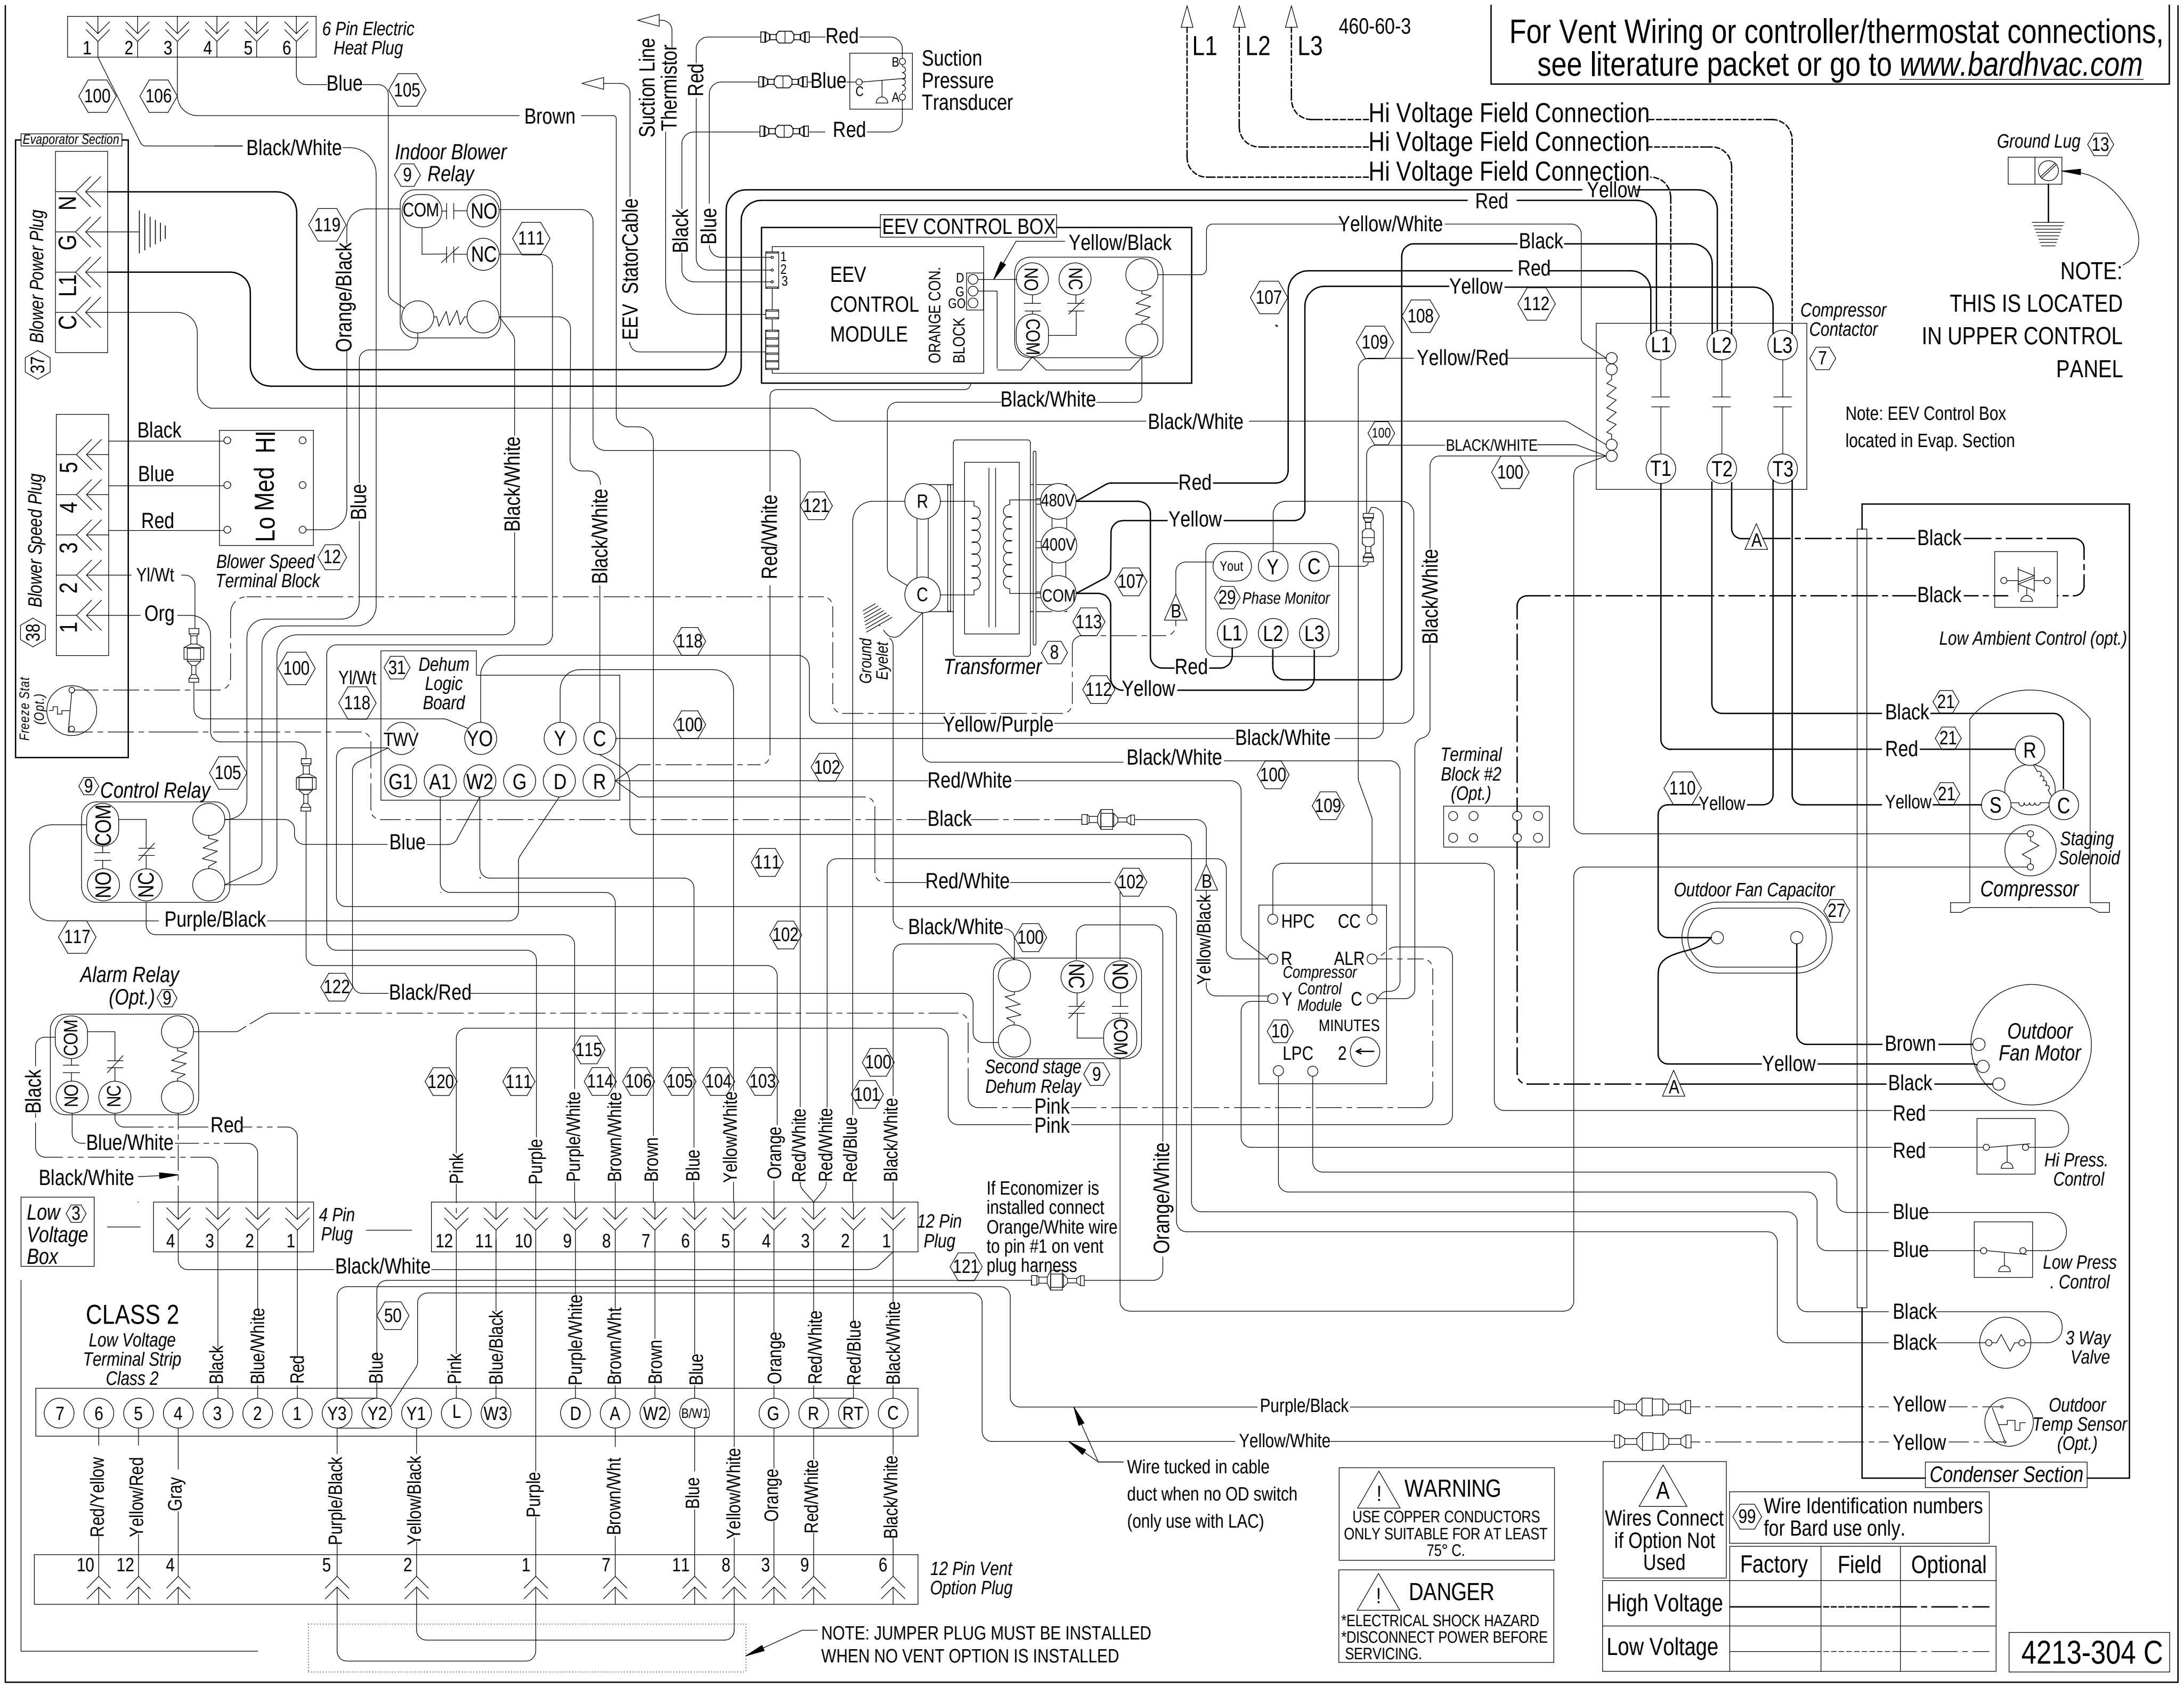

For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

Note: EEV Control Box located in Evap. Section

NOTE: THIS IS LOCATED IN UPPER CONTROL PANEL

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

A
Wires Connect if Option Not Used

	Factory	Field	Optional
High Voltage			
Low Voltage			

99 Wire Identification numbers for Bard use only.

4213-304 C