



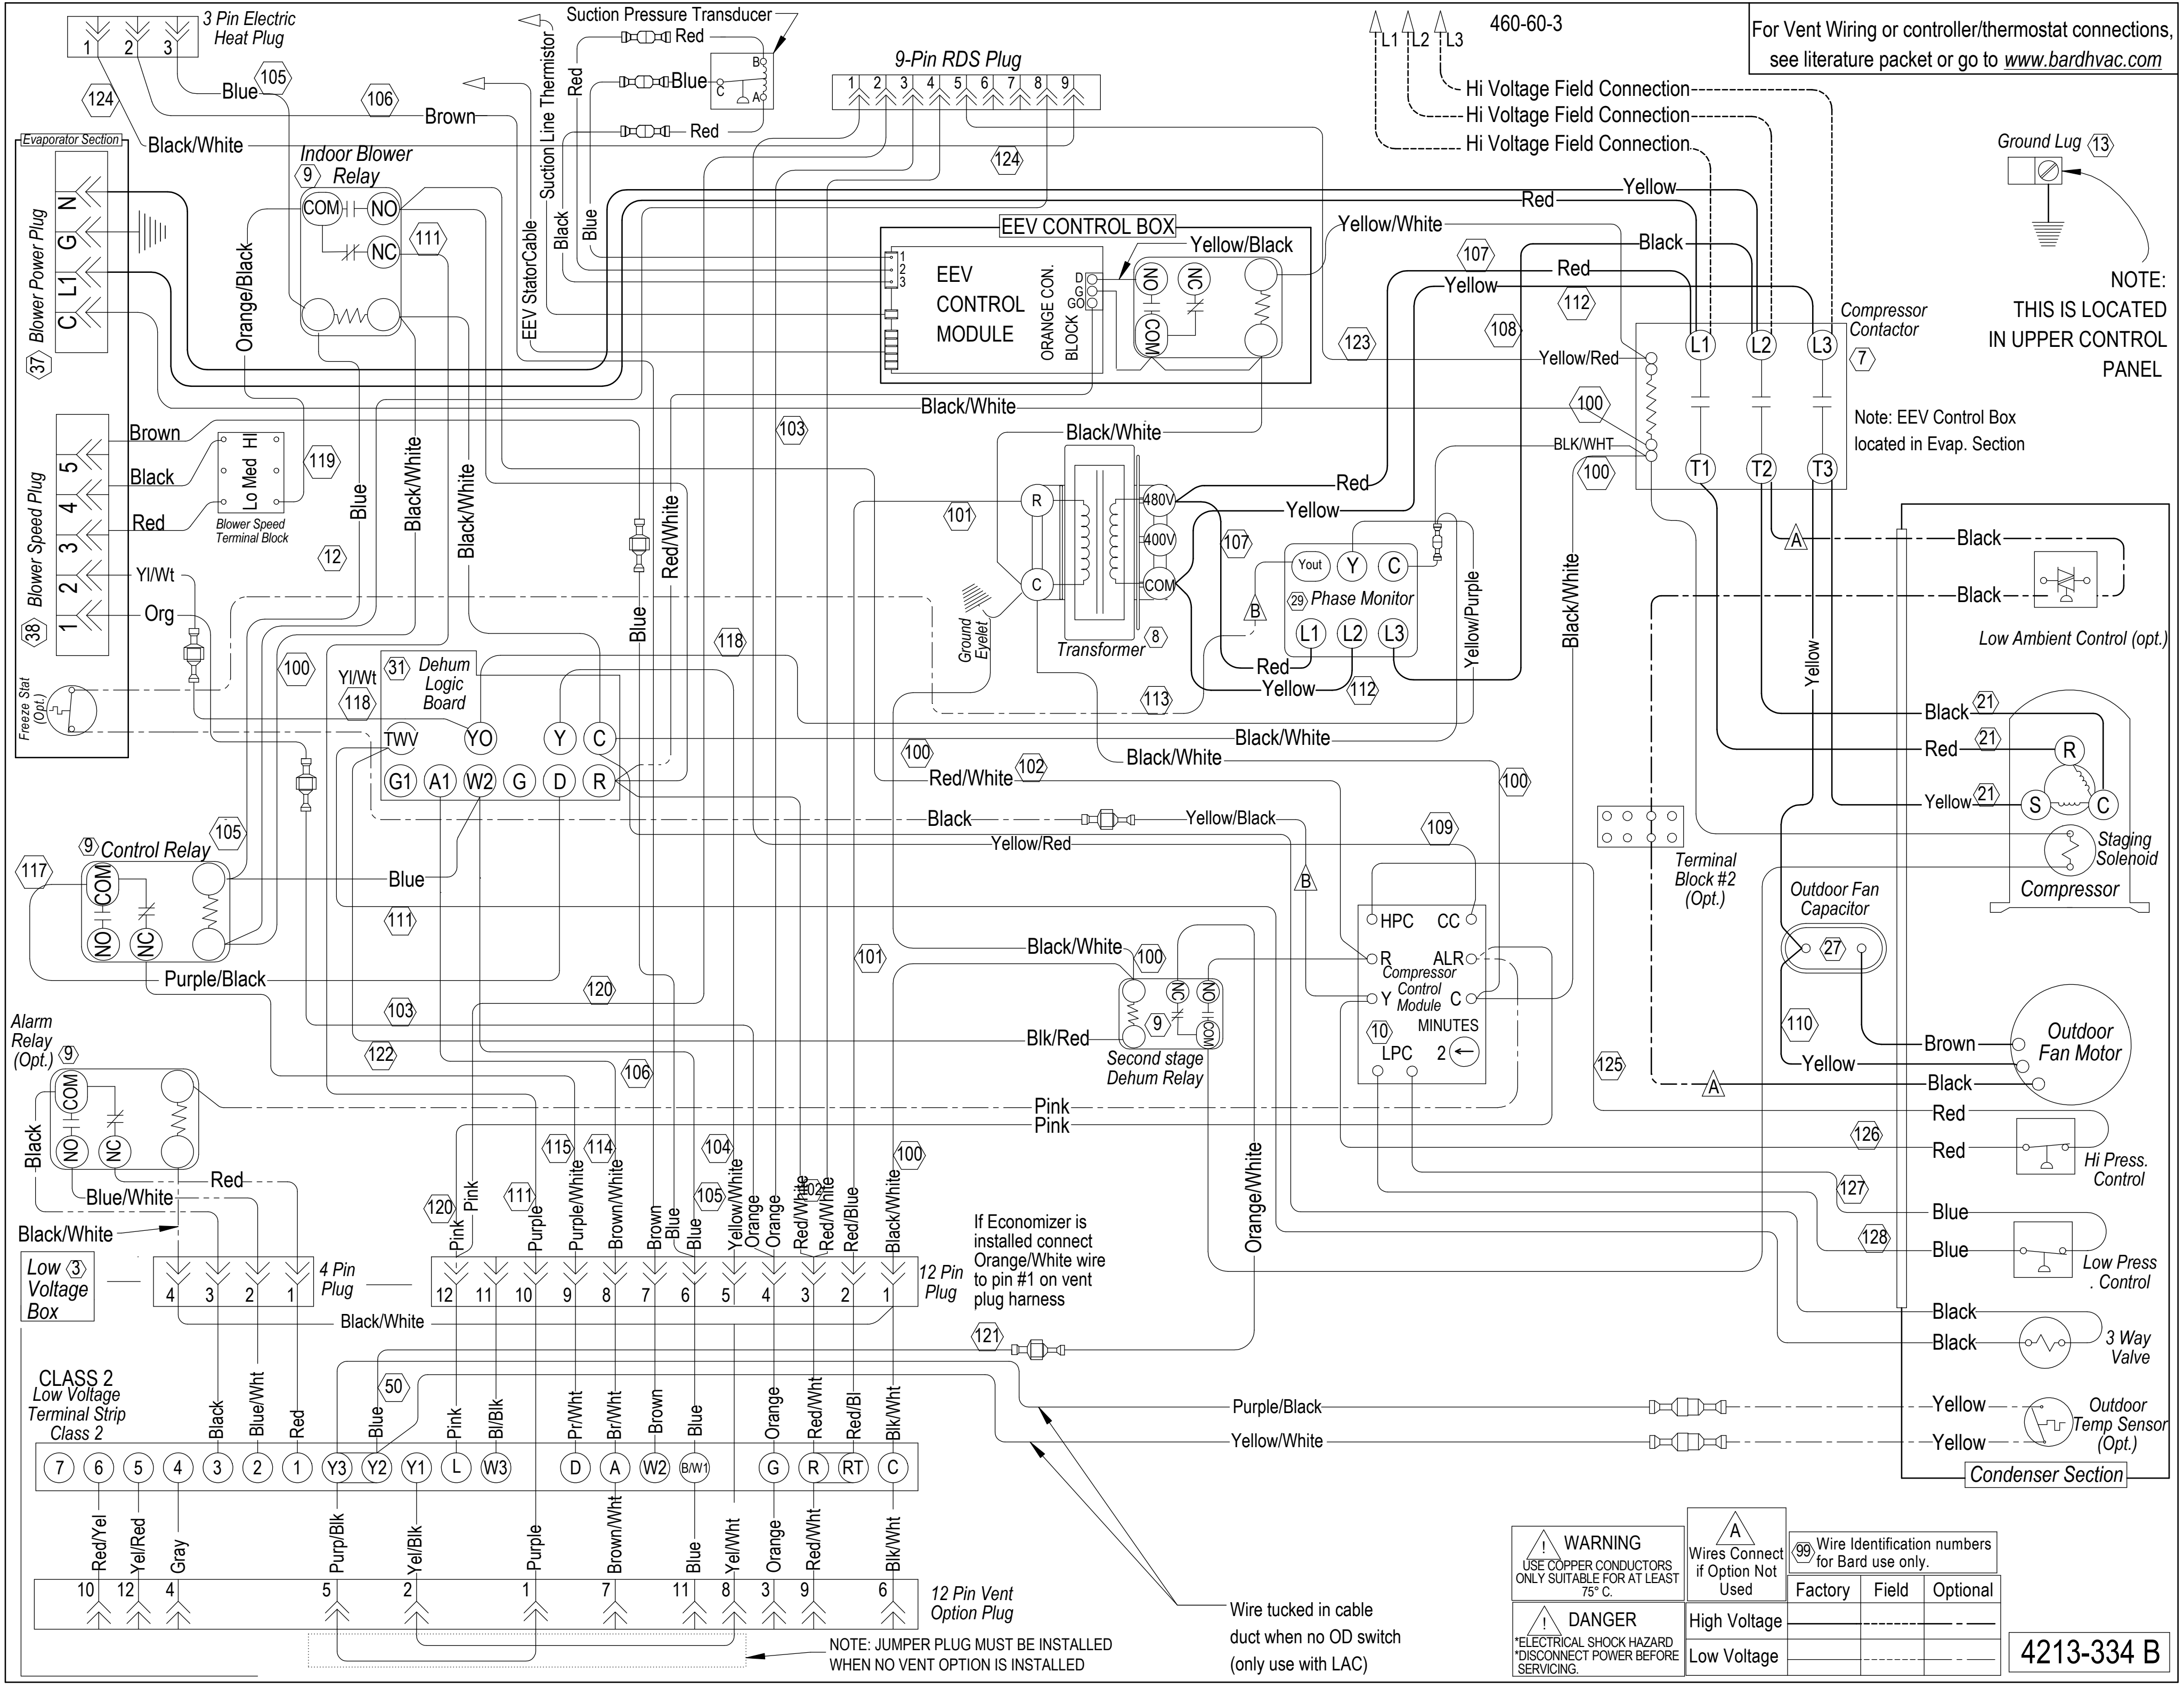


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

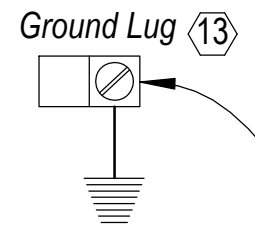

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL

Note: EEV Control Box
located in Evap. Section

Low Ambient Control (opt.)

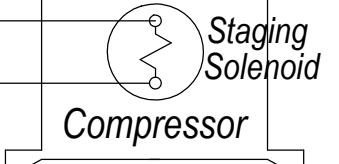

Outdoor Fan Motor

Hi Press. Control

Low Press. Control

3 Way Valve

Outdoor Temp Sensor (Opt.)

Condenser Section

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

A Wires Connect if Option Not Used	High Voltage
	Low Voltage

Wire Identification numbers for Bard use only.		
Factory	Field	Optional

4213-334 B

If Economizer is
installed connect
Orange/White wire
to pin #1 on vent
plug harness

Wire tucked in cable
duct when no OD switch
(only use with LAC)

NOTE: JUMPER PLUG MUST BE INSTALLED
WHEN NO VENT OPTION IS INSTALLED