

MANUAL 2100-066



**COMMON FURNACE COMPONENTS  
AND BLOWER MAINTENANCE PROCEDURES**

**REFRIGERATION, HEATING AND  
AIR CONDITIONING**

**BAR D MANUFACTURING CO. • BRYAN, OHIO 43506**


*Dependable quality equipment . . . since 1914*

## CABINET

Generally speaking, all heating and cooling components (except the thermostat) are housed in sheet steel cabinets. The cabinet helps protect the components and adds to the attractiveness of the units.

The heating unit or furnace cabinet is normally located indoors. It has connection provisions for attaching the cooling coil, supply air plenum and return air plenum. The cabinet also contains openings or knockouts for electrical service and required plumbing. Designed into the cabinet are removable access doors to allow for servicing the unit. The front door of oil and gas furnaces is slotted to allow combustion air to enter (this is not necessary on electric furnaces, since no fuel is burned).

Since the cooling system's outdoor unit is exposed to the weather elements and in the public eye, it is especially important the cabinet is durable, weather resistant and attractive in appearance. Like the furnace cabinet, the outdoor cooling unit cabinet has service access doors and provisions for electrical and mechanical (i.e. refrigerant line) connections.

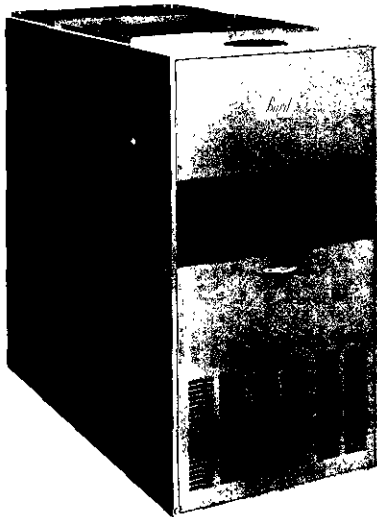

## TEMPERATURE TREATMENT SECTION


The temperature treatment section of a heating or cooling unit is that portion of the unit which produces the heating or cooling. (All types of heating units and cooling systems are discussed in greater detail in the sections that follow.)

## HEAT SECTIONS

Most residential furnaces use either natural or liquefied propane (LP) gas, oil or electricity as their source of heat.

The heat section of an electric furnace consists of one or more electric heating elements. The element is much like that in an electric toaster, only bigger. When the thermostat demands heat, an electrical resistance to the flow of electricity in the element produces heat. The heated air is moved by the furnace blower through the ducts and distributed to points all over the home.

The heat section of a gas (either natural or propane) furnace consists of a steel heat exchanger and gas burners. The burners fit in a cavity at the bottom of the heat exchanger. Gas is fed into the burners and ignited by a pilot flame on a call for heat from the thermostat. The burning gas warms the heat exchanger and the blower distributes the heat throughout the house.

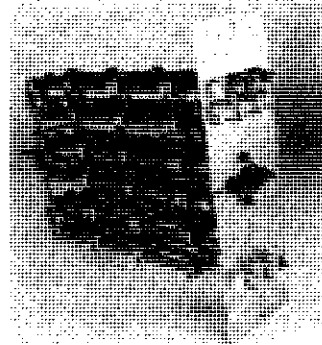

## BARD TOTAL ELECTRIC FEATURES

**BUILT-IN COOLING COIL COMPARTMENT** — Slide-in type for easier conversion to summer cooling. Accommodates 1½, 2, 2½, and 3 ton cooling coils.

**CONTROLS** — On demand from the wall thermostat, the heating elements are energized by electrical contactors. The 15 thru 30 KW versions have the blower motor interlocked with each stage for safety. Easily two staged.

**LIMIT SWITCH** — Thermal snap disc in each heating element shuts off power automatically if system air temperature becomes excessive.

**BUILT-IN TRANSFORMER** — Provides power supply for heating and optional cooling controls.

**BLOWER RELAY** — Provides automatic blower speed change-over to meet heating and cooling air delivery requirements.


**BRANCH CIRCUIT FUSING** — Factory installed in models rated over 48 amps.

**HEATING ELEMENTS** — Nickel-chrome wire with individual fusible links for long life. Entire assembly slides out for easy maintenance.

**MOTOR** — Multi-speed for both heating and cooling.

**BLOWER** — Heated air is quietly circulated by large volume centrifugal blower that is matched to the electrical heating system for efficiency. Slides out for easy maintenance.

**FILTERS** — Twin permanent type slide out from front for easy cleaning on all models except Models EFC5 and EFC10.

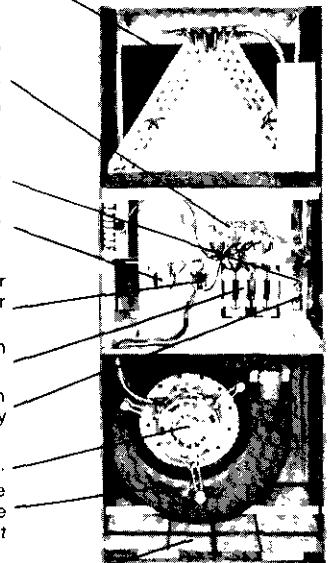

The oil heat section is made up of a firebrick pot and steel heat exchanger. When the thermostat calls for heat, oil is pumped through a nozzle and ignited by a spark from a set of high voltage electrodes. A ball of fire is produced in the firebrick pot, which heats the steel heat exchanger. The blower then moves this heated air to the various distribution points.

### TYPICAL GAS FURNACE

**Steel Cabinet** is acoustically and thermally insulated for quieter operation and minimum heat loss.

**Filter** is extra large for better system air cleaning efficiency.

**Heat Exchanger** efficiently extracts all usable heat for greater fuel economy.

**Safety Pilot** provides 100% automatic shut-off for safety.

**Mono-Jet<sup>®</sup> Burner** provides ease in adjustment and has uniform flame distribution for maximum efficiency.

**Powerful Blower Motor** is resilient mounted for quieter operation.



**Bar Cooling Coils** with plenum and system matched components are optional for converting to summer air conditioning.

**Electrostatic Air Cleaner** traps up to 95% of air-borne dust, bacteria-size particles, smoke, odors and 99% pollen. This optional accessory may be installed with furnace or added later.


**Fan and Limit Control** with helix element automatically controls blower and burner operation.

**Blower** is capacity matched to heating components and quietly circulates air throughout system.

**Model G152**

All Components Are Easily Accessible for Service and Inspection

### TYPICAL OIL FURNACE

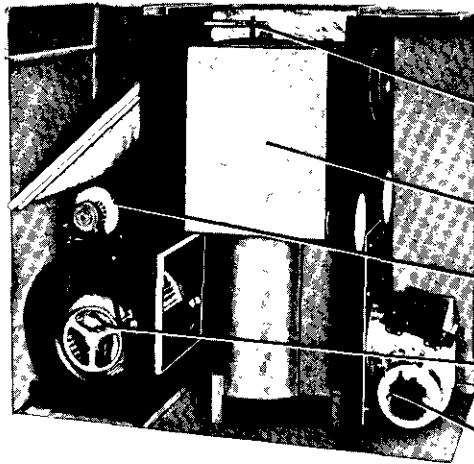

**Steel Cabinet** is acoustically and thermally insulated for quieter operation and minimum heat loss.

**Fan and Limit Control** with helix element automatically controls blower and burner operation.


**Heat Exchanger** provides more heating surface for efficiency.

**Motor** has resilient base mounting for both heating or cooling applications.

**Blower** is centrifugal type, dynamically balanced and mounted on rubber grommets for quieter operation.

**Burner** is designed for super-quiet efficiency.

### TYPICAL INSTALLATIONS

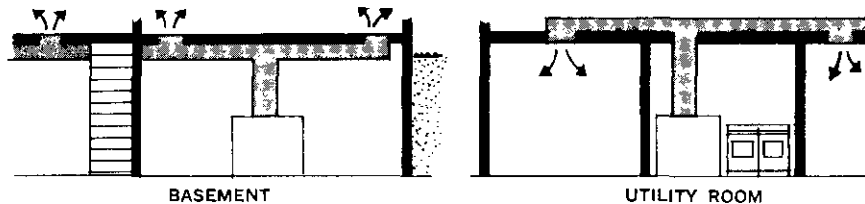


## COOLING SECTION

The cooling section in a typical split-system application is the indoor evaporator coil. This coil is located in the supply plenum of the furnace. Stated simply, cool refrigerant is pumped through the evaporator coil by the cooling unit. The refrigerant in the evaporator coil removes heat from the air, and the furnace blower distributes this cool air to the conditioned spaces.

## BLOWER

The device which moves the treated air to points throughout the home is called the blower. The blower consists of a wheel with air scoops sometimes called a scroll and a motor to drive the wheel. There are two types of blowers; a belt drive and a direct drive.

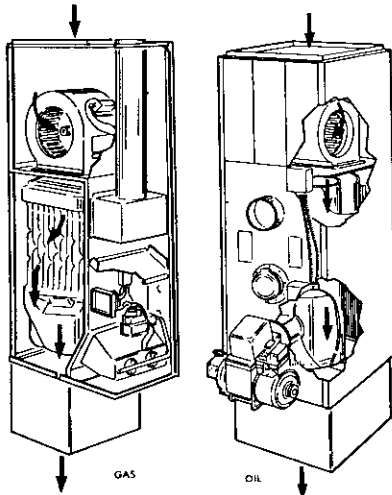

Illustrated here are typical gas-fired and oil-burning counterflow furnaces.

## BELT DRIVE BLOWER

A belt runs from a pulley mounted on the motor to a pulley mounted on the blower wheel. All moving parts are anchored on a rigid U-frame, which in turn is fastened on resilient mountings to the furnace. The design of this frame insures easy adjustment and alignment of pulleys and belt for optimum performance. Varying amounts of air can be moved by a belt drive blower, depending upon the motor pulley size adjustment (see diagram). The pulley can be made larger by screwing one side of the pulley inward toward the other side; this causes the blower wheel to rotate faster. Screwing one side outward from the other side reduces the pulley's effective circumference, which in turn reduces the speed of the blower wheel. If volumes of air are desired, which cannot be obtained by motor pulley adjustment, the motor or blower pulleys themselves can be changed. (Note: a larger pulley might also necessitate a larger motor).

## DIRECT DRIVE BLOWER

The direct drive blower motor is mounted inside the blower and is directly linked to the blower wheel. Air volume changes are made by electrically varying the speed of the motor. The speed in direct drive blowers is changed depending upon which of several wire leads (speed taps) coming from the motor are used. Usually two to five speeds can be obtained by wiring the hot wire to the desired speed tap lead and the neutral wire to the common motor lead. The unused hot wire leads must be taped separately to prevent coming in contact with an electrical ground. The rotating motor produces a back voltage (emf) of approximately 200 vac through electromagnetic induction.

**WARNING**  
USE CAUTION WHEN HANDLING THESE LEADS WITH 200 vac ELECTRICAL POTENTIAL. IF NOT TAPED, THEY COULD CAUSE ARCING TO GROUND, SHOTS OR SERIOUS ELECTRICAL SHOCKS.


## FILTER

A filter is the device in a forced air heating or cooling unit which mechanically screens out dust, dirt, lint and other impurities from the system's airstream.

The filter is usually located just upstream from the blower, in the return air side of the system. A fiberglass media commonly acts as the screen, cleaning the air before it is recirculated throughout the system by the blower.

A dirty filter greatly reduces the system's airflow, which greatly reduces the operating efficiency of the heating or cooling unit. For this reason, the homeowner should be instructed to check the filter monthly and clean or replace it if necessary. (Never re-use a dirty filter by turning it bottomsides up; this will result in the collected dirt being dumped back into the airstream.)

Two types of filters are the disposable and the permanent. Most slab filters are disposable, consisting of a rectangular fiberglass screen in a cardboard frame. These come in a variety of sizes to fit completely across the airstream. Arrows marked on the frame indicate correct placement with respect to system airflow. When the filter becomes dirty, it should simply be removed and a new one put in its place. A nondisposable slab filter uses a polyurethane media encased in a metal frame. When this filter becomes dirty, the media may be cleaned (washed or vacuumed) and re-used.

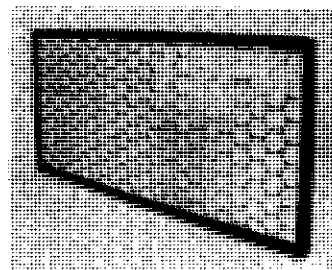

## THERMOSTAT

The thermostat is a heat sensitive switch that serves as the automatic control center for heating and cooling system operation. Since the thermostat was discussed in detail in a previous manual, its story will not be repeated here. The student should review the manual on thermostats if necessary.


## ELECTRICAL SYSTEM COMPONENTS

### FURNACE CIRCUITS



All circuits within the oil furnaces are designed and wired in accordance with Underwriters Laboratories requirements. They have been inspected and tested at the factory to qualify for the UL Label which is attached to the furnace.

All circuits within the gas furnaces are designed and wired in accordance with American Gas Association requirements. They have been inspected and tested at the factory to qualify for the AGA Label which is attached to the furnace.

### FUSED SWITCH BOX

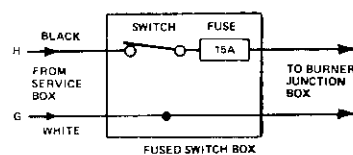

All switching within the furnace line voltage circuits is done in the hot 120V leg. The reason is that switching, if done in the ground leg, could result in an unsafe grounding fault. See diagram.

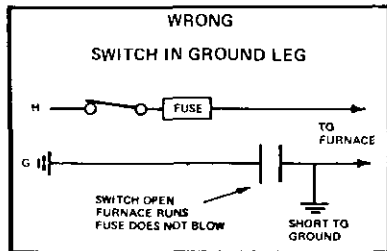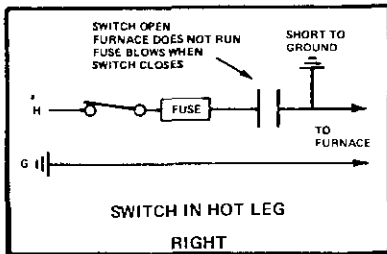

The first load in all forced warm air systems is the blower motor which is always line voltage. Therefore, the furnace blower motor is the first electrical component wired into the system.


Now when the disconnect switch lever is closed to the "on" position, this will make a complete circuit and energize the blower motor. This motor, in turn, drives the blower which delivers the air through the furnace and duct system. When the lever is placed in the "off" position, the circuit is not complete and the blower motor will not run. Air flow in the system will stop. The fuse in the switch is placed there to monitor the amount of current flow in the circuit. If there should be excessive current flowing in the circuit, the fuse will burn out and open the circuit.

#### BLOWER MOTORS


At this point the blower motor has been wired into the circuit. This is the basic circuit shown in the wiring diagrams. However, there are variations in the blower motors used and the way they are connected electrically. These variations and the reasons for each are discussed in Manual 2100-058, "Basic Electricity," pages 26-28.

The type and size of blower motor installed in a furnace depends upon the blower load required to deliver the correct amount of air to the heating system. Because the heating system varies from one installation to another, the blower speed needs to be adjustable to match the needs of the air distribution system. This speed adjustment may be done either mechanically or electrically.

The motor may be connected to the blower by a belt and pulley. In this case, the speed adjustment is accomplished mechanically by a change in the pulleys. This is referred to as a "belt-drive blower."

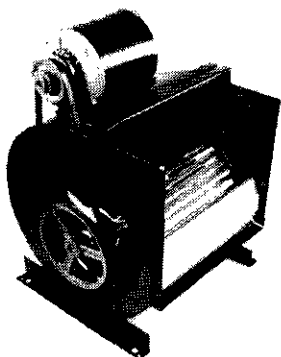


Or, the blower wheel may be mounted directly on the motor shaft. In this case, the motor speed must be changed electrically. This is referred to as a "direct-drive blower."

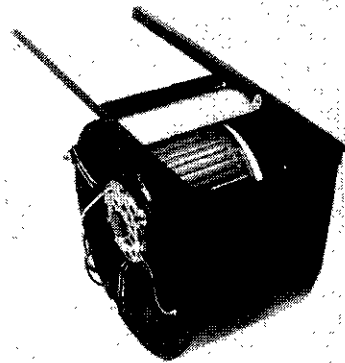


#### FAN CONTROL SWITCH

One of the major controls in the line voltage circuit will be the FAN CONTROL. The fan control switch is a heat-actuated switch which is equipped with normally open contacts. It contains a bi-metal type of heat sensing probe which senses the temperature of the air passing from the furnace into the system.

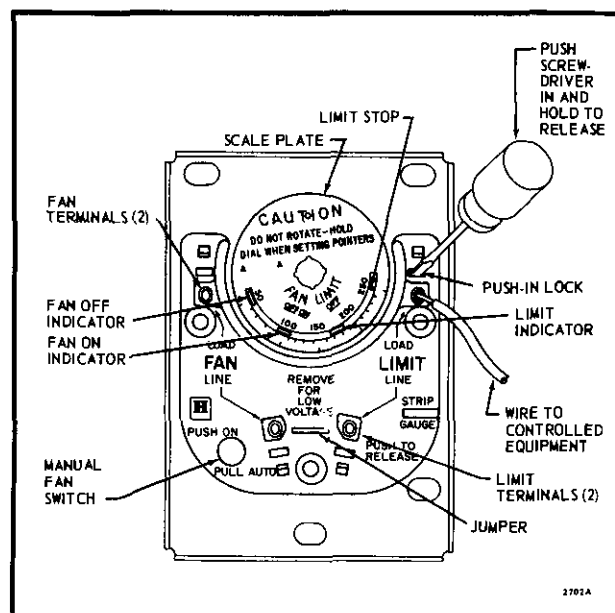


**INTERNAL VIEW OF L4064, SHOWING USE OF SCREW-DRIVER TO CONNECT OR DISCONNECT WIRES AT PUSH-IN TERMINALS. NOTE: BECAUSE THE DIAL TURNS WHEN THE ELEMENT TEMPERATURE CHANGES, THE LETTERING ON THE DIAL MAY NOT BE HORIZONTAL.**


The furnace illustration shows the location of the fan control in an up-flow type furnace. The probe is usually a "spiral" type and is installed into the heating unit on the front side of the cabinet with the bi-metal probe inserted through the cabinet into the heat exchanger portion of the furnace. Its position must be such that the bi-metal probe can sense the temperature of the air passing from the heat exchanger. When this temperature reaches a pre-determined point, the bi-metal closes the normally open contacts thus making a complete circuit, starting the blower motor.

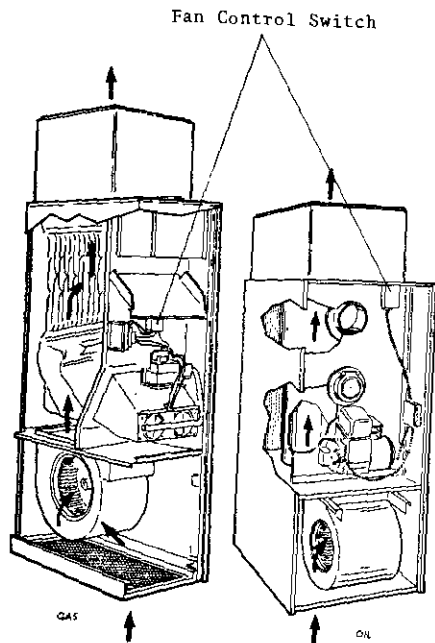

Illustrated here are typical gas-fired and oil-burning upflow, highboy furnaces.

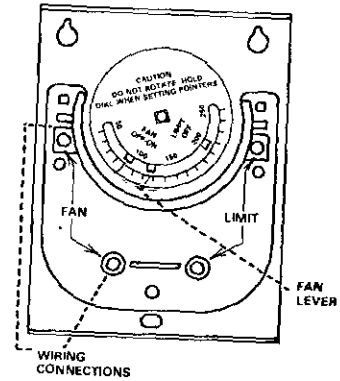

COMBINATION FAN AND LIMIT CONTROL

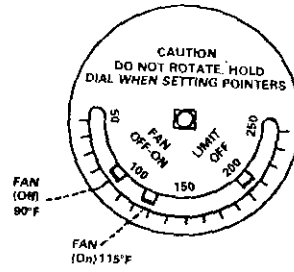

25° DIFFERENTIAL SETTING

There are basically two types of fan controls. One is called a combination control. See illustration. The fan control portion is provided with two adjustable levers - one to set the blower "on" temperature and the other to set the blower "off" temperature.

The settings of the fan control are normally field adjusted according to the desires of the homeowner and the "on" or "make" point is usually somewhere around 100 degrees. This means that when the air passing over the heat exchanger reaches approximately 100 degrees, the switch will "make" and the fan will come on, delivering air to the space.

The "break" or "off" point on the switch can be field set and should usually be set about 25 degrees below the make point. If the switch is set well below return air or room temperature during the normal heating season, continuous blower operation would be accomplished.

The difference between the fan "on" and fan "off" points is called the fan control DIFFERENTIAL. The temperature difference between these two points may be set from 15 to 25 degrees. If the differential is set too low, the control will cycle because of slight temperature fluctuations. This causes undesirable fan cycling. If set at more than 25 degrees, the blower would have to wait too long before coming "on" increasing the heat loss from the furnace and reducing the furnace efficiency.

The other type is the single fan control. It has just one adjustable lever by which the desired blower "off" temperature is set. This is a fixed differential control with a built-in differential of 25 F. Therefore, the blower "on" temperature will always be 25 F. higher than the blower "off" dial setting.

Note that if the homeowner desires to have CONTINUOUS AIR CIRCULATION (CAC), it will be necessary to set the open or break point below the normal return air temperature. In this way the air passing over the heat exchanger will remain above the setting even though the burners are off and the blower will continue to run.

#### DOWNFLOW AND HORIZONTAL UNITS

Downflow and horizontal units present a little different problem than the upflow units. The fan control probe location in a downflow unit will work fine on the "make" or "on" cycle, because the fan would not be running and the heat in the heat exchanger would rise through the heat exchanger actuating the probe. However, once the fan is running, the air is flowing in the opposite direction from the probe and when the burners would go off the probe would sense the cool return air rather than the heat in the heat exchanger. This would fool the probe into thinking that the heat exchanger had cooled down and could actuate the contacts to their normal position, cycling the fan off too soon. Once off, it would sense the residual heat in the heat exchanger being transferred to the air around it and again, actuate the contacts energizing the blower and cycling it until the heat exchanger has been cooled sufficiently.

The same type of problem would be true for a horizontal type furnace, since it would not be possible to locate the blower control in an ideal position for both the "make" and "break" actions.

#### LIMIT CONTROL


A safety device is connected into the line voltage circuit next. It is called a LIMIT CONTROL. The purpose for this "limit" is to turn off the burner and control circuits if the air temperature becomes too high.

Some limit controls are combined with the fan control. See photograph. In this case, one bi-metal actuates both the fan control switch and the limit control switch. As the temperature rises, the bi-metal will first turn on the fan switch and start the blower. If a condition exists which causes overheating, the bi-metal will continue to warp or turn until the limit cut-out temperature is reached and it trips the limit switch.

The limit switch in the combination control is provided with an adjustable lever. A step is installed which will not allow the lever to be set above the safe cut-out temperature - usually 200 F. The lever should not be adjusted below this high limit temperature since it will cause false or nuisance burner cycling.


The limit control prevents overheating of the furnace which could cause a fire or damage to the furnace components. It shuts off the burner if conditions or failure should occur such as blower failure, dirty air filter, blockage of the duct system or any condition which abnormally restricts air flow through the furnace.

The limit control is actuated by a bi-metal element in the discharge air stream. Therefore, it monitors the air temperature leaving the heat exchanger. The bi-metal is linked to a normally closed switch which has an SPST action. If the air temperature rises to the limit cut-out temperature, the bi-metal opens the switch and breaks the line voltage circuit to the burner and controls.

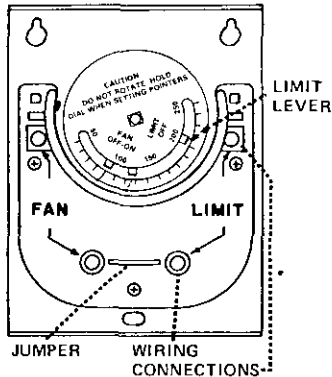

COMBINATION FAN AND LIMIT CONTROL

LIMIT CONTROL

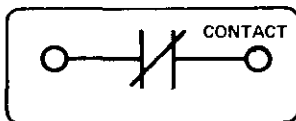

PICTORIAL SYMBOL

On most furnaces the limit control is calibrated to shut off the burner if the discharge air temperature reaches or exceeds 200 F. The limit control will automatically recycle (reclose its contacts) when the temperature drops 25 F. below the cut-out point. This 25 F. differential is built into the switch. Therefore, the limit control will recycle the burner if the thermostat is calling for heat, but will not allow the temperature to exceed 200F.

The limit cut-out temperature is factory-set and the differential is built into the switch. Neither should be readjusted or changed in the field. Otherwise the equipment warranty will be voided and a hazardous condition will be created.

Another common limit control is illustrated. This limit has its own bi-metal element and is located at a different point on the furnace than the fan control. It acts the same as the combination limit but does not have a dial setting. It is a fixed setting and fixed differential control. Again the setting is usually 200 F. and the differential is 25 F. These are set and sealed by the control manufacturer.

UPPER LIMIT CONTROL

As was outlined under the discussion of the fan control, for downflow and horizontal heating units, an additional limit control is used. This UPPER LIMIT is installed in the blower outlet or between the blower outlet and the heating section, or very near the blower section of the unit.

The reason is that the high temperature limit is at the discharge end of the heat exchanger. Before the blower comes on the warm air rises away from this high limit preventing it from sensing the temperature and providing the protection needed. During this period, the upper limit provides backup protection by sensing the heated air that rises upward in the unit by gravity.

This upper limit control provides protection in case of blower failure or excessive restriction in the system which prevents the movement of air. Usually the limit cut-out temperature is 140 F. with a differential of 25 F.

The switch in the upper limit control is an SPDT action. The normally closed contacts are located in series ahead of the high limit contacts in the electrical circuit. Therefore, if either limit is "open" the burner and control circuits become de-energized.

The upper limit does one other thing. When the limit contacts are open, the other normally open contacts then close. This completes a circuit directly to the blower motor starting the blower.

There are several reasons for this feature. One is to put the upper limit back in step if it should trip open from residual heat after the fan control has turned the blower off. It simply overrides the fan control to provide cool air on its own element. When the limit contacts reclose the blower contacts open, shutting off the blower.


A second reason is to back up the fan control timer if it should fail to operate as it should.

A third reason is that the upper limit control de-energizes the control circuit. Under some circumstances, this secondary limit could be open up to one hour preventing the control circuit from operating the fan timer or burner circuits. For the thermostat to do its job and get the furnace back in operation, power must be provided to the control circuit.


ADDITIVE COOLING RELAY

NOTE: When cooling is added to a standard furnace, an ADDITIVE COOLING RELAY is required. The line voltage side of this relay has a set of contacts which bypass the fan control, delivering power directly to the blower motor. The contacts are pulled in by a low voltage coil which is energized on a call for cooling from the thermostat or if the thermostat fan switch is set for constant blower operation. Note that electrically both the 24V and 120V circuits are completely independent, but one controls the other by pulling in its contacts.

The blower relay is necessary because on cooling, the temperature of the air being circulated through the system would be below the set point of the fan control and this would shut off and not allow the blower to run. Under cooling without the blower running, the evaporator coil would ice up and the condensing unit would go off on its limit control.

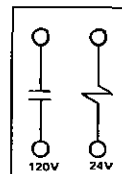

ADDITIVE COOLING RELAY

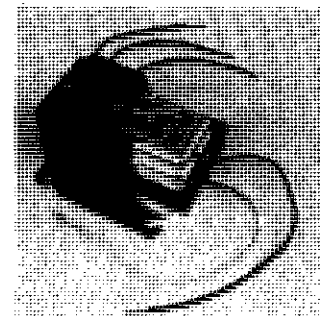

## 24 VOLT OR LOW VOLTAGE CONTROL CIRCUIT



In almost all residential forced warm-air heating systems, the control circuits are powered with low voltage (24 volts). There are several reasons for using low voltage: ease of installation; lower installation cost; closer (better) temperature control; and less possibility of electrical shocks.

### TRANSFORMER

In order to supply 24-volt power in control circuits, a "step-down" transformer is used. The line side is wired directly into the 115V power supply.

Basically a transformer consists of TWO coils of insulated wire wound on a common iron core. The coil connected to the line voltage or input side is the Primary Coil and the output or load side is always the Secondary. If the voltage on the line side is greater than that on the load side, it is a "step-down" transformer. If the voltage on the load side is greater than the line side it is a "step-up" transformer. Therefore to supply 24V on the load side from 115V line, a step-down transformer is used.


Transformers are always rated in Volt-Amperes (VA), which is the amount of electrical power (Volts x Amps) it can supply.

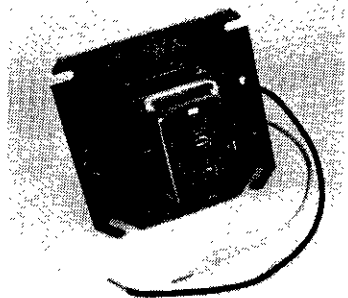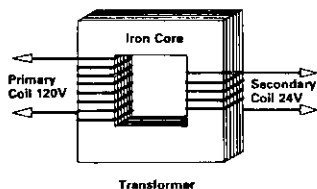

The transformer must be sized to handle the current (amperage) requirement of the load or loads connected to the secondary side of the transformer. The transformer selected may be LARGER than the load requirement, but the transformer can never be smaller than the load requirement (amp-draw). Short circuit protection for the 24V side of the transformer is provided in some cases by a replaceable fuse and in others as fusible link; the fusible link is built in and requires replacement of the entire transformer if it burns out.

### THERMOSTAT

The first load that will be attached to the low voltage circuit is the THERMOSTAT. Basic operation of the thermostat and its internal wiring has been discussed in a previous manual, and here the common leg will be connected to one side of the transformer and the fan and heating circuits will be connected to the other side of the transformer. The thermostat can now control the fan circuit independently from the heating and cooling circuits.

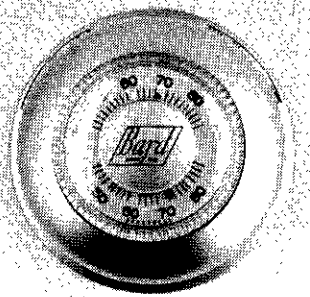

## BASIC MAINTENANCE PROCEDURES

Regularly scheduled basic maintenance calls are mutually beneficial to both the service firm and the homeowner/customer. Normally, this involves two maintenance calls per year—one in the fall prior to the heating season and one in the spring prior to the cooling season.

### MAINTENANCE CHECK SHEET

A Maintenance Check Sheet has been developed which has checklists for residential gas, oil and electric heating units and cooling systems and accessories. The check sheet has checklists which itemize the basic maintenance steps and assist in organizing the service tasks to be performed.

It is suggested the service person attach the check sheet to a clipboard and carry it to the service call. Filling in the checklists while proceeding with the call will ensure that all the necessary checks are performed efficiently. The check sheet should be completed in duplicate. One copy is for the customer; the check sheet folder copy is for the firm's reference file.

The check sheet also has other potential uses. For example, listing the make and model of the equipment gives the firm quick reference for service and parts information. And, by analyzing "time in and out", the firm can accumulate labor cost data on its planned service operation. It is a valuable sales tool for add-on and replacement and accessory business. Service personnel should always keep this important aspect in mind. Tips that generate sales will help you and your company grow. The maintenance sheet is a convenient means to document this information.

MAINTENANCE CHECKSHEET	
Date: _____	Address: _____
Customer: _____	Address: _____
Date: _____	Person: _____
Equipment Make & Model: _____	Time In: _____
Notes: _____	Time Out: _____
<p><b>PRL SERVICE CHECK</b></p> <p><input type="checkbox"/> Customer satisfied with system performance _____</p> <p><input type="checkbox"/> Customer dissatisfied with system performance _____</p>	
<p><b>THERMOSTAT CHECKS</b></p> <p><input type="checkbox"/> Record thermostat settings, Temp _____, Mode _____</p> <p><input type="checkbox"/> Check thermostat operation for lightness</p> <p><input type="checkbox"/> Clean thermostat, remove mercury switch</p> <p><input type="checkbox"/> Check thermostat fan level</p> <p><input type="checkbox"/> Check control circuit coverage _____</p> <p><input type="checkbox"/> If customer dissatisfied with temperature control of heating season, adjust thermostat fan and control, record air draw</p> <p><input type="checkbox"/> List site appropriate seasonal demand from thermostat</p>	
<p><b>BLOWER COMPARTMENT CHECKS</b></p> <p><input type="checkbox"/> Check supply voltage at junction box _____ vac</p> <p><input type="checkbox"/> Check blower motor amperage _____ A</p> <p><input type="checkbox"/> Turn power at unit main disconnect to OFF</p> <p><input type="checkbox"/> Check all wiring for loose connections and bad insulation</p> <p><input type="checkbox"/> Clean or change filter</p>	
<p><b>Direct Drive Blower</b></p> <p><input type="checkbox"/> Check blower bearings</p> <p><input type="checkbox"/> Clean blower and fan assembly</p> <p><input type="checkbox"/> Lubricate motor bearings</p> <p><input type="checkbox"/> Check all housing mounting and fasteners for tightness</p> <p><input type="checkbox"/> Unplug multi-bushings and out of way</p>	
<p><b>Fan Drive Blower</b></p> <p><input type="checkbox"/> Remove blower belt and check for wear</p> <p><input type="checkbox"/> Check motor bearings for wear</p> <p><input type="checkbox"/> Lubricate motor bearings</p> <p><input type="checkbox"/> Clean blower wheel bearings</p> <p><input type="checkbox"/> Clean blower and compartment</p> <p><input type="checkbox"/> Check blower wheel for free and unobstructed rotation</p> <p><input type="checkbox"/> Check pulley alignment</p> <p><input type="checkbox"/> Check motor and blower pulley set screws for tightness</p> <p><input type="checkbox"/> Fan belt slack on blower and motor pulley and check belt tension</p> <p><input type="checkbox"/> Make all blower housing and motor mounts for tightness</p>	
<p><b>HEATING SECTION CHECKS</b></p>	
<p><b>ELECTRIC</b></p> <p><input type="checkbox"/> Check electrical wiring - loose leads and insulation</p> <p><input type="checkbox"/> Check on air gaps in case of each element _____ amps</p> <p><input type="checkbox"/> Check total amperage draw of elements _____</p> <p><input type="checkbox"/> Check burner safety</p> <p><input type="checkbox"/> Return humidifier thermostat to any factory settings if present</p>	
<p><b>GAS</b></p> <p><input type="checkbox"/> Check all electrical wiring for loose connections and damaged insulation</p> <p><input type="checkbox"/> Check furnace for unit shut and safe</p> <p><input type="checkbox"/> Check for cracks in heat exchanger</p> <p><input type="checkbox"/> Check draft tube</p> <p><input type="checkbox"/> Check for smell, even burner operation</p> <p><input type="checkbox"/> Check venting for proper installation</p>	
<p><b>Standing Pilot</b></p> <p><input type="checkbox"/> Check thermopile open circuit _____ ohms</p> <p><input type="checkbox"/> Check pilot valve safety drop out time _____ min</p> <p><input type="checkbox"/> Check automatic vent damper system</p> <p><input type="checkbox"/> Check electronic spark ignition control</p> <p><input type="checkbox"/> Check safety lockout</p> <p><input type="checkbox"/> Check limit safety</p> <p><input type="checkbox"/> Check temperature rise _____ F</p> <p><input type="checkbox"/> Check furnace vent for rust</p> <p><input type="checkbox"/> Gas manifold hand valve is open before leaving</p>	
<p><b>OIL</b></p> <p><input type="checkbox"/> Check electrical wiring - connections and insulation</p> <p><input type="checkbox"/> Inspect combustion chamber</p> <p><input type="checkbox"/> Inspect for soot in heat exchanger</p> <p><input type="checkbox"/> Check fuel oil tank for sludge/water</p> <p><input type="checkbox"/> Change oil line filter</p> <p><input type="checkbox"/> Check oil lines</p> <p><input type="checkbox"/> Service oil burner</p> <p><input type="checkbox"/> Conduct combustion efficiency test</p> <p><input type="checkbox"/> Check limit safety</p> <p><input type="checkbox"/> Check temperature rise</p> <p><input type="checkbox"/> Check primary control</p> <p><input type="checkbox"/> Check furnace vent for rust</p>	
<p><b>COOLING</b></p> <p><input type="checkbox"/> Check electrical wiring - connections and insulation (indoor)</p> <p><input type="checkbox"/> Check clean evaporator coil</p> <p><input type="checkbox"/> Check drain condense rate drain</p> <p><input type="checkbox"/> Check status condenser fan in vac. atm. dry coil</p> <p><input type="checkbox"/> Check all gas connections and insulation (outdoor)</p> <p><input type="checkbox"/> Check clean condenser coil</p> <p><input type="checkbox"/> Lubricate condenser fan motor</p> <p><input type="checkbox"/> Check line set and connections for evidence of leaks</p> <p><input type="checkbox"/> Check and correct suction voltage</p> <p><input type="checkbox"/> Check oil charge and oil charge</p> <p><input type="checkbox"/> Check air in air draw or condenser fan motor</p> <p><input type="checkbox"/> Check amp draw on compressor</p>	
<p><b>HUMIDIFIER</b></p> <p><input type="checkbox"/> Check electrical wiring - connections and insulation</p> <p><input type="checkbox"/> Check fan blower motor</p> <p><input type="checkbox"/> Check damper operation</p> <p><input type="checkbox"/> Check control valve - correct TYPE</p> <p><input type="checkbox"/> Check humidifier water</p> <p><input type="checkbox"/> Check humidifier pattern</p> <p><input type="checkbox"/> Check for free rotation and scale</p> <p><input type="checkbox"/> Check water meter adjustment</p> <p><input type="checkbox"/> Check water flow line</p>	
<p><b>ELECTRONIC AIR CLEANER</b></p> <p><input type="checkbox"/> Check electrical wiring - connections and insulation</p> <p><input type="checkbox"/> Check wet wash for electrical blower interlock</p> <p><input type="checkbox"/> Check unit built-in pressure</p> <p><input type="checkbox"/> Check fan motor voltage</p> <p><input type="checkbox"/> Check voltage in collecting plates _____ vac. 1120-1400</p> <p><input type="checkbox"/> Check fan motor connections in vac. _____ vac. 6000-6800</p> <p><input type="checkbox"/> Check fan oil GFI</p> <p><input type="checkbox"/> Wash tank</p> <p><input type="checkbox"/> Wash prefilter screens</p>	
<p><b>POST SERVICE CHECKS</b></p> <p><input type="checkbox"/> Return humidifier to original settings recorded at beginning of service call</p> <p><input type="checkbox"/> Return fan if computerized checklist with customer</p> <p><input type="checkbox"/> Power ON before leaving</p>	



# MAINTENANCE CHECKSHEET

Dealer \_\_\_\_\_ Address \_\_\_\_\_  
 Customer \_\_\_\_\_ Address \_\_\_\_\_  
 Date \_\_\_\_\_ Person \_\_\_\_\_ Time In \_\_\_\_\_ Time Out \_\_\_\_\_  
 Equipment Make & Model \_\_\_\_\_  
 Notes \_\_\_\_\_

## PRE-SERVICE CHECK

- Customer satisfied with system performance: \_\_\_\_\_
- Customer dissatisfied with system performance: \_\_\_\_\_

## THERMOSTAT CHECKS

- Record thermostat settings: Temp: \_\_\_\_\_ °F. Mode: HEAT  OFF  COOL FAN:  ON  AUTO
- Check terminal connections for tightness
- Clean bimetal. Inspect mercury switch
- Check thermostat for level
- Check control circuit amperage: \_\_\_\_\_ A
- If customer dissatisfied with temperature control in heating season, adjust anticipator to match control circuit amp draw
- Initiate appropriate seasonal demand from thermostat

## BLOWER COMPARTMENT CHECKS

- Check supply voltage at junction box: \_\_\_\_\_ vac \_\_\_\_\_ time
- Check blower motor amperage: \_\_\_\_\_ A \_\_\_\_\_ nameplate rating
- Turn power at unit main disconnect to OFF
- Check all wiring for loose connections and bad insulation
- Clean or change filter

### Direct Drive Blower

- Check blower bearings
- Lubricate blower bearings
- Clean blower and compartment
- Check blower wheel for free and balanced rotation
- Check all blower housing mounts and setscrews for tightness
- Unused motor leads taped and out of way

### Belt Drive Blower

- Remove blower belt and check for wear
- Check motor bearings for wear
- Lubricate motor bearings
- Check blower wheel bearings for wear
- Lubricate blower wheel bearings
- Clean blower and compartment
- Check blower wheel for free and balanced rotation
- Check pulley alignment
- Check motor and blower pulley setscrews for tightness
- Put belt back on blower and motor pulley and check belt tension
- Check all blower housing and motor mounts for tightness

## HEATING SECTION CHECKS

### ELECTRIC

- Check electrical wiring -- connections and insulation
- Check amperage draw of each element
- Check total amperage draw of elements \_\_\_\_\_ amps
- Check temperature rise \_\_\_\_\_ °F.
- Return outdoor thermostats to original settings if present

### GAS

- Check all electrical wiring for loose connections and damaged insulation
- Check burners for lint, dust and scale
- Check for cracks in heat exchanger
- Check pilot flame
- Check for quiet, even burner ignition
- Check manifold gas pressure NAT. \_\_\_\_\_ in. wc. L.P. \_\_\_\_\_ in. wc.

## Standing Pilot

- Check thermocouple open circuit \_\_\_\_\_ dcmv closed circuit \_\_\_\_\_ dcmv
- Check pilot valve safety drop-out time \_\_\_\_\_ min.
- Check automatic vent damper system
- Check electronic spark ignition control
- Check safety lockout
- Check limit safety
- Check temperature rise \_\_\_\_\_ F.
- Check draft diverter
- Check furnace vent for rust
- Gas manifold hand valve is open before leaving

## OIL

- Check electrical wiring -- connections and insulation
- Inspect combustion chamber
- Inspect for soot in heat exchanger
- Check fuel oil tank for sludge/water
- Change oil line filter
- Check oil lines
- Service oil burner
- Conduct combustion efficiency test \_\_\_\_\_ in. wc. \_\_\_\_\_ smoke \_\_\_\_\_ % CO<sub>2</sub> \_\_\_\_\_ °F. net
- Check limit safety
- Check temperature rise
- Check primary control
- Check furnace vent for rust

## COOLING

- Check electrical wiring -connections and insulation (indoor)
- Check/clean evaporator coil
- Check/clean condensate drain
- Check static pressure drop \_\_\_\_\_ in. wc. \_\_\_\_\_ cfm (dry coil)
- Check wiring -- connections and insulation (outdoor)
- Check/clean condenser coil
- Lubricate condenser fan motor
- Check line set and connections for evidence of leaks
- Check and record supply voltage
- Check refrigerant charge
- Check amperage draw on condenser fan motor
- Check amperage draw on compressor

## HUMIDIFIER

- Check electrical wiring -- connections and insulation
- Check transformer voltage \_\_\_\_\_ vac
- Check damper position

### SPRAY TYPE

- Check solenoid valve
- Check nozzle spray pattern

### DRUM TYPE

- Check for free rotation and scale
- Check water level adjustment
- Check overflow/drain line

## ELECTRONIC AIR CLEANER

- Check electrical wiring -- connections and insulation
- Check sail switch or electrical blower interlock
- Check test button operation
- Check supply voltage \_\_\_\_\_ vac (120 vac)
- Check voltage to collecting plates \_\_\_\_\_ vdc (3500 vdc)
- Check voltage to ionization wires \_\_\_\_\_ vdc (8000 vdc)
- TURN POWER OFF
- Wash cells
- Wash prefilter screens

## POST-SERVICE CHECKS

- Return thermostat to original settings recorded at beginning of service call
- Leave copy of completed checksheet with customer
- Power ON before leaving

The checks common to all heating and cooling units, namely those at the thermostat, blower and filter, will now be covered.



Talk to the Homeowner

PRE-SERVICE CHECK

- Customer satisfied with system performance:
- Customer dissatisfied with system performance:
  1. The planned service appointment should be scheduled in advance so that arrangements can be made to gain access to the comfort equipment.
  2. Prior to beginning the maintenance checks, the service person should ask the customer how the system is performing. This will help get a reading on current system operation and pinpoint possible problems to investigate and correct.
  3. If the customer indicates satisfaction with the system operation, the service person can concentrate on the routine maintenance checks.

THERMOSTAT

- Record thermostat settings:
 

Temp.: \_\_\_\_\_ °F; mode:       HEAT       OFF

COOL; fan switch:     ON       AUTO.

  1. Recording these settings will enable service person to reset thermostat to customer's desires at end of service call.
  2. Some electric units may also employ an outdoor thermostat for multiple staging of heat elements (see Electric Heat Section). Record outdoor thermostat setting.
- Check terminal connections for tightness.
  1. Remove thermostat cover.
  2. Tighten terminal connections if necessary.
- Clean bimetal.
  1. Carefully remove dust and dirt from bimetal with soft brush or by blowing on it.
  2. Inspect the mercury switch for cracks in the glass bulb and brush away any accumulated dust. If mercury switch is damaged, discuss problem with homeowner and notify sales manager.
- Check thermostat for level.
  1. Place level on thermostat and adjust thermostat position if not perfectly level. A level thermostat is a necessity for precise temperature control.


Check control circuit amperage: \_\_\_\_\_ amps.

1. Single-stage heating or cooling thermostat: Connect one clip of 10 loop amperage multiplier to "power from transformer" thermostat terminal; connect other multiplier clip to "heating" thermostat terminal if checking heating system or "cooling" terminal if checking cooling system; snap amprobe jaws around multiplier coil and record actual amperage draw (move decimal point of amprobe reading one place to the left to obtain actual amp draw, i.e. 4.5 reading = .45 actual amp draw).
2. With two-stage heating thermostat: Check first stage circuit amperage using method outlined above for single thermostat.



To check second stage circuit amperage, attach one jumper wire clip to power terminal and other clip to "first stage heat" terminals; attach one amperage multiplier clip to "power" terminal; connect other multiplier clip to the "second stage heating" thermostat terminal; record actual amperage draw (by adjusting reading one decimal to the left).

If customer is dissatisfied with temperature control in heating season, adjust heat anticipator setting to match control circuit amp draw reading.

1. If customer is satisfied with temperature control, do not adjust anticipator and proceed with next service check.

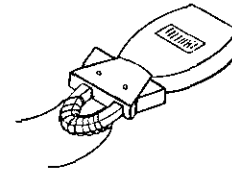

2. If during the heating season the customer complains of being too hot even after the furnace has cycled off, the heat anticipator setting should be adjusted to shorten the furnace's "on" cycle; if the customer is too cool, the anticipator should be adjusted to lengthen the "on" cycle. (The cooling anticipator is usually nonadjustable. Review thermostat manual for details on anticipator adjustment).

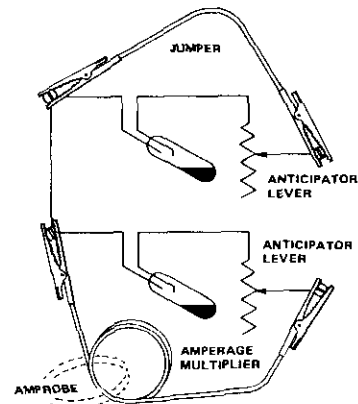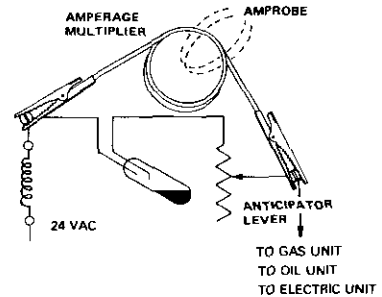

- Initiate appropriate seasonal demand from thermostat with fan switch on AUTO:     HEAT     COOL
1. If making heating unit checks, demand is created by turning thermostat to highest setting with mode switch on HEAT.
  2. If making cooling system checks, demand is created by turning thermostat to lowest setting with mode switch on COOL.
  3. If the electric furnace employs an outdoor thermostat for staging of heat elements, set the dial at its highest setting to initiate a multiple stage demand. Return dial to original set points before leaving the site.

**BLOWER COMPARTMENT CHECKS**

- Check supply voltage at unit junction box:  
 \_\_\_\_\_ vac    \_\_\_\_\_ time
1. Remove access doors on front of unit.
  2. Set volt-ohm meter above 120 vac.
  3. Attach volt-ohm meter probes to incoming line voltage and neutral wires in junction box.
- Check blower motor amperate: \_\_\_\_\_ A  
 \_\_\_\_\_ nameplate A rating
1. Snap amprobe around neutral or common wire leading to the blower motor.
  2. In order to simulate the true operating condition, put blower compartment door in place. Leave a small opening to allow for reading the amprobe.
  3. Compare amp reading with amp rating on motor nameplate. An excessive amp draw reading is a clue the motor is working too hard. Possible causes:  
 Extremely dirty motor prevents air from dissipating heat and motor runs hot. Seized or worn bearings cause excess pull or drag; motor (and/or pulley on belt drive blowers) improperly sized in relation to blower wheel. Poorly designed system application.  
 If following service checks do not alleviate high motor amperage, refer problem to residential equipment troubleshooter or Service Manager.
4. Remove blower compartment door.

- Turn power at unit main disconnect to OFF.
- Check all wiring for loose connections and bad insulation.
1. Tighten loose connections. Wrap electrical tape around wires with cracked or worn insulation.
- Clean or change filter.

NOTE: SEE UNIT INSTALLATION INSTRUCTIONS FOR REMOVING FILTERS FROM DOWNFLOW FURNACES.

**NONDISPOSABLE SLAB (POLYURETHANE)**

1. Remove filter from unit.
2. Remove media from frame.
3. Wash or vacuum media.
4. If media is washed, use hot water and detergent.
5. Squeeze water from media, put in frame and coat side of media opposite the blower with a filter spray (the oil spray enhances collection of dirt particles).
6. Place filter back into unit.


**DISPOSABLE SLAB (FIBERGLASS/CARDBOARD)**

1. Remove filter from unit.
2. Wrap in newspaper and discard.
3. Place new filter of same size in unit. Make sure filter is placed so that arrows on filter frame agree with system air flow, if applicable.

**DIRECT DRIVE BLOWER**

**WARNING**

Be sure power to furnace is OFF.

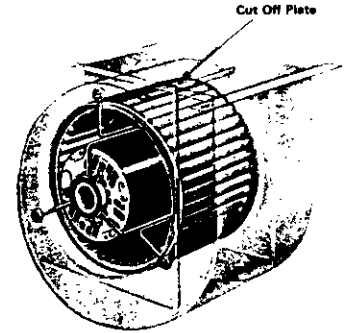

Direct Drive Blower Showing Cut Off Plate

- Check blower motor bearings.
1. Grasp blower wheel and move in back and forth and up and down directions.
  2. There should be no more than 1/8 inch back and forth movement; there should not be any up and down movement.
  3. If there is movement, bearings are wearing. Service person should inform customer of bearing condition. If problem is severe, blower motor should be replaced. Notify service manager.
- Lubricate blower motor bearings.
1. Check motor for service instructions and lubrication instructions in unit installation instruction manual.
  2. Pre-lubricated motor bearings with oil ports require a few drops of SAE No. 10 nondetergent oil every two years.

**CAUTION**

Do not over lubricate motor bearings. Excessive oil attracts dust and dirt.

- Clean blower compartment.

**CAUTION**

Do not dislodge balance weights attached to blower wheel blades.



Balance Weight Clip

1. Remove dust and dirt from air scoops or vanes of blower wheel. This may be done with moist rag or vacuum.
2. If blower is excessively dirty, it should be removed from unit and thoroughly washed/cleaned using high pressure hose. Remove motor from blower assembly when washing blower. Make sure motor is completely dry before it is put back into operation.

NOTE: It is necessary to remove cut-off plate when removing motor. Be sure to replace plate before replacing motor to ensure proper air flow.

- Check blower wheel for free and balanced rotation.
  1. Spin wheel. If wheel is badly out of balance or hits against housing, blower should be replaced. Notify Service Manager.
  2. If dislodged balance weights are found, place them in exact location they formerly occupied. Look for scratches on blades to show where weight clip was attached.
 

When wheel is spun, the heavier side will fall to bottom. This means the side minus the weight is probably on top. If the old location cannot be found, leave weights off rather than risk further imbalance by incorrect placement.
  3. If blower was removed for cleaning, reinstall at this time.
- Check all blower housing mounts and setscrews for tightness.
- Check that unused motor leads are taped and out of the way.

**BELT DRIVE MOTOR**

**WARNING**

Be sure power to furnace is OFF

- Remove belt and check for wear.
  1. Loosen motor mount and push motor toward blower wheel.
  2. Remove belt by sliding it off the pulleys.
  3. Check for wear by turning belt inside out and looking for splits and cracks in the rubber.
  4. Replace belt if there are signs of wear. (Leave belt off to perform the following checks; you will be instructed when to put it back on).
- Check motor bearings for wear.
  1. Grasp motor pulley.
  2. Push pulley in inward and outward directions. Assuming the pulley is mounted tightly to the motor shaft or drive, there should be no more than 1/8 inch movement or play in either direction.
  3. Move pulley in up and down directions. There should be no movement in either direction.
  4. If there is movement in motor shaft, bearings are wearing. Service person should inform customer of bearing condition. If problem is severe, motor should be replaced. Notify Service Manager.
- Lubricate motor bearings.
  1. Check motor for service instructions and lubrication instruction in unit installation manual.
  2. Prelubricated bearings require a few drops of SAE No. 10 nondetergent oil every two years.
 

**CAUTION**

Do not over-lubricate motor bearings. Excessive lubrication attracts dirt and dust. Oil splash on the belt causes shortened belt life.
  3. Motor bearings with oil cups or holes: Add a few drops of automotive 10 nondetergent oil.
- Check blower wheel bearings for wear.
  1. Grasp blower pulley and move in up and down directions; also push in and out. There should be no movement in any direction if the pulley is mounted tightly to the blower shaft.

2. Grasp shaft and test bearings on opposite side of blower wheel. There should be no movement.
3. If there is in and out movement on either side, move locking collars on the affected side closer to bearing as follows:
 

On the pulley side, loosen set screw on shaft and remove pulley.

Loosen collar set screw and move collar snugly against bearing housing. Tighten collar setscrew.
4. If there is still movement, bearings are worn. Inform customer of bearing condition. If problem is severe, blower bearings should be replaced. Notify Service Manager.

Lubricate blower wheel bearings.

1. Bearings with no lubricant fittings: These are permanently sealed and lubricated and require no service.
2. Bearings with grease cups: Turn grease cup down approximately one turn yearly; when cups are turned to the bottom, refill with lubricant.

Bearings with grease plugs: These are normally pre-lubricated and require lubrication about every two years. If lubricant is required, use No. 2 neutral mineral grease. Check lubrication instruction.

Clean blower and compartment.

1. Remove dirt from air scoops or vanes of blower wheel. This may be done with moist rag or vacuum.
2. If blower is excessively dirty, it should be removed and thoroughly washed/cleaned using high pressure hose. Remove motor from blower assembly before washing blower. Make sure motor is completely dry before it is put back into operation.

Check blower wheel for free and balanced rotation.

1. Spin wheel. If wheel is badly out of balance or hits against housing, blower should be replaced.
2. If dislodged balance weights are found, place them in exact location they formerly occupied. Look for scratches on blades to show where weight clip was attached.
 


When wheel is spun, the heavier side will fall to bottom. This means the side minus the weight is probably on top. If old location cannot be found, leave weights off rather than risk further imbalance by incorrect placement.
3. If blower was removed from unit for cleaning, reinstall at this time.

Check pulley alignment

1. Check alignment by placing a straight rod across grooves of the motor and blower pulleys.
2. If grooves of pulleys do not line up, loosen shaft setscrew and move motor pulley until it is aligned with blower pulley.
3. Tighten motor pulley setscrew and recheck alignment.


Check motor and blower pulley setscrews for tightness.

An adjustable motor pulley has two setscrews; one to tighten the adjustable pulley sheave and one to tighten the pulley to the motor shaft.

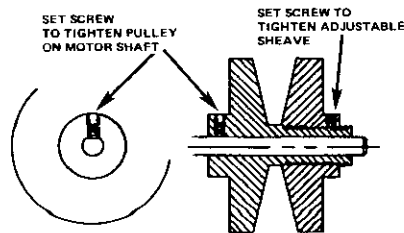

Put belt back on blower and motor pulleys and check belt tension.

1. Place belt around pulleys.
2. Adjust motor mount to tighten belt.
3. Check tension by pushing down on belt half-way between pulleys. Belt should move or deflect from 3/4" to 1".

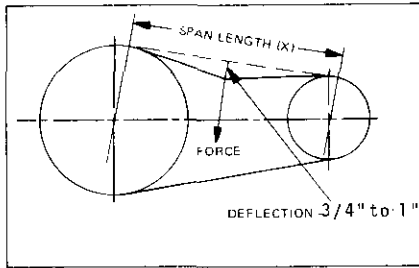

4. When proper tension is obtained, tighten adjustable motor mount.


Check all blower housing and motor mounts for tightness.

**POST-SERVICE CHECKS**


- Return thermostat(s) to original setting(s) recorded at beginning of service call.
- Leave copy of completed check sheet with customer.
- Power ON before leaving.
  1. Be sure unit disconnect has been turned ON before leaving to avoid a needless, time consuming callback.
- Leave all service areas neat and clean.

**HEAT SECTION CHECKS**

These are discussed individually, according to type of fuel used, in the next sections.

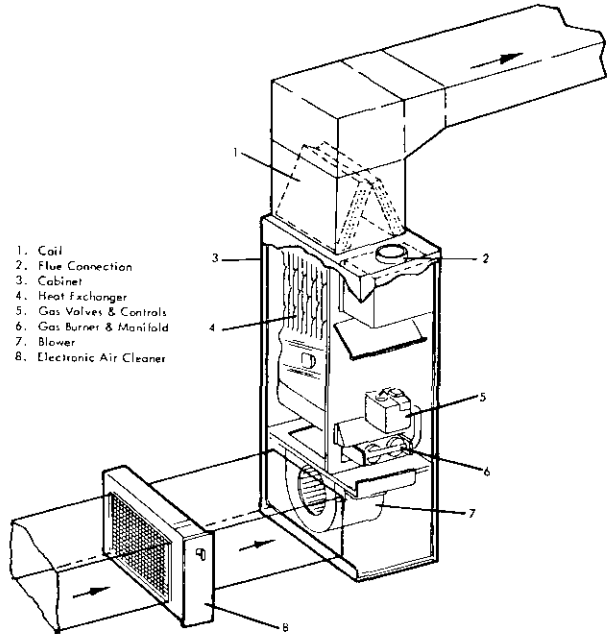

With properly designed systems, add-on equipment and components will increase the degree of comfort produced for the homeowner.

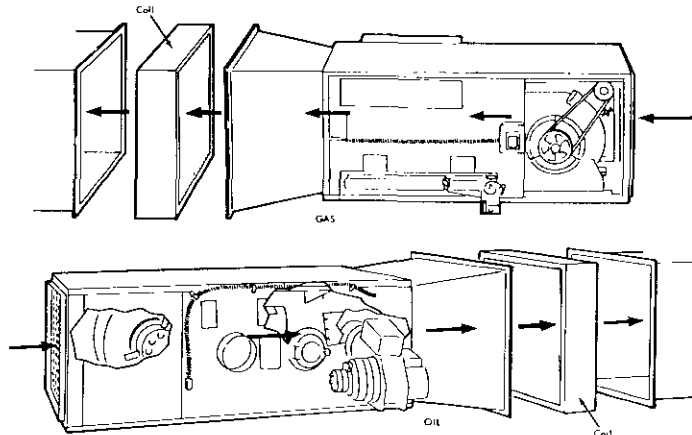

Illustrated here are typical gas-fired and oil-burning horizontal furnaces.

# MAINTENANCE CHECKSHEET

Dealer \_\_\_\_\_ Address \_\_\_\_\_  
Customer \_\_\_\_\_ Address \_\_\_\_\_  
Date \_\_\_\_\_ Person \_\_\_\_\_ Time In \_\_\_\_\_ Time Out \_\_\_\_\_  
Equipment Make & Model \_\_\_\_\_  
Notes \_\_\_\_\_

## PRE-SERVICE CHECK

- Customer satisfied with system performance: \_\_\_\_\_
- Customer dissatisfied with system performance: \_\_\_\_\_

## THERMOSTAT CHECKS

- Record thermostat settings: Temp: \_\_\_\_\_ °F. Mode: HEAT OFF COOL FAN: ON AUTO
- Check terminal connections for tightness
- Clean bimetal. Inspect mercury switch
- Check thermostat for level
- Check control circuit amperage: \_\_\_\_\_ A
- If customer dissatisfied with temperature control in heating season, adjust anticipator to match control circuit amp draw
- Initiate appropriate seasonal demand from thermostat

## BLOWER COMPARTMENT CHECKS

- Check supply voltage at junction box: \_\_\_\_\_ vac \_\_\_\_\_ time
- Check blower motor amperage: \_\_\_\_\_ A \_\_\_\_\_ nameplate rating
- Turn power at unit main disconnect to OFF
- Check all wiring for loose connections and bad insulation
- Clean or change filter

### Direct Drive Blower

- Check blower bearings
- Lubricate blower bearings
- Clean blower and compartment
- Check blower wheel for free and balanced rotation
- Check all blower housing mounts and setscrews for tightness
- Unused motor leads taped and out of way

### Belt Drive Blower

- Remove blower belt and check for wear
- Check motor bearings for wear
- Lubricate motor bearings
- Check blower wheel bearings for wear
- Lubricate blower wheel bearings
- Clean blower and compartment
- Check blower wheel for free and balanced rotation
- Check pulley alignment
- Check motor and blower pulley setscrews for tightness
- Put belt back on blower and motor pulley and check belt tension
- Check all blower housing and motor mounts for tightness

## HEATING SECTION CHECKS

### ELECTRIC

- Check electrical wiring -- connections and insulation
- Check amperage draw of each element
- Check total amperage draw of elements \_\_\_\_\_ amps
- Check temperature rise \_\_\_\_\_ °F.
- Return outdoor thermostats to original settings if present

### GAS

- Check all electrical wiring for loose connections and damaged insulation
- Check burners for lint, dust and scale
- Check for cracks in heat exchanger
- Check pilot flame
- Check for quiet, even burner ignition
- Check manifold gas pressure NAT \_\_\_\_\_ in. wc. L.P. \_\_\_\_\_ in. wc.

## Standing Pilot

- Check thermocouple open circuit \_\_\_\_\_ dcmv closed circuit \_\_\_\_\_ dcmv
- Check pilot valve safety drop-out time \_\_\_\_\_ min.
- Check automatic vent damper system
- Check electronic spark ignition control
- Check safety lockout
- Check limit safety
- Check temperature rise \_\_\_\_\_ °F.
- Check draft diverter
- Check furnace vent for rust
- Gas manifold hand valve is open before leaving

## OIL

- Check electrical wiring -- connections and insulation
- Inspect combustion chamber
- Inspect for soot in heat exchanger
- Check fuel oil tank for sludge/water
- Change oil line filter
- Check oil lines
- Service oil burner
- Conduct combustion efficiency test \_\_\_\_\_ in. wc. \_\_\_\_\_ smoke \_\_\_\_\_ % CO<sub>2</sub> \_\_\_\_\_ °F. net
- Check limit safety
- Check temperature rise
- Check primary control
- Check furnace vent for rust

## COOLING

- Check electrical wiring -- connections and insulation (indoor)
- Check/clean evaporator coil
- Check/clean condensate drain
- Check static pressure drop \_\_\_\_\_ in. wc. \_\_\_\_\_ cfm (dry coil)
- Check wiring -- connections and insulation (outdoor)
- Check/clean condenser coil
- Lubricate condenser fan motor
- Check line set and connections for evidence of leaks
- Check and record supply voltage
- Check refrigerant charge
- Check amperage draw on condenser fan motor
- Check amperage draw on compressor

## HUMIDIFIER

- Check electrical wiring -- connections and insulation
- Check transformer voltage \_\_\_\_\_ vac
- Check damper position

### SPRAY TYPE

- Check solenoid valve
- Check nozzle spray pattern

### DRUM TYPE

- Check for free rotation and scale
- Check water level adjustment
- Check overflow/drain line

## ELECTRONIC AIR CLEANER

- Check electrical wiring -- connections and insulation
- Check sail switch or electrical blower interlock
- Check test button operation
- Check supply voltage \_\_\_\_\_ vac (120 vac)
- Check voltage to collecting plates \_\_\_\_\_ vdc (3500 vdc)
- Check voltage to ionization wires \_\_\_\_\_ vdc (8000 vdc)
- TURN POWER OFF
- Wash cells
- Wash prefilter screens

## POST-SERVICE CHECKS

- Return thermostat to original settings recorded at beginning of service call
- Leave copy of completed checksheet with customer
- Power ON before leaving

# MAINTENANCE CHECKSHEET

Dealer \_\_\_\_\_ Address \_\_\_\_\_  
Customer \_\_\_\_\_ Address \_\_\_\_\_  
Date \_\_\_\_\_ Person \_\_\_\_\_ Time In \_\_\_\_\_ Time Out \_\_\_\_\_  
Equipment Make & Model \_\_\_\_\_  
Notes \_\_\_\_\_

## PRE-SERVICE CHECK

- Customer satisfied with system performance: \_\_\_\_\_
- Customer dissatisfied with system performance: \_\_\_\_\_

## THERMOSTAT CHECKS

- Record thermostat settings: Temp: \_\_\_\_\_ F. Mode: HEAT OFF COOL FAN: ON AUTO
- Check terminal connections for tightness
- Clean bimetal. Inspect mercury switch
- Check thermostat for level
- Check control circuit amperage: \_\_\_\_\_ A
- If customer dissatisfied with temperature control in heating season, adjust anticipator to match control circuit amp draw
- Initiate appropriate seasonal demand from thermostat

## BLOWER COMPARTMENT CHECKS

- Check supply voltage at junction box: \_\_\_\_\_ vac time
- Check blower motor amperage: \_\_\_\_\_ A nameplate rating
- Turn power at unit main disconnect to OFF
- Check all wiring for loose connections and bad insulation
- Clean or change filter

### Direct Drive Blower

- Check blower bearings
- Lubricate blower bearings
- Clean blower and compartment
- Check blower wheel for free and balanced rotation
- Check all blower housing mounts and setscrews for tightness
- Unused motor leads taped and out of way

### Belt Drive Blower

- Remove blower belt and check for wear
- Check motor bearings for wear
- Lubricate motor bearings
- Check blower wheel bearings for wear
- Lubricate blower wheel bearings
- Clean blower and compartment
- Check blower wheel for free and balanced rotation
- Check pulley alignment
- Check motor and blower pulley setscrews for tightness
- Put belt back on blower and motor pulley and check belt tension
- Check all blower housing and motor mounts for tightness

## HEATING SECTION CHECKS

### ELECTRIC

- Check electrical wiring -- connections and insulation
- Check amperage draw of each element
- Check total amperage draw of elements \_\_\_\_\_ amps
- Check temperature rise \_\_\_\_\_ °F.
- Return outdoor thermostats to original settings if present

### GAS

- Check all electrical wiring for loose connections and damaged insulation
- Check burners for lint, dust and scale
- Check for cracks in heat exchanger
- Check pilot flame
- Check for quiet, even burner ignition
- Check manifold gas pressure NAT. \_\_\_\_\_ in. wc. L.P. \_\_\_\_\_ in. wc.

## Standing Pilot

- Check thermocouple open circuit \_\_\_\_\_ dcmv closed circuit \_\_\_\_\_ dcmv
- Check pilot valve safety drop-out time \_\_\_\_\_ min.
- Check automatic vent damper system
- Check electronic spark ignition control
- Check safety lockout
- Check limit safety
- Check temperature rise \_\_\_\_\_ F.
- Check draft diverter
- Check furnace vent for rust
- Gas manifold hand valve is open before leaving

## OIL

- Check electrical wiring -- connections and insulation
- Inspect combustion chamber
- Inspect for soot in heat exchanger
- Check fuel oil tank for sludge/water
- Change oil line filter
- Check oil lines
- Service oil burner
- Conduct combustion efficiency test \_\_\_\_\_ in wc. \_\_\_\_\_ smoke \_\_\_\_\_ % CO<sub>2</sub> \_\_\_\_\_ °F. net
- Check limit safety
- Check temperature rise
- Check primary control
- Check furnace vent for rust

## COOLING

- Check electrical wiring -- connections and insulation (indoor)
- Check/clean evaporator coil
- Check/clean condensate drain
- Check static pressure drop \_\_\_\_\_ in. wc. \_\_\_\_\_ cfm (dry coil)
- Check wiring -- connections and insulation (outdoor)
- Check/clean condenser coil
- Lubricate condenser fan motor
- Check line set and connections for evidence of leaks
- Check and record supply voltage
- Check refrigerant charge
- Check amperage draw on condenser fan motor
- Check amperage draw on compressor

## HUMIDIFIER

- Check electrical wiring -- connections and insulation
- Check transformer voltage \_\_\_\_\_ vac
- Check damper position

### SPRAY TYPE

- Check solenoid valve
- Check nozzle spray pattern

### DRUM TYPE

- Check for free rotation and scale
- Check water level adjustment
- Check overflow/drain line

## ELECTRONIC AIR CLEANER

- Check electrical wiring -- connections and insulation
- Check saf switch or electrical blower interlock
- Check test button operation
- Check supply voltage \_\_\_\_\_ vac (120 vac)
- Check voltage to collecting plates \_\_\_\_\_ vdc (3500 vdc)
- Check voltage to ionization wires \_\_\_\_\_ vdc (8000 vdc)
- TURN POWER OFF
- Wash cells
- Wash prefilter screens

## POST-SERVICE CHECKS

- Return thermostat to original settings recorded at beginning of service call
- Leave copy of completed checksheet with customer
- Power ON before leaving