

INSTALLATION INSTRUCTIONS

SINGLE PACKAGE AIR CONDITIONERS

MODELS

P1142A2

P1148A1

P1060A1

**FOR RESIDENTIAL AND COMMERCIAL
HEATING/COOLING APPLICATIONS**

**MANUAL 2100-233 REV.
SUPERSEDES REV.
FILE VOL. II, TAB 10**

SECTION 1 --GETTING OTHER INFORMATION AND PUBLICATIONS

These publications can help you install the air conditioner or heat pump. You can usually find these at your local library or purchase them directly from the publisher. Be sure to consult current edition of each standard.

National Electrical Code	-ANSI/NFPA 70
Standard For The Installation Of Air Conditioning and Ventilating Systems	-ANSI/NFPA 90A
Standard For Warm Air Heating and Air Conditioning Systems	-ANSI/NFPA 90B
Load Calculation For Residential Winter and Summer Air Conditioning	-ACCA Manual J
Duct Design For Residential Winter and Summer Air Conditioning and Equipment Selection	-ACCA Manual D

FOR MORE INFORMATION, CONTACT THESE PUBLISHERS

ACCA:	AIR CONDITIONING CONTRACTORS OF AMERICA 1513 16th Street NW Washington, DC 20036 Telephone: (202) 483-9370	Fax: (202) 234-4721
ANSI:	AMERICAN NATIONAL STANDARDS INSTITUTE 11 West Street, 13th Floor New York, NY 10036 Telephone: (212) 642-4900	Fax: (212) 302-1286
ASHRAE:	AMERICAN SOCIETY OF HEATING REFRIGERATING AND AIR CONDITIONING ENGINEERS, INCORPORATED 1791 Tullie Circle, N.E. Atlanta, GA 30329-2305 Telephone: (404) 636-8400	Fax: (404) 321-5478
NFPA:	NATIONAL FIRE PROTECTION ASSOCIATION Batterymarch Park P. O. Box 9101 Quincy, MA 02269-9901 Telephone: (800) 344-3555	Fax: (617) 984-7057

COPYRIGHT JULY, 1993
BARD MANUFACTURING COMPANY
BRYAN, OH 43506 USA

TABLE OF CONTENTS

I.	General Instructions.	1
	A. Important	2
	B. Shipping Damage	2
	C. General	2
	D. Field Installed Heater Packages (Optional).	3
	E. Roof Curbs (Optional)	4
II.	Installation.	5
	A. Location.	5
	B. Typical Installations	7
	C. Condensate Drain Trap	8
	D. Air Filters	8
	E. Wiring.	8
	1. Main Power.	8
	2. 24V Low Voltage Control Circuit	9
	3. Thermostats	9
	4. Transformer Taps.	10
III.	Startup and Operation	10
	A. Three Phase Scroll Compressor Startup Information	10
	B. Sequence of Operation	10
	D. Startup Notes	10
IV.	Service and Troubleshooting	11
	A. Service Hints	11
	B. Pressure Service Ports.	11
	C. Refrigerant Charge.	11
	D. Fan Blade Settings.	11
	G. Suction and Discharge Tube Brazing.	12
	H. Discharge (Top Cap) Thermostat.	12
	I. Pressure Tables	14

FIGURES AND TABLES

Figure 1	4
Figure 2	4
Figure 3	6
Figure 4	6
Figure 5	6
Figure 6	6
Figure 7	8
Figure 8	9
Figure 9	11
Figure 10.	12
Figure 11.	13
Figure 12.	13

Table 1	1
Table 2	1
Table 3	2
Table 4	3
Table 5	5
Table 5A	5
Table 6	8
Table 7	9
Table 8	9
Table 9	11
Table 10	14

**TABLE 1
ELECTRICAL DATA**

Model	Rated Volts & PH	Operating Voltage Range	Max. Unit Amps	Req'd. Maximum External Fuses Or Ckt. Brk *	Minimum Circuit Ampacity	Field Power Wiring**	Ground Wire Size**
				Ckt. A	Ckt. A	Ckt. A	Ckt. A
P1142A2	230/208-1	197-253	23.7	50	31	8	10
P1148A1	230/208-1	197-253	26.1	50	36	8	10
P1148A1-B	230/208-3	187-253	18.8	35	23	8	10
P1148A1-C	460-3	414-506	8.5	20	13	12	12
P1060A1	230/208-1	197-253	33.9	60	42	8	10
P1060A1-B	230/208-3	187-253	23.7	45	28	8	10
P1060A1-C	460-3	414-506	11.2	20	14	12	12

*Maximum time delay fuse or HACR type circuit breaker. HACR type not applicable to 460 volt.
 **75°C copper wire size, basic unit only.

**TABLE 2
OPTIONAL FIELD INSTALLED HEATER PACKAGES
ARE ONLY TO BE USED WITH THE HEAT PUMP MODELS AS INDICATED BELOW**

Heater Package Model No.	Volts and Phase	P	P	P	P	P	P	P
		1	1	1	1	1	1	1
		1	1	1	1	0	0	0
		4	4	4	4	6	6	6
		2	8	8	8	0	0	0
		A	A	A	A	A	A	A
		2	1	1	1	1	1	1
				B	C		B	C
EH5PB-A05	240/1	S	S	A	A	S	A	A
EH5PB-A10		S	S	A	A	S	A	A
EH5PB-A15		S	S	A	A	S	A	A
EH5PB-A20		S	S	A	A	S	A	A
EH5PB-B09	240/3		A	S	A	A	S	A
EH5PB-B15			A	S	A	A	S	A
EH5PB-B18			A	S	A	A	S	A
EH5PB-C09	480/3		A	A	S	A	A	S
EH5PB-C15			A	A	S	A	A	S
EH5PB-C18			A	A	S	A	A	S

S Standard application--Heater volts and phase same as basic unit.
 A Alternate application--Heater volts and phase different from basic unit.

**TABLE 3
OPTIONAL FIELD-INSTALLED ELECTRIC HEATER TABLE**

Heater Pkg. Model No.	Unit Volts Phase	Htr. KW & Cap. @240V (or 480V if applicable)		Heater KW & Capacity @208 Volts		@240V or 480V as Applicable Htr. Ampe	Heater Internal Fuses	Circuit B				
								No. Field Ckts.	Minimum Circuit Ampacity	(1) Maximum Overcurrent Protection	(2) Field Power Wiring	(3) Ground Wire Size
KHSFB-A05	240/208-1	5	17,100	3.75	12,800	20.8		1	26	30	10	10
KHSFB-A10	240/208-1	10	34,100	7.5	26,000	41.7		1	53	60	6	10
KHSFB-A15	240/208-1	15	51,200	11.25	38,400	62.5	30/60	1	79	80	4	8
KHSFB-A20	240/208-1	20	68,200	15	51,200	83.2	60/60	1	104	110	2	6
KHSFB-B09	240/208-3	9	30,700	6.75	23,000	21.7		1	28	30	10	10
KHSFB-B15	240/208-3	15	51,200	11.25	38,400	36.2		1	46	50	8	10
KHSFB-B18	240/208-3	18	61,400	13.5	46,100	43.4		1	55	60	6	10
KHSFB-C09	460-3	9	30,700	6.75	23,000	10.8		1	15	15	14	14
KHSFB-C15	460-3	15	51,200	11.25	38,400	18.0		1	23	25	10	10
KHSFB-C18	460-3	18	61,400	13.5	46,100	21.7		1	28	30	10	10

- (1) Time delay fuses or "BACR Type" circuit breakers must be used for 60 and smaller sizes. Standard fuses or circuit breakers are suitable for sizes 70 and larger. 480V circuit breakers are not "BACR Type".
- (2) Based on wire suitable for 75°C. Other wiring materials must be rated for marked "Minimum Circuit Ampacity" or greater.
- (3) Based upon Table 250-95 of N.E.C. 1993. See electrical data for basic heat pump for Ckt. A wiring specification requirements.

IMPORTANT: While this electrical data is presented as a guide, it is important to electrically connect, properly size fuses and conductor wires in accordance with the National Electrical Code and all existing local codes.

GENERAL INSTRUCTIONS

IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians. Any heat pump is more critical of proper operating charge and an adequate duct system than a straight air conditioning unit. All duct work, supply and return, must be properly sized for the design air flow requirement of the equipment. ACCA is an excellent guide to proper sizing. All duct work or portions thereof not in the conditioned space should be properly insulated in order to both conserve energy and prevent condensation or moisture damage.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

GENERAL

The refrigerant system is completely assembled and charged. All internal wiring is complete.

The unit is designed for use with or without duct work. Flanges are provided for attaching the supply and return ducts.

These instructions explain the recommended method to install the air cooled self-contained unit and the electrical wiring connections to the unit.

These instructions and any instructions packaged with any separate equipment required to make up the entire air conditioning system should be carefully read before beginning the installation. Note particularly "Starting Procedure" and any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not supersede any national and/or local codes in any way. Authorities having jurisdiction should be consulted before the installation is made.

FIELD INSTALLED HEATER PACKAGES (OPTIONAL)

These packaged heat pumps are manufactured without supplementary electric heaters. Supplementary heaters BRSPB series (to fit P1142A2, P1148A1, and P1060A1) are available for simple, fast, field installation.

A separate field power circuit is required for the supplementary heaters.

IMPORTANT: Refer to Tables 4 and 5 when designing ductwork for maximum available static pressure with heater installed.

Refer to the electrical data shown on pages 1 and 2 for proper application information on all available heater combinations and what units they can be used with. It also shows the applicable circuit capacities, fuse size, and wire size for each heater combination.

Refer to the installation instructions packed with the heater for details on how to insert it into the basic unit.


TABLE 4
MAXIMUM BSP OF OPERATION

	P1142A2	P1148A1	P1060A1
A00	.50	.50	.50
A05	.50	.50	.50
A10	.50	.50	.50
A15	.40	.50	.50
A20	.40	.50	.50
B00	---	.50	.50
B09	---	.50	.50
B15	---	.50	.50
B18	---	.50	.50
C00	---	.50	.50
C09	---	.50	.50
C15	---	.50	.50
C18	---	.50	.50

W/A - Not applicable.

**PREFABRICATED ROOF CURB SPECIFICATIONS
HEAVY GAUGE GALVANIZED WITH WOOD NAILING STRIP, WELDED/LEAKPROOF
ONE PIECE CONSTRUCTION--READY TO INSTALL**

FIGURE 1

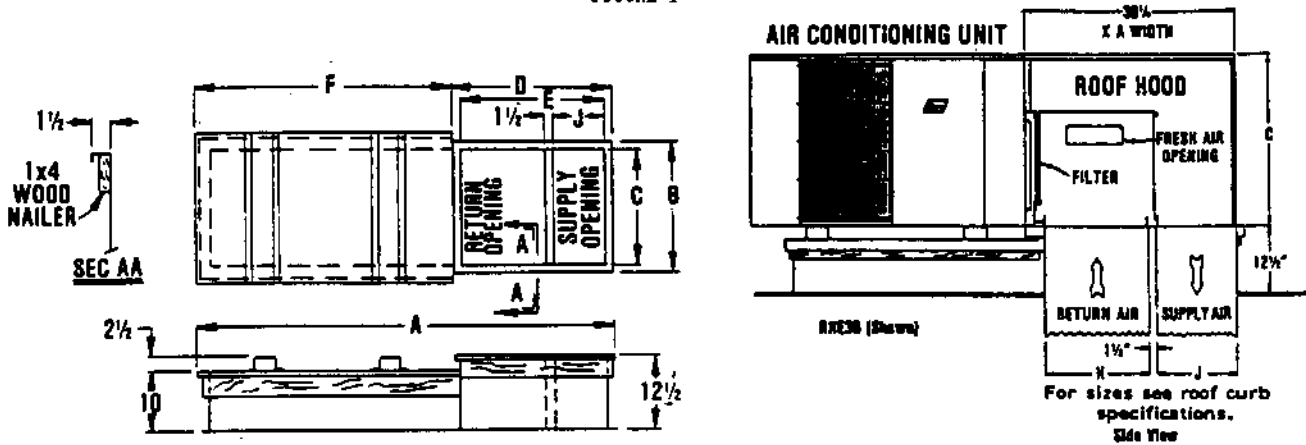

CURB AND ROOF HOOD DETAILS

	A	B	C*	D	E	F	J*	H*	Roof Hood Model	Air Conditioning Units
9042-004	82-3/8	44-1/8	41-1/8	38-3/8	35-3/8	44	14-3/4	19-1/8	RRE60	P1142A2, P1148A1, P1060A1


*** Duct Sizing Information**

Return Air Dimension "C" is length
Return Air Dimension "H" is width

Supply Air Dimension "C" is length
Supply Air Dimension "J" is width

FIELD FABRICATED CURBING

FIGURE 2

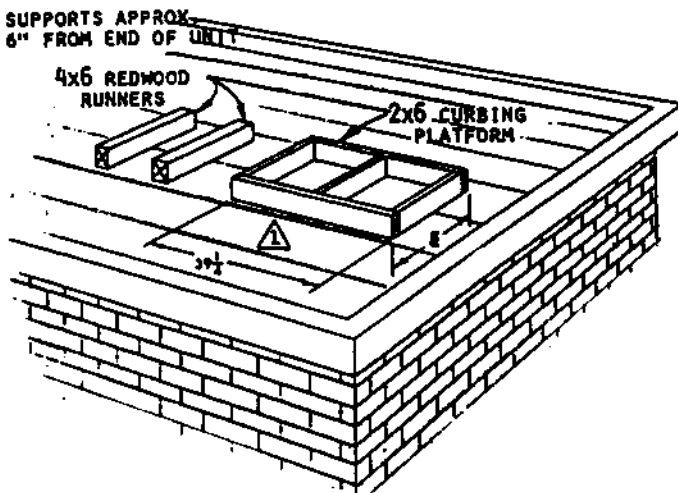

Roof Hood Model	Unit Model	E
RRE60	P1142A2 P1148A1 P1060A1	44-7/8

(1) A separate metal flashing should be installed around wood curbing. Caulk and seal all joints and weatherproof.

INSTALLATION

LOCATION

GENERAL--The unit must be located outside, or in a well ventilated area. It must not be in the space being heated or cooled. A sound absorbing material should be considered if the unit is to be installed in such a position or location that might cause transmission of sound or vibration to the living area or adjacent buildings.

SLAB MOUNTING--In areas where winter temperatures DO NOT go below 32°F for periods over twelve hours, the unit may be slab mounted at grade level. When installing unit at grade level, install on a concrete slab at least four inches above finished grade level. Slab should have a slope tolerance away from the building structure of at least 1/4 inch per foot, while being level from side to side. This will prevent ice buildup under the unit during defrost cycles. Place slab in a location where run-off water from higher ground will not collect around unit. See Figure 4.

A minimum of 18 inches should be provided between the coil inlet and any building surfaces. Provide at least four feet between coil outlet and any building wall, fences or other vertical structures. Provide a minimum of three feet clearance on the service access side of the unit. See Figure 6.

ROOF MOUNTING--When a unit is installed in areas where low ambient temperatures or strong winter winds exist, it should be placed so prevailing winter winds are not in direct line with the outdoor coil. If this is not possible, a wind barrier should be constructed. Place barrier 24 inches from the coil inlet side of the unit and in the direction of prevailing winds. Size barrier at least the same height and width as the unit. This may be necessary on ground level installations. See Figure 3.

WINTER INSTALLATION BELOW 32°F--In areas where winter conditions go below 32°F for extended periods, the unit must be elevated above the mounting surface to prevent snowfall or defrost ice accumulation from interfering with the operation of the unit. A minimum of twelve inch elevation is recommended, while greater elevation may be required for areas of high snow accumulation. Poured concrete, steel framework, brick, cement block, etc., can be utilized to construct a suitable raised mounting platform. See Figure 5.





DUCTWORK--Refer to Tables 4, 5 and 5A when designing ductwork for maximum static pressure available with the specific model and heater package being installed.

TABLE 5

RATED CFM AND EXTERNAL STATIC PRESSURE (ESP) WET COIL (COOLING)			
Model	Rated CFM	Rated ESP	Recommended Air Flow Range
P1142A2	1400	.20	1260 - 1540 CFM
P1148A1	1550	.40	1400 - 1700 CFM
P1060A1	1700	.20	1530 - 1870 CFM

TABLE 5A

ESP Inches H ₂ O	P1142A2 P11421 Dry/Wet	P1148A1 P11048 Dry/Wet	P1048A1 P1160 Dry/Wet
0	1650/1625	1950/1920	1850/1850
.1	1550/1525	1860/1830	1800/1780
.2	1435/1400	1780/1750	1725/1700
.3	1340/1310	1680/1660	1660/1625
.4	1230/1210	1580/1550	1580/1540
.5	1120/1100	1500/1480	1500/1475

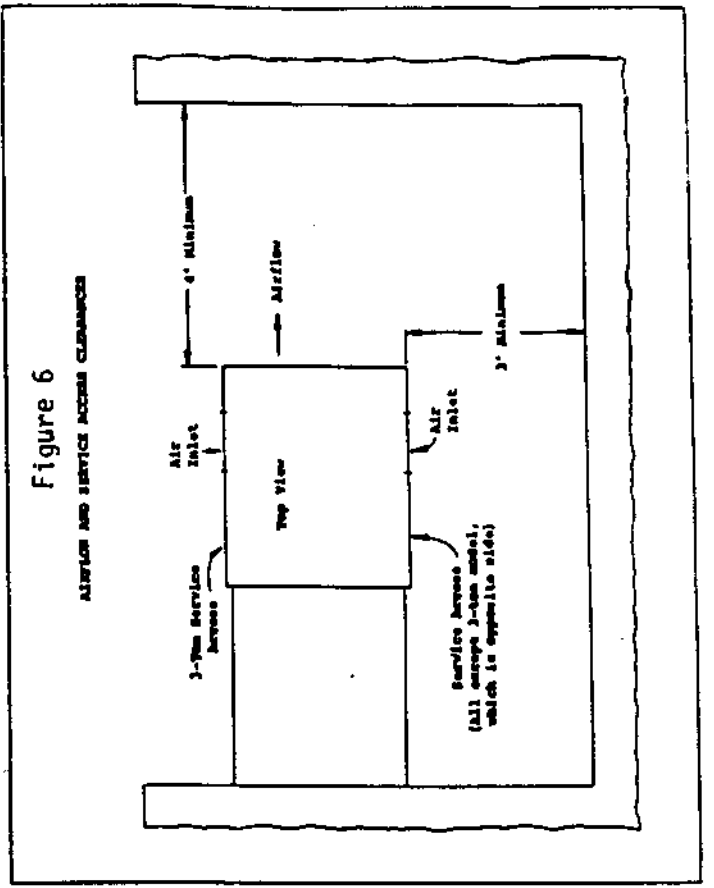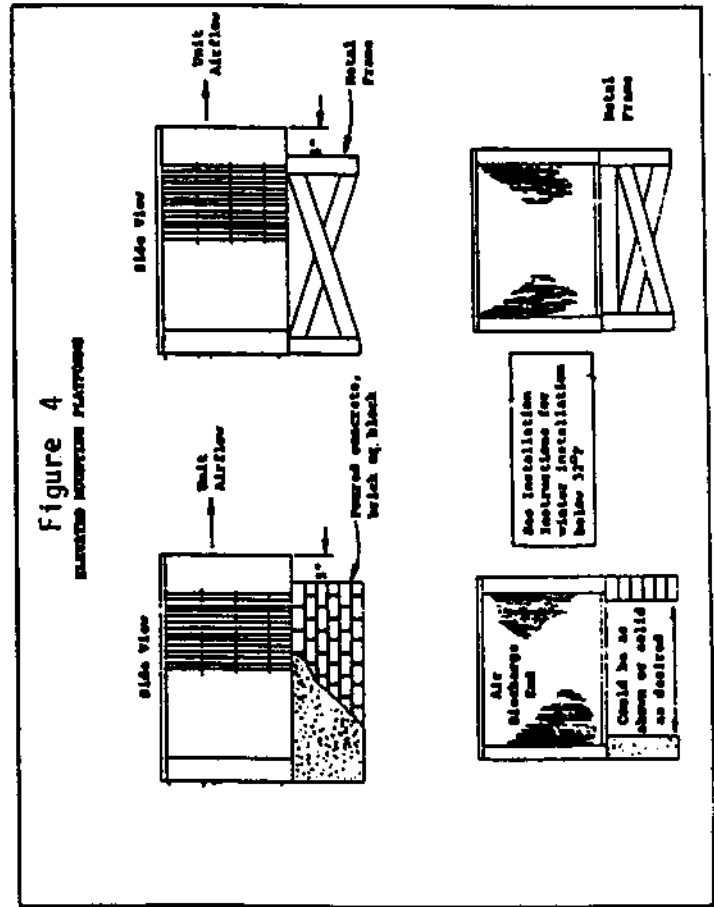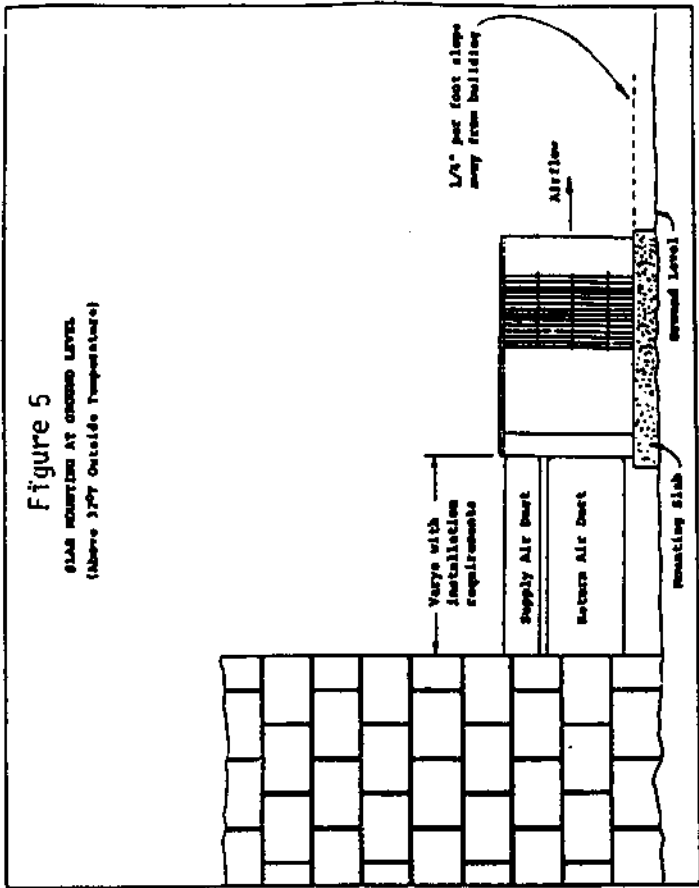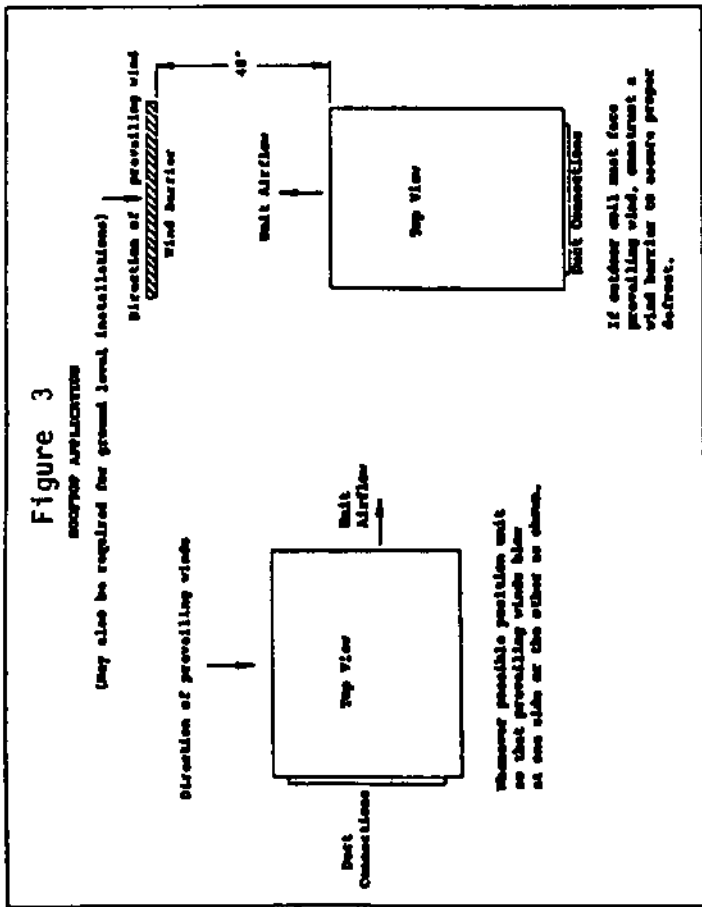

TYPICAL INSTALLATIONS


1. **ROOF MOUNTED**--The unit is mounted on a sturdy base on the roof of the building. Return air to the unit is brought through a single return grille (grilles with built-in filters are best, since they enable easy access for filter changing). Return air ducts are attached to the lower section of the front panel. Supply air is brought from the unit to attic duct work or to a furred down hall. Supply air duct is attached to the top of the front panel. **CAUTION:** All outdoor duct work must be thoroughly insulated and weatherproofed. All attic duct work must be thoroughly insulated. Two inch thick insulation with suitable vapor barrier is recommended for both outdoor and attic runs. In rooftop installations, as in all installations, the heat pump must be level from side to side. However, the unit should have a pitch along the length to assure complete external drainage of precipitation and of defrost condensate.
2. **CRAWL SPACE**--Duct work installed in crawl space must be well insulated and provided with a vapor barrier. In addition, the crawl space must be thoroughly ventilated and provided with a good vapor barrier as a ground cover. It is most desirable to install the unit outdoors, rather than inside the crawl space, so that it will be readily accessible for service. In addition, it is necessary to dispose of the condensate from the outdoor coil on the heating cycle, and this is virtually impossible with the unit installed inside the crawl space.
3. **SLAB MOUNTED AT GROUND LEVEL**--This type installation is ideal for homes with a slab floor construction, where a roof mounted unit is not desired. The supply and return duct work can be run through a furred closet space.
4. **THRU-THE-WALL**--This type installation requires a suitable framework to be fabricated capable of withstanding the unit weight. Normally the unit will be insulated so as to minimize supply and return duct work.
5. **OTHER INSTALLATIONS**--Many other installations are possible with the packaged heat pump. No matter what the installation, always consider the following facts:
 - A. Insure that the discharge air is not obstructed in any way so as to cause operation difficulties.
 - B. The indoor coil drain pan is equipped with a coupling that must be piped through a condensate drain trap to a suitable drain.
 - C. Always mount the unit in such a position that it may be easily reached for servicing and maintenance.
 - D. Insure that the unit is clear so that proper air flow over the outdoor coil will be maintained.

If this unit is operated in cooling below a 65° outdoor ambient temperature, the installation of low ambient controls (CMA-6) to unit is required.

CONDENSATE DRAIN TRAP

It is very important to provide a trap in the condensate drain line to allow a positive liquid seal in the line and assure correct drainage from the coil condensate pan.

Install condensate drain trap shown below. Use drain connection size or larger. Do not operate unit without trap. Unit must be level or slightly inclined toward drain. With a trap installed on a unit located in an unconditioned area, water in the trap may freeze. It is recommended that the trap material be of a type that will allow for expansion of water when it freezes.

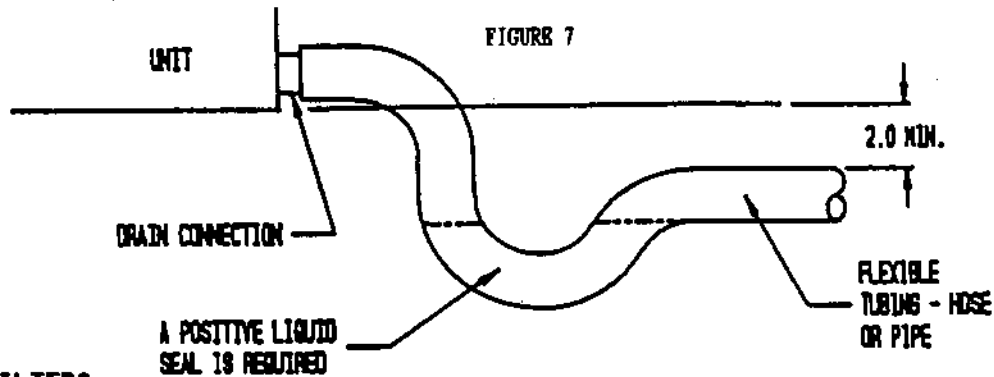

AIR FILTERS

Air filters for the return air side of the system are not provided as part of the various types of applications for these models, and must be field supplied and installed as part of the final installation.

Prior thought should be given to return air location and placement of the air filter(s). The air filter(s) must be of adequate size and readily accessible to the operator of the equipment. Filters must be adequate in size and properly maintained for proper operation. If this is not done, excessive energy use, poor performance, and multiple service problems will result. IT IS IMPOSSIBLE TO OVERSIZE AIR FILTERS. Generous sizing will result in cleaner air and coils, as well as lower operating costs and extend the time between required changes. The following table shows minimum filter areas and recommended filter sizes. Actual filter sizes can vary with the installation due to single or multiple returns utilizing a filter/grille arrangement or being placed immediately ahead of the indoor coil face in the return air duct.

TABLE 6

Model	Minimum Filter Areas	Recommended Size
P1142A2, P1148A1, P1060A1	608 sq.in.(4.62 sq.ft.)	(2) 16 x 20 x 1

NOTE: If roof hood accessory is to be used, information on air filters may be found under that heading in this manual. Air filters are supplied as part of that package.

WIRING--MAIN POWER

Refer to the unit rating plate for wire sizing information and maximum fuse size. Each outdoor unit is marked with a "Minimum Circuit Ampacity". This means that the field wiring used must be sized to carry that amount of current. If field installed heaters are added to the basic unit, a second, separate power supply circuit will be required. The heater rating plate located adjacent to the basic unit rating plate will show the appropriate circuit ampacity, fuse size, etc. (Also see "Electrical Data" on pages 1 and 2). All models are suitable only for connection with copper wire only. These instructions MUST BE adhered to. Refer to the National Electrical Code for complete current carrying capacity data on the various insulation grades of wiring material.

The electrical specifications on pages 1 and 2 lists fuse and wire sizes (75°F copper) for all models, including the most commonly used heater sizes.

The unit rating plate lists a "Maximum Time Delay Fuse" or "BACR" type circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor.

WIRING--24V LOW VOLTAGE CONTROL CIRCUIT

Five (5) wires should be run from thermostat subbase to the 24V terminal board in the unit. A five conductor, 18 gauge copper, color-coded thermostat cable is recommended. The connection points are shown on most of the wiring diagrams and are also shown below.

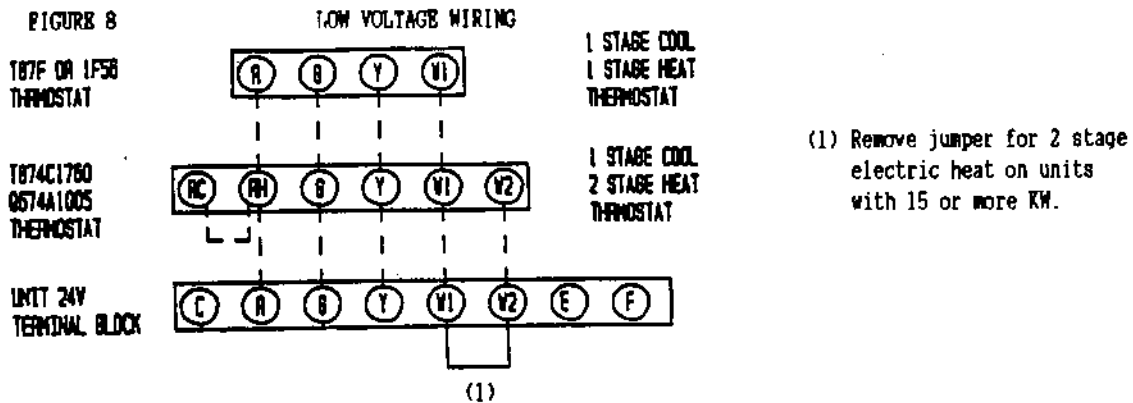


TABLE 7 THERMOSTAT WIRE SIZE

Transformer VA	FLA	Wire Gauge	Maximum Distance In Feet
55	2.3	20	45
		18	60
		16	100
		14	160
		12	250

IMPORTANT NOTE: Only the thermostat and subbase combinations as shown above will work with this equipment. The thermostat and subbase **MUST** be matched, and correct operation can be assured only by proper selection and application of these parts.

THERMOSTATS

See specific wiring information for the different models, heater KW's, and voltages on pages 12 and 13.

TABLE 8

WALL THERMOSTAT AND SUBBASE COMBINATIONS		
Thermostat	Subbase	Predominant Feature
8403-019 (T874C1760)	8404-012 (Q674A1001)	1 stage cool, 2 stage heat System: heat-auto-cool Fan: on-auto
8403-002 (T87F3111)	8404-003 (Q539A1220)	1 stage heat, 1 stage cool System: heat-off-cool Fan: on-auto
8403-009 (1F56-318)	-----	1 stage heat, 1 stage cool

- (1) No automatic changeover position--must manually place in heat or cool. Reversing valve remains energized at all times system switch is in heat position (except during defrost cycle). No pressure equalization noise when thermostat is satisfied on either heating or cooling.
- (2) Allows thermostat to control both heating and cooling operation when set in "AUTO" position. Reversing valve deenergizes at end of each "ON" heating cycle.

IMPORTANT NOTE: Both thermostat and subbase combinations shown above incorporate the following features: Man-Auto fan switch, Off-Heat-Cool-Em. Heat Switch, and two (2) indicator lamps--one for emergency heat and one for compressor malfunction.

TRANSFORMER TAPS

230/208V, 1 phase and 3 phase equipment employ dual primary voltage transformers. All equipment leaves the factory wired on 240V tap. For 208V operation, reconnect from 240V to 208V tap. The acceptable operating voltage range for the 240 and 208V taps are:

<u>TAP</u>	<u>RANGE</u>
240	253 - 216
208	220 - 187

NOTE: The voltage should be measured at the field power connection point in the unit and while the unit is operating at full load (maximum average operating condition).

START UP AND OPERATION

THREE PHASE SCROLL COMPRESSOR START UP INFORMATION

Scroll compressors, like several other types of compressors, will only compress in one rotational direction. Direction of rotation is not an issue with single phase compressors since they will always start and run in the proper direction.

However, three phase compressors will rotate in either direction depending upon phasing of the power. Since there is a 50-50 chance of connecting power in such a way as to cause rotation in the reverse direction, verification of proper rotation must be made. Verification of proper rotation direction is made by observing that suction pressure drops and discharge pressure rises when the compressor is energized. Reverse rotation also results in an elevated sound level over that with correct rotation, as well as, substantially reduced current draw compared to tabulated values.

There is no negative impact on durability caused by operating three phase Compliant Scroll compressors in the reversed direction. However, after several minutes of operation, the compressor's internal protection will trip.

All three phase ZR*3 compressors are wired identically internally. As a result, once the correct phasing is determined for a specific system or installation, connecting properly phased power leads to the same Fusite terminals should maintain proper rotation direction.

THE DIRECTION OF ROTATION OF THE MOTOR MAY BE CHANGED BY REVERSING ANY TWO LINE CONNECTIONS TO THE UNIT.

SEQUENCE OF OPERATION

COOLING--Circuit R-Y makes at thermostat pulling in compressor contactor starting the compressor and outdoor motor. The G (indoor motor) circuit is automatically completed on any call for cooling operation, or can be energized by manual fan switch on subbase for constant air circulation.

HEATING--A circuit R-W1 is completed on each heating cycle energizing electric heat if so equipped.

START UP NOTES

For improved start-up performance, wash the indoor coil with a dishwasher detergent.

SERVICE AND TROUBLESHOOTING

SERVICE HINTS

1. Caution homeowner to maintain clean air filters at all times. Also, not to needlessly close off supply and return air registers. This reduces air flow through the system which shortens equipment service life as well as increasing operating costs.
2. Check all power fuses or circuit breakers to be sure that they are the correct rating.
3. Periodic cleaning of the outdoor coil to permit full and unrestricted airflow circulation is essential.

PRESSURE SERVICE PORTS

High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Pressure tables can be found later in the manual covering all models on both cooling and heating cycles. It is imperative to match the correct pressure table to the unit by model number.

REFRIGERANT CHARGE

The correct system R-22 charge is shown on the unit rating plate. Optimum unit performance will occur with a refrigerant charge resulting in a suction line temperature (6" from compressor) as shown in the following table:

TABLE 9

Model	Rated Airflow	95° OD Temperature	82° OD Temperature
P1142A2	1400	57 - 59	58 - 60
P1148A1	1550	55 - 57	59 - 61
P1060A1	1700	47 - 49	54 - 56

The above suction line temperatures are based upon 80°F dry bulb/67°F wet bulb (50 percent RH) temperature and rated airflow across the evaporator during cooling cycle.

FAN BLADE SETTINGS

Shown in the drawing below are the correct fan blade setting dimensions for proper air delivery across the outdoor coil.

Any service work requiring removal or adjustment in the fan and/or motor area will require that the dimensions below be checked and blade adjusted in or out on the motor shaft accordingly.

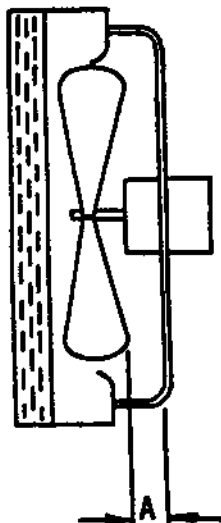


FIGURE 9


Model	Dimension A
P1142A2	1.75"
P1148A1	1.75"
P1060A1	1.75"

SUCTION AND DISCHARGE TUBE BRAZING

Compliant Scroll Compressors have copper plated steel suction and discharge tubes. These tubes are far more rugged and less prone to leaks than copper tubes used on other compressors. Due to a different thermal properties of steel and copper, brazing procedures may have to be changed from those commonly used.

- To disconnect: heat joint Areas 2 and 3 Slowly and uniformly until braze material softens and tube can be pulled out of suction fitting.
- To reconnect.
 - Recommended brazing materials: silfos with minimum 5% silver or silver braze material with flux.
 - Reinsert tube into fitting.
 - Heat tube uniformly in Area 1, moving slowly to Area 2. When joint reaches brazing temperature, apply brazing material.
 - Heat joint uniformly around the circumference to flow braze material completely around the joint.
 - Slowly move torch into Area 3 to draw braze material into joint.
 - Do no overheat joint.

FIGURE 10

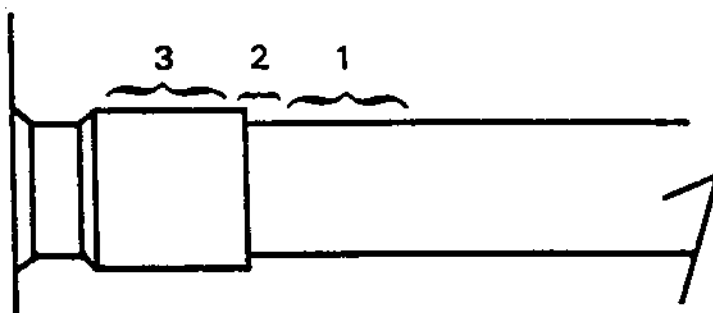

DISCHARGE (TOP CAP) THERMOSTAT (P1142A2 ONLY)

All P11 series models feature scroll compressors. Since the scroll is a new type of compressor, there are a number of application characteristics that are different than the traditional reciprocating compressor.

Internal discharge temperatures reached under some extreme operating conditions (such as loss of charge or extremely high compression ratio caused by failure of evaporator fan) can cause compressor damage. In order to guarantee positive compressor protection, a thermostat has been designed into the Compliant Scroll which senses dangerous discharge temperature levels and removes power from the compressor until temperature levels are safe again. The approximate thermostat cut-out/cut-in temperatures are 290/140°F. THIS PROTECTIVE DEVICE SHOULD NEVER BE BYPASSED FOR ANY PURPOSE.

The thermostat can be tested for proper operation by the following procedures:

To check for low temperature, check electrical continuity with the thermostat below 140°F. If the thermostat shows open, it should be replaced.

To check for high temperature protection, the thermostat should remain closed for increasing discharge line temperatures up to 290°F, and then open as temperature rises above 290°F. If the thermostat is open when temperature is between 140 and 290°F, the thermostat will have to be allowed to cool to 140°F to close before testing high temperature operation. If the thermostat opens below 290°F with rising temperature, it should be replaced.

The thermostat can be replaced by following these steps. Carefully pry the plastic cover open with a screwdriver. The thermostat is held to the bottom of the well with adhesive. Pry the thermostat from the well. (See Figure 14) The replacement thermostat does not require adhesive but must be held down with the neoprene spacer provided with the cover. The new cover is held down by snapping the prongs into the rim of the thermostat well after a silicone sealant provided to reseal the cover is applied to the rims of the well cover. The sensor terminals are located outside the compressor terminal box. Figure 15 shows the arrangement of compressor line voltage terminals and discharge sensor terminals.

Because of its very high volumetric efficiency, a Compliant Scroll Compressor will draw extremely low vacuums when the suction side of the compressor is closed or severely restricted. These vacuums, if achieved, can cause internal Fusite arcing resulting in a damaged or failed compressor. Damage resulting from internal Fusite arcing due to low pressure is obvious at compressor teardown and will result in denial of warranty claims.

In addition to possibly damaging the Fusite, the internal arcing caused by operation of Compliant Scroll compressors at deep vacuum conditions may cause tripping of circuit breakers, blowing of fuses, or tripping of the external compressor thermostat.

FIGURE 11

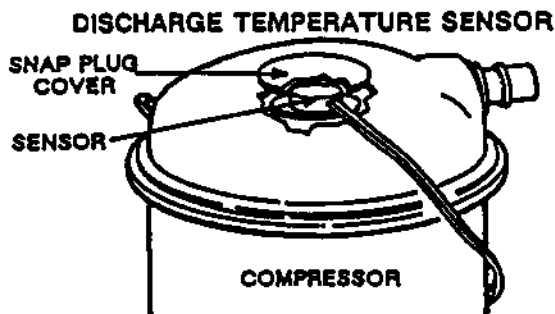


FIGURE 12




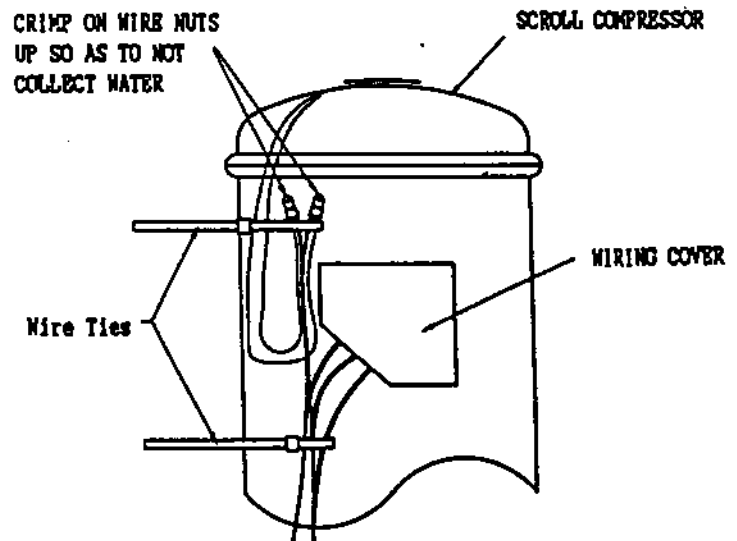


TABLE 10

COOLING

Air Temperature Entering Outdoor Coil *F

Model	Return Air Temperature	Pressure	°	°	°	°	°	°	°	°	°
			75	80	85	90	95	100	105	110	115
P1142A2	75 deg. DB	Low Side	70	72	75	77	78	79	80	81	82
	62 deg. WB	High Side	208	223	239	254	271	288	305	324	342
	80 deg. DB	Low Side	75	77	80	82	84	85	86	87	88
	67 deg. WB	High Side	213	229	245	261	278	295	313	332	351
	85 deg. DB	Low Side	81	83	86	88	90	91	92	94	95
	72 deg. WB	High Side	220	237	254	270	288	305	324	344	363
P1148A1	75 deg. DB	Low Side	73	74	75	76	78	79	80	81	82
	62 deg. WB	High Side	203	217	231	246	264	278	294	312	330
	80 deg. DB	Low Side	78	79	81	82	83	84	86	87	88
	67 deg. WB	High Side	208	222	237	252	268	285	302	320	338
	85 deg. DB	Low Side	83	85	87	88	87	91	92	93	94
	72 deg. WB	High Side	215	230	245	261	273	295	313	331	350
P1060A1	75 deg. DB	Low Side	65	66	68	69	70	72	74	75	76
	62 deg. WB	High Side	214	230	247	264	284	299	318	336	355
	80 deg. DB	Low Side	69	71	72	74	76	77	79	80	82
	67 deg. WB	High Side	219	236	253	271	289	307	326	345	364
	85 deg. DB	Low Side	74	76	78	79	81	83	85	86	88
	72 deg. WB	High Side	227	244	262	280	296	318	337	357	377

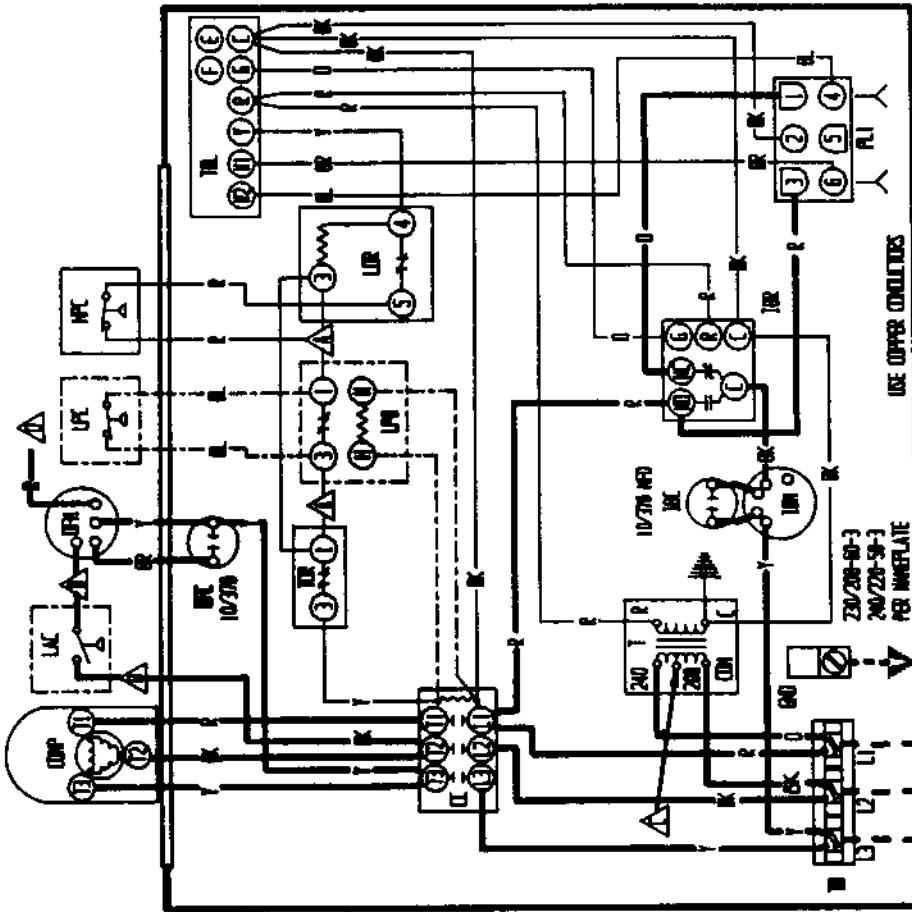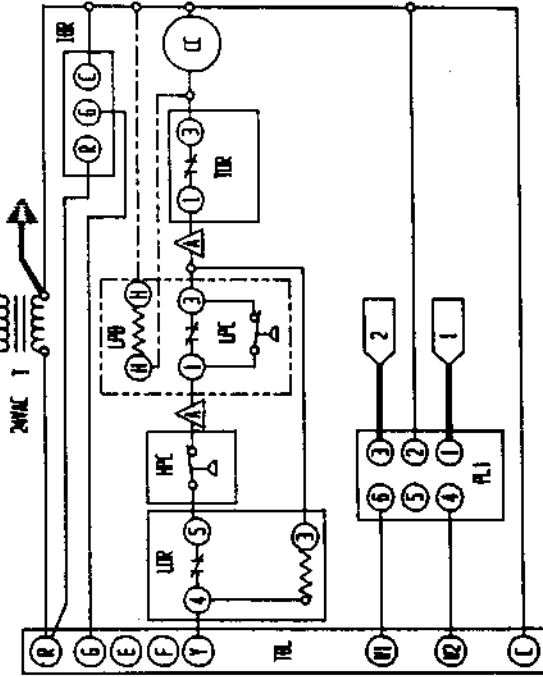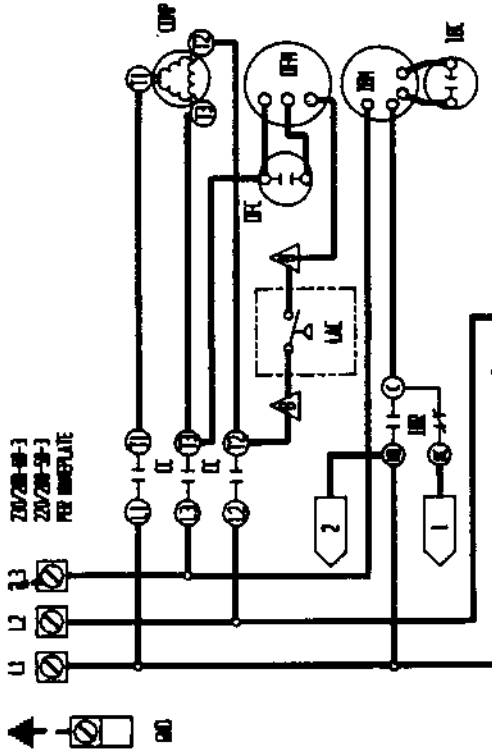

COMPONENT CODE		COLOR CODE	
UR	LOW PRESSURE CONTROL	UR	BLACK
UR1	STARTER FAN CAPACITOR	UR1	GREEN
UR2	STARTER FAN MOTOR	UR2	RED
UR3	PLUS FI	UR3	BROWN
UR4	TRANSFORMER	UR4	RED
UR5	TERMINAL BLOCK	UR5	BROWN
UR6	LOW VOLTAGE THERMAL RELAY	UR6	RED
UR7	TIME RELAY RELAY	UR7	BROWN
UR8	LOW PRESSURE CONTROL	UR8	RED
UR9	STARTER FAN CAPACITOR	UR9	GREEN
UR10	STARTER FAN MOTOR	UR10	RED
UR11	PLUS FI	UR11	BROWN
UR12	TRANSFORMER	UR12	RED
UR13	TERMINAL BLOCK	UR13	BROWN
UR14	LOW VOLTAGE THERMAL RELAY	UR14	RED
UR15	TIME RELAY RELAY	UR15	BROWN
UR16	LOW PRESSURE CONTROL	UR16	RED
UR17	STARTER FAN CAPACITOR	UR17	GREEN
UR18	STARTER FAN MOTOR	UR18	RED
UR19	PLUS FI	UR19	BROWN
UR20	TRANSFORMER	UR20	RED
UR21	TERMINAL BLOCK	UR21	BROWN
UR22	LOW VOLTAGE THERMAL RELAY	UR22	RED
UR23	TIME RELAY RELAY	UR23	BROWN
UR24	LOW PRESSURE CONTROL	UR24	RED
UR25	STARTER FAN CAPACITOR	UR25	GREEN
UR26	STARTER FAN MOTOR	UR26	RED
UR27	PLUS FI	UR27	BROWN
UR28	TRANSFORMER	UR28	RED
UR29	TERMINAL BLOCK	UR29	BROWN
UR30	LOW VOLTAGE THERMAL RELAY	UR30	RED
UR31	TIME RELAY RELAY	UR31	BROWN
UR32	LOW PRESSURE CONTROL	UR32	RED

LAMP CODE		COLOR CODE	
L1	BLACK	L1	BLACK
L2	BROWN	L2	BROWN
L3	RED	L3	RED
L4	BROWN	L4	BROWN
L5	RED	L5	RED
L6	BROWN	L6	BROWN
L7	RED	L7	RED
L8	BROWN	L8	BROWN
L9	RED	L9	RED
L10	BROWN	L10	BROWN
L11	RED	L11	RED
L12	BROWN	L12	BROWN
L13	RED	L13	RED
L14	BROWN	L14	BROWN
L15	RED	L15	RED
L16	BROWN	L16	BROWN
L17	RED	L17	RED
L18	BROWN	L18	BROWN
L19	RED	L19	RED
L20	BROWN	L20	BROWN
L21	RED	L21	RED
L22	BROWN	L22	BROWN
L23	RED	L23	RED
L24	BROWN	L24	BROWN
L25	RED	L25	RED
L26	BROWN	L26	BROWN
L27	RED	L27	RED
L28	BROWN	L28	BROWN
L29	RED	L29	RED
L30	BROWN	L30	BROWN
L31	RED	L31	RED
L32	BROWN	L32	BROWN
L33	RED	L33	RED
L34	BROWN	L34	BROWN
L35	RED	L35	RED
L36	BROWN	L36	BROWN
L37	RED	L37	RED
L38	BROWN	L38	BROWN
L39	RED	L39	RED
L40	BROWN	L40	BROWN
L41	RED	L41	RED
L42	BROWN	L42	BROWN
L43	RED	L43	RED
L44	BROWN	L44	BROWN
L45	RED	L45	RED
L46	BROWN	L46	BROWN
L47	RED	L47	RED
L48	BROWN	L48	BROWN
L49	RED	L49	RED
L50	BROWN	L50	BROWN
L51	RED	L51	RED
L52	BROWN	L52	BROWN
L53	RED	L53	RED
L54	BROWN	L54	BROWN
L55	RED	L55	RED
L56	BROWN	L56	BROWN
L57	RED	L57	RED
L58	BROWN	L58	BROWN
L59	RED	L59	RED
L60	BROWN	L60	BROWN
L61	RED	L61	RED
L62	BROWN	L62	BROWN
L63	RED	L63	RED
L64	BROWN	L64	BROWN
L65	RED	L65	RED
L66	BROWN	L66	BROWN
L67	RED	L67	RED
L68	BROWN	L68	BROWN
L69	RED	L69	RED
L70	BROWN	L70	BROWN
L71	RED	L71	RED
L72	BROWN	L72	BROWN
L73	RED	L73	RED
L74	BROWN	L74	BROWN
L75	RED	L75	RED
L76	BROWN	L76	BROWN
L77	RED	L77	RED
L78	BROWN	L78	BROWN
L79	RED	L79	RED
L80	BROWN	L80	BROWN
L81	RED	L81	RED
L82	BROWN	L82	BROWN
L83	RED	L83	RED
L84	BROWN	L84	BROWN
L85	RED	L85	RED
L86	BROWN	L86	BROWN
L87	RED	L87	RED
L88	BROWN	L88	BROWN
L89	RED	L89	RED
L90	BROWN	L90	BROWN
L91	RED	L91	RED
L92	BROWN	L92	BROWN
L93	RED	L93	RED
L94	BROWN	L94	BROWN
L95	RED	L95	RED
L96	BROWN	L96	BROWN
L97	RED	L97	RED
L98	BROWN	L98	BROWN
L99	RED	L99	RED
L100	BROWN	L100	BROWN


LAMP CODE		COLOR CODE	
L1	BLACK	L1	BLACK
L2	BROWN	L2	BROWN
L3	RED	L3	RED
L4	BROWN	L4	BROWN
L5	RED	L5	RED
L6	BROWN	L6	BROWN
L7	RED	L7	RED
L8	BROWN	L8	BROWN
L9	RED	L9	RED
L10	BROWN	L10	BROWN
L11	RED	L11	RED
L12	BROWN	L12	BROWN
L13	RED	L13	RED
L14	BROWN	L14	BROWN
L15	RED	L15	RED
L16	BROWN	L16	BROWN
L17	RED	L17	RED
L18	BROWN	L18	BROWN
L19	RED	L19	RED
L20	BROWN	L20	BROWN
L21	RED	L21	RED
L22	BROWN	L22	BROWN
L23	RED	L23	RED
L24	BROWN	L24	BROWN
L25	RED	L25	RED
L26	BROWN	L26	BROWN
L27	RED	L27	RED
L28	BROWN	L28	BROWN
L29	RED	L29	RED
L30	BROWN	L30	BROWN
L31	RED	L31	RED
L32	BROWN	L32	BROWN
L33	RED	L33	RED
L34	BROWN	L34	BROWN
L35	RED	L35	RED
L36	BROWN	L36	BROWN
L37	RED	L37	RED
L38	BROWN	L38	BROWN
L39	RED	L39	RED
L40	BROWN	L40	BROWN
L41	RED	L41	RED
L42	BROWN	L42	BROWN
L43	RED	L43	RED
L44	BROWN	L44	BROWN
L45	RED	L45	RED
L46	BROWN	L46	BROWN
L47	RED	L47	RED
L48	BROWN	L48	BROWN
L49	RED	L49	RED
L50	BROWN	L50	BROWN
L51	RED	L51	RED
L52	BROWN	L52	BROWN
L53	RED	L53	RED
L54	BROWN	L54	BROWN
L55	RED	L55	RED
L56	BROWN	L56	BROWN
L57	RED	L57	RED
L58	BROWN	L58	BROWN
L59	RED	L59	RED
L60	BROWN	L60	BROWN
L61	RED	L61	RED
L62	BROWN	L62	BROWN
L63	RED	L63	RED
L64	BROWN	L64	BROWN
L65	RED	L65	RED
L66	BROWN	L66	BROWN
L67	RED	L67	RED
L68	BROWN	L68	BROWN
L69	RED	L69	RED
L70	BROWN	L70	BROWN
L71	RED	L71	RED
L72	BROWN	L72	BROWN
L73	RED	L73	RED
L74	BROWN	L74	BROWN
L75	RED	L75	RED
L76	BROWN	L76	BROWN
L77	RED	L77	RED
L78	BROWN	L78	BROWN
L79	RED	L79	RED
L80	BROWN	L80	BROWN
L81	RED	L81	RED
L82	BROWN	L82	BROWN
L83	RED	L83	RED
L84	BROWN	L84	BROWN
L85	RED	L85	RED
L86	BROWN	L86	BROWN
L87	RED	L87	RED
L88	BROWN	L88	BROWN
L89	RED	L89	RED
L90	BROWN	L90	BROWN
L91	RED	L91	RED
L92	BROWN	L92	BROWN
L93	RED	L93	RED
L94	BROWN	L94	BROWN
L95	RED	L95	RED
L96	BROWN	L96	BROWN
L97	RED	L97	RED
L98	BROWN	L98	BROWN
L99	RED	L99	RED
L100	BROWN	L100	BROWN

USE RED WIRE TO 200V TIP PER 200V OPERATION **▲** USE RED WIRE FOR 50 HZ OPERATION ONLY
 LABELLED WIRES CORRECT BY AN OPTIMUM WIRE. **▲**

230/200-5A-3
 20/20-5A-3
 PER IMMEDIATE


BAIRD MFC. CO.
 INC. 4854-213
 CHICAGO, ILL.
 U.S.A.

COMPRESSOR CASE	
U	LOW PRESSURE CONTROL
DP	DIFFERENTIAL PRESSURE CONTROL
IC	INTERLOCK CONTROL
OD	OVERLOAD CONTROL
SD	SAFETY CONTROL
MT	MANUAL TRIP CONTROL
ME	MANUAL EMERGENCY CONTROL
MR	MANUAL RESET CONTROL
LC	LOAD CONTROL
LN	LOAD NOTIFICATION

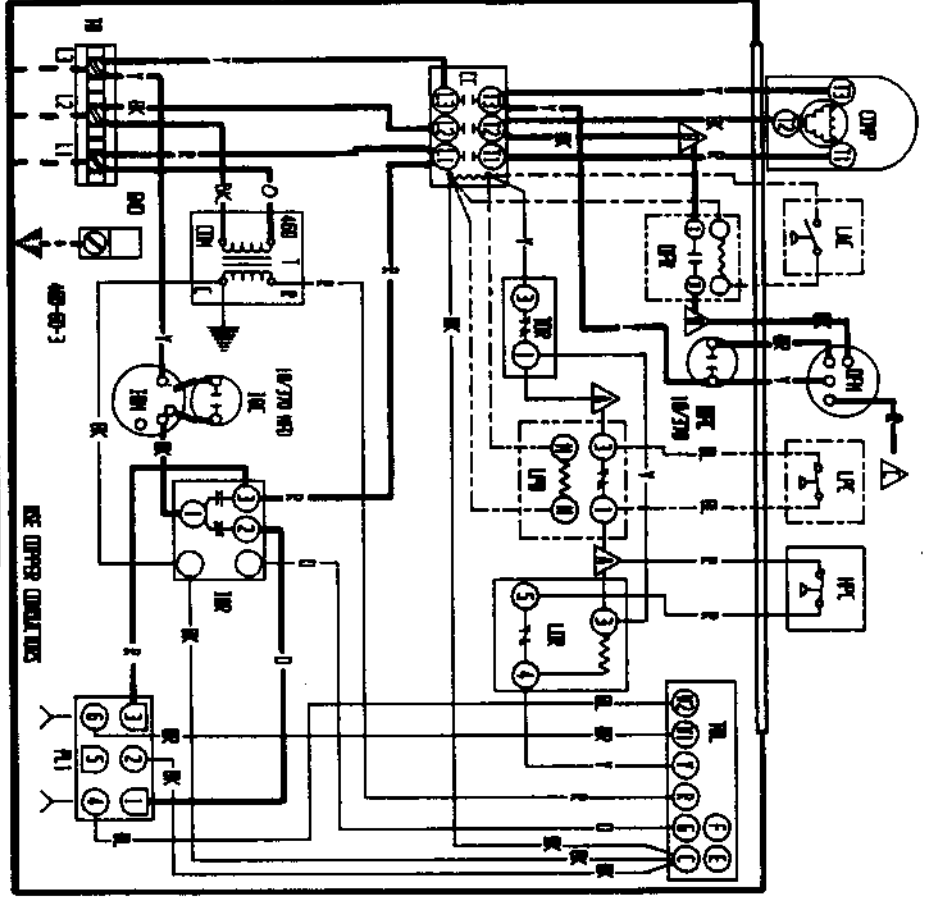

COMPRESSOR CASE	
U	LOW PRESSURE CONTROL
DP	DIFFERENTIAL PRESSURE CONTROL
IC	INTERLOCK CONTROL
OD	OVERLOAD CONTROL
SD	SAFETY CONTROL
MT	MANUAL TRIP CONTROL
ME	MANUAL EMERGENCY CONTROL
MR	MANUAL RESET CONTROL
LC	LOAD CONTROL
LN	LOAD NOTIFICATION

COMPRESSOR CASE	
U	LOW PRESSURE CONTROL
DP	DIFFERENTIAL PRESSURE CONTROL
IC	INTERLOCK CONTROL
OD	OVERLOAD CONTROL
SD	SAFETY CONTROL
MT	MANUAL TRIP CONTROL
ME	MANUAL EMERGENCY CONTROL
MR	MANUAL RESET CONTROL
LC	LOAD CONTROL
LN	LOAD NOTIFICATION

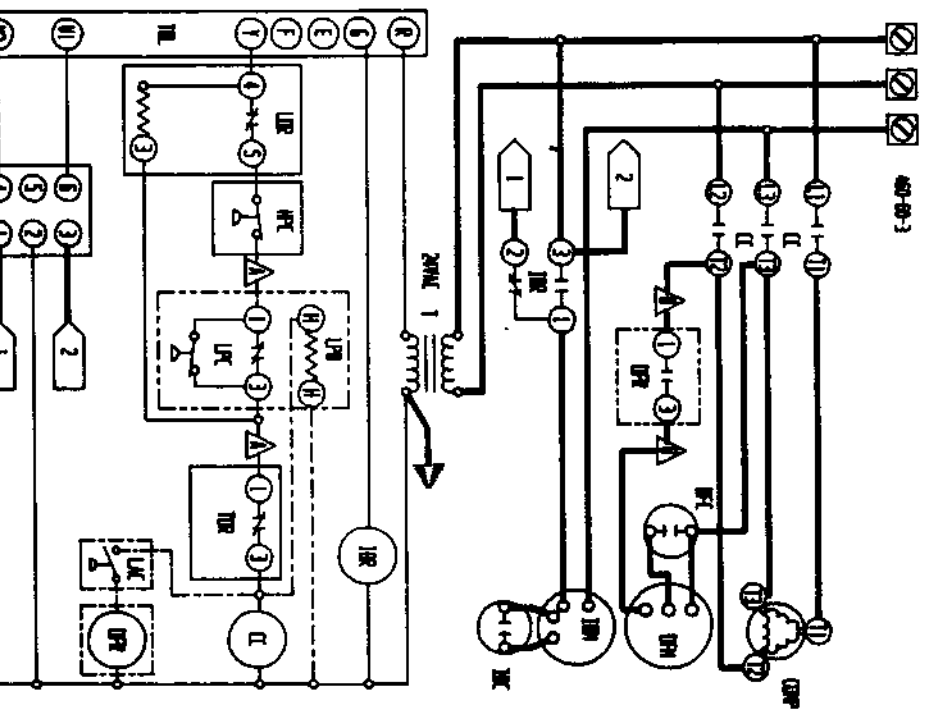

COMPRESSOR CASE	
U	LOW PRESSURE CONTROL
DP	DIFFERENTIAL PRESSURE CONTROL
IC	INTERLOCK CONTROL
OD	OVERLOAD CONTROL
SD	SAFETY CONTROL
MT	MANUAL TRIP CONTROL
ME	MANUAL EMERGENCY CONTROL
MR	MANUAL RESET CONTROL
LC	LOAD CONTROL
LN	LOAD NOTIFICATION

480-00-3