

---

# INSTALLATION INSTRUCTIONS

---

## COMMERCIAL ROOM VENTILATORS WITH EXHAUST

MODEL  
**CRVS-5**  
**CRVP-5**  
**CRVP-5L**

**For Use with Bard 3-1/2 through 6 Ton  
Wall Mount Air Conditioners  
and Heat Pumps**



**Climate Control Solutions**

Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
*Since 1914...Moving ahead just as planned.*

Manual : 2100-458I  
Supersedes: 2100-458H  
File: Volume III Tab 19  
Date: 01-24-14

# CONTENTS

---

## General

General Information .....	3
Unpacking .....	3
Description .....	3

## Installation

Basic Installation .....	4-8
Blade Adjustment for Desired Ventilation Air.....	9
Commercial Room Ventilator – W**A, W**H & W**L Series .....	15

## Figures

Figure 1	Removal of Exterior Panels.....	4
Figure 2	Removal of Air Filter and Exhaust Cover Plate .....	5
Figure 3	Re-route Wires For Left Hand Units.....	6
Figure 4	Install Ventilator.....	7
Figure 5	CRV Position Adjustment .....	9
Figure 6	Call for Blower Operation .....	15
Figure 7	Call for Cooling Operation.....	16

## Tables

Table 1	.....	4
---------	-------	---

## Graphs

S38H1 High Speed .....	10
S38H1 Medium Speed .....	10
S38H1 Low Speed.....	11
S43H1/S49H1/S61H1 High Speed .....	11
S43H1/S49H1/S61H1 Medium Speed.....	12
W42A/H & W48A/H High Speed.....	12
W42A/H & W48A/H Low Speed.....	13
W60A/H & W70/72A High Speed.....	13
W60A/H & W70/72A Low Speed.....	14

**BARD MANUFACTURING COMPANY, INC.**  
**BRYAN, OHIO USA 43506**

## GENERAL INFORMATION

The ventilator should only be installed by a trained heating and air conditioning technician. These instructions serve as a guide to the technician installing the ventilator package. They are not intended as a step by step procedure with which the mechanically inclined owner can install the package.

The ventilator housing is shipped in one carton which contains the electrical harness, miscellaneous hardware and installation instructions.

## UNPACKING

Upon receipt of the equipment be sure to compare the model number found on the shipping label with the accessory identification information on the ordering and shipping document to verify that the correct accessory has been shipped.

Inspect the carton housing of each ventilator as it is received, and before signing the freight bill, verify that all items have been received and that there is no visible damage. Note any shortages or damage on all copies of the freight bill. The receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent. Concealed damage not discovered until after loading must be reported to the carrier within 15 days of its receipt.

## DESCRIPTION

The CRVS-5, CRVP-5 and CRVP-5L ventilators are designed to be used with Bard 3½ through 6 ton wall mount series air conditioners and heat pumps. They are electromechanical vent systems designed to provide fresh air to meet indoor air quality standards.

## MODELS:

When installed in the above-listed models, the CRV provides built in exhaust provisions. When the damper blade opens to bring fresh air in, the damper also opens an exhaust relief. The exhaust air will flow into the condenser section of the unit. The condenser fan will help draw exhaust air out.

# INSTALLATION

## BASIC INSTALLATION


1. Unpack the ventilator assembly which includes the integral ventilator with attached electrical harness and miscellaneous hardware.
2. Remove and save the existing exterior blower access and service access panels on the Bard wall mount unit. (See Figure 1.)

 <h1 style="margin: 0;">WARNING</h1>
<p>Open and lock unit disconnect switch before installing this accessory to prevent injury or death due to electrical shock or contact with moving parts. Turn thermostat to off.</p>

**TABLE 1**

MODEL	FOR USE WITH FOLLOWING UNITS		
CRVS-5	W42A W48A W60A W70A W72A	W42H W48H W60H S38H S43H S49H S61H	W42L W48L W60L
CRVP-5	W42A W48A W60A W70A W72A	W42H W48H W60H S38H S43H S49H S61H	
CRVP-5L			W42L W48L W60L

**FIGURE 1  
REMOVAL OF EXTERIOR PANELS**

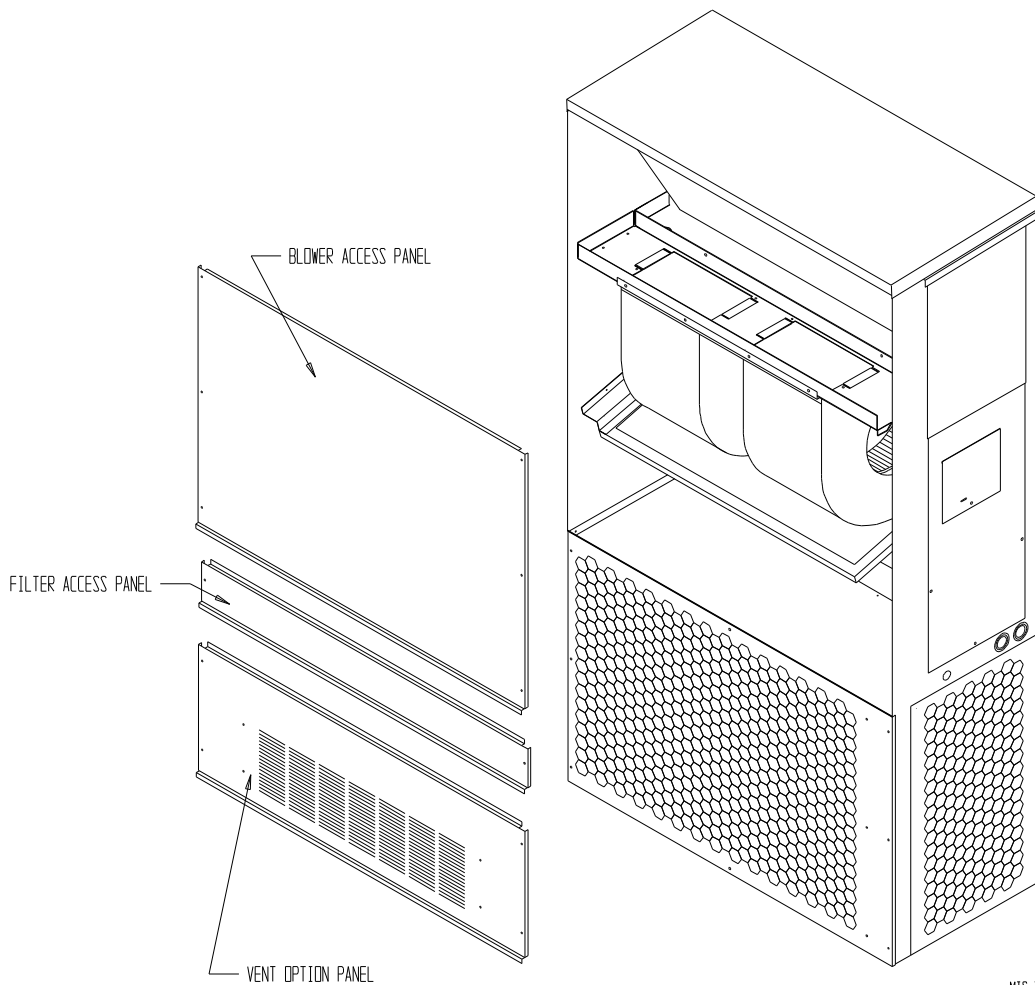


MIS-344 A

3. Remove and save existing unit air filter and screws from front center grille. (See Figure 2.)

4. Remove and discard the exhaust cover plate.


**FIGURE 2**  
**REMOVAL OF AIR FILTER AND EXHAUST COVER PLATE**

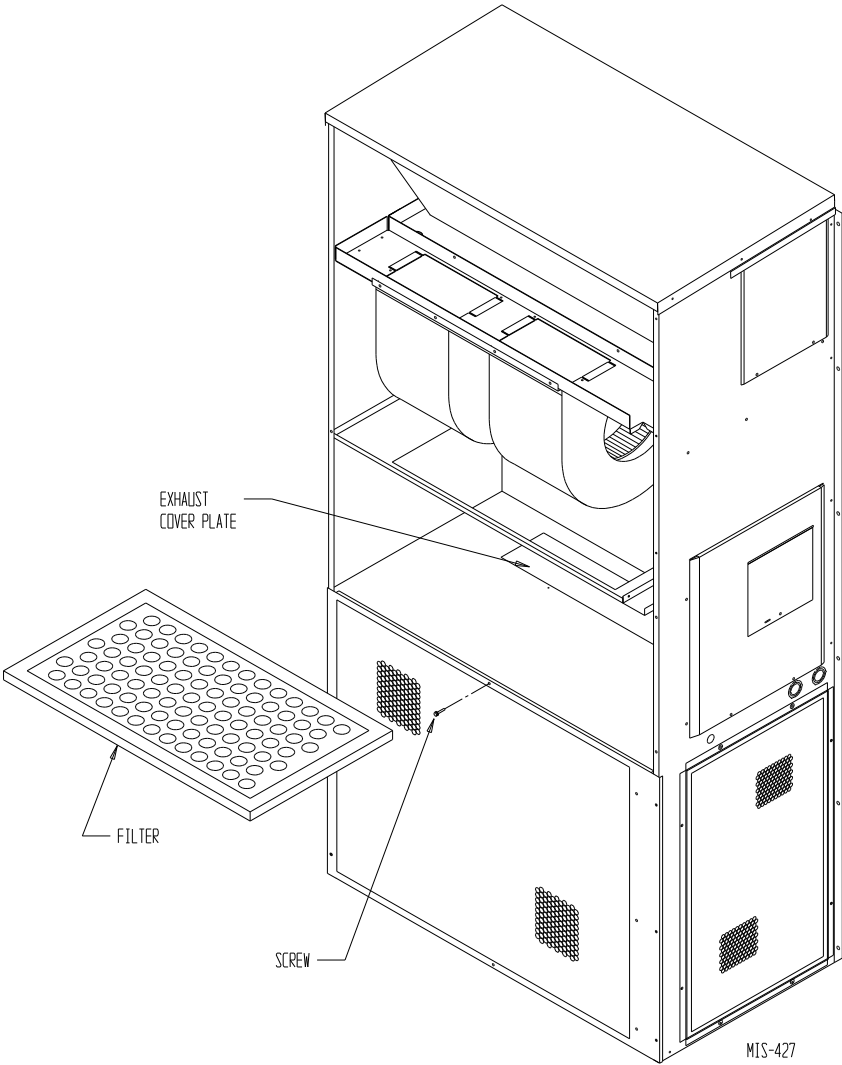

5. For Installation of Left Hand Units Only – Remove strain relief in right side of CRVS. Unclip the (2) wire ties holding the wire harness. Reroute wires to left side of CRVS. Reinstall wire ties in left side holes. Route wires through left side and reinstall strain relief. (See Figure 3.)

6. Install ventilator by inserting the ventilator into the unit to the far left side clearing the right filter bracket. Once the ventilator is fully inserted, slide the ventilator to the right until it is tight against the back of the control panel. (See Figure 4.)

**FIGURE 3**  
**REROUTE WIRES FOR LEFT HAND CRVS-5 UNITS ONLY (CRVS SHOWN)**

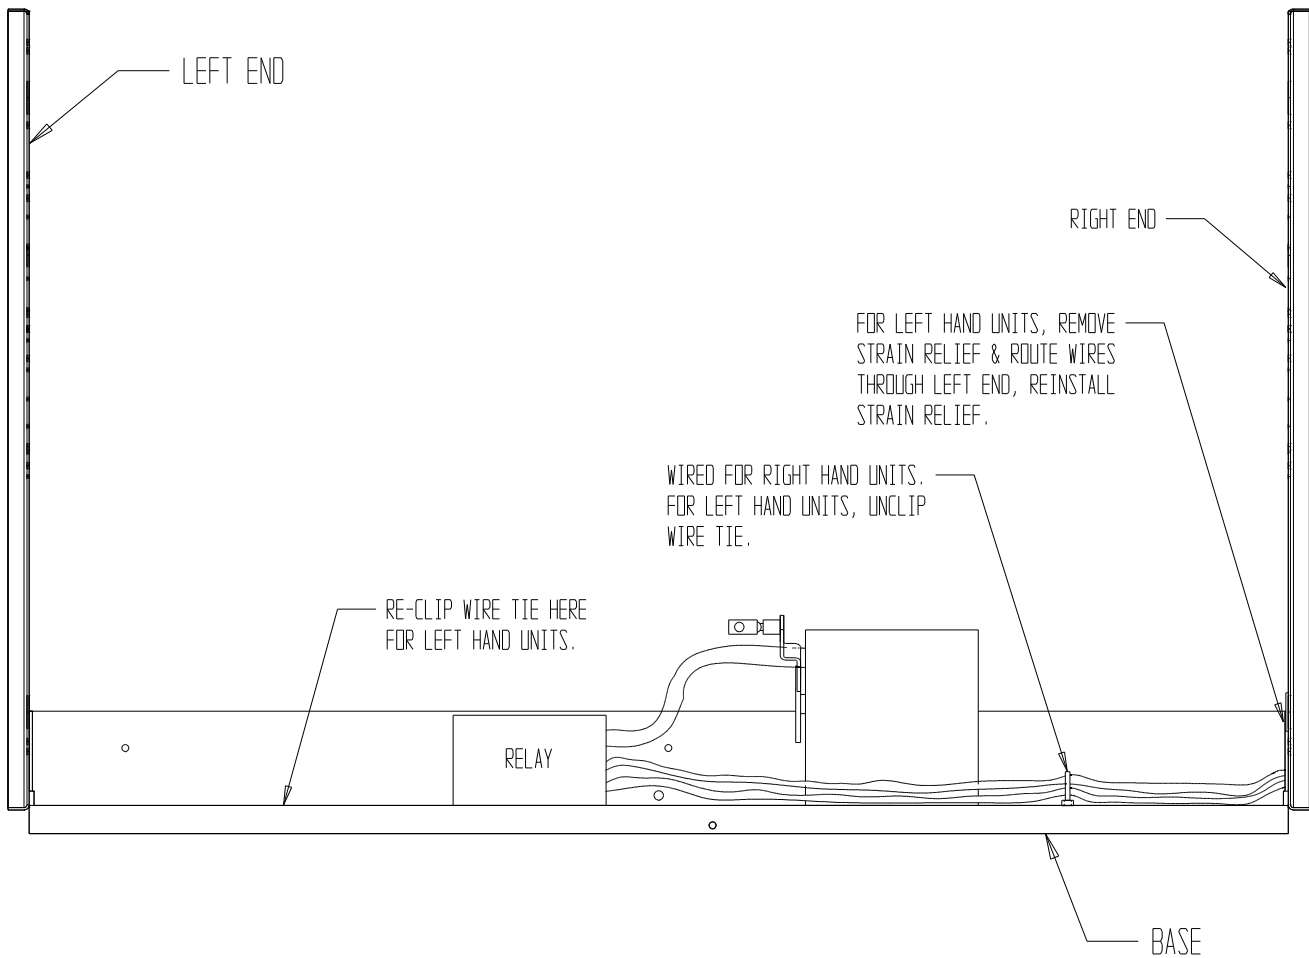


MIS-1334 B


**IMPORTANT:** Position front lip of ventilator on top of front grille and condenser partition. (See Figure 4 inset.) This is important to ensure proper drainage of any water entering damper assembly.

7. Open control panel to gain access to unit low voltage terminal block.
8. Route electrical harness leads through the 7/8" bushing in control panel (Figure 4) into low voltage box.

**FIGURE 4  
INSTALL VENTILATOR**

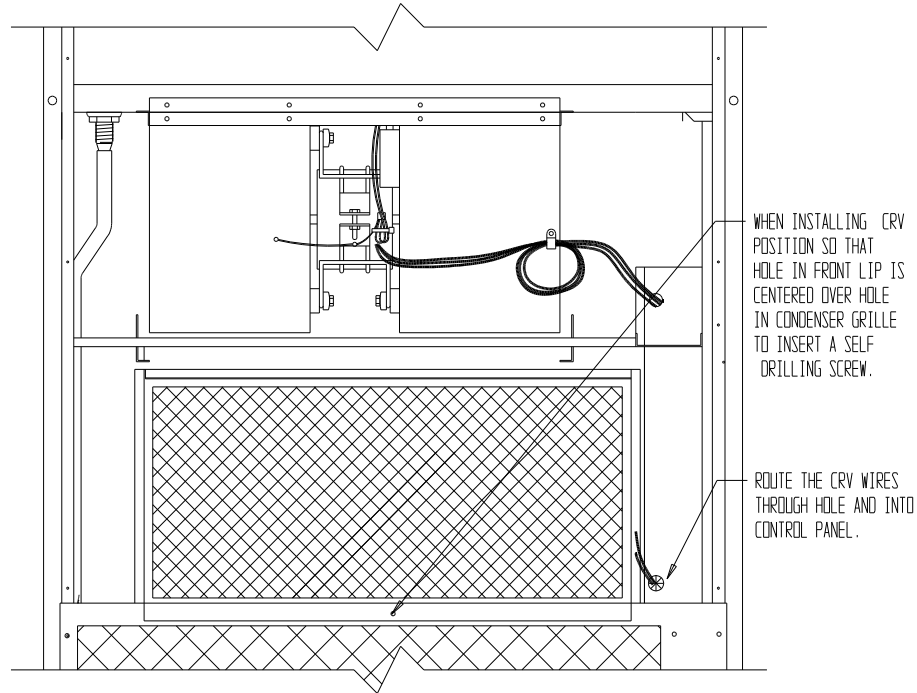

**FIGURE 4 INSET  
SIDE SECTION**

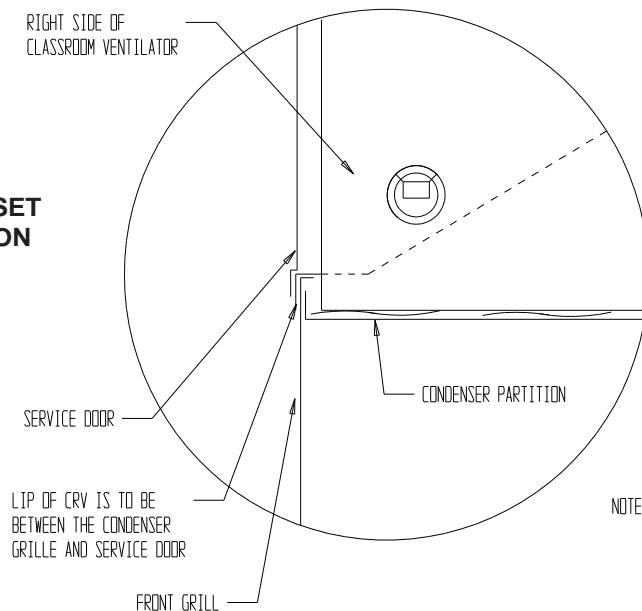


NOTE: PLUG THE FOUR .125 DIA. HOLES IN THE SERVICE DOOR WITH THE CANDE CLIPS,

9. Connect leads with fork terminal to corresponding points on unit terminal strip. (See Manual 2100-507 for air conditioner connection diagrams; see Manual 2100-516 for heat pump connection diagrams.)
10. Close control panel cover.
11. Replace left filter support, filter and four (4) screws in condenser grille.
12. Reinstall the blower access panel at top of unit and secure with sheet metal screws.
13. Ventilator Checkout
  - A. Remove mist eliminator to allow access to minimum position thumbwheel or blade stops.
  - B. Resupply power to unit.
  - C. Energize the evaporator blower by switching thermostat to the manual fan position with heat/cool in OFF position.
  - D. Ventilator should open to the position set by position adjustment thumbwheel on the CRVS, or to the blade stops on the CRVP. On the CRVS, cycle position adjustment thumbwheel to full open through full close. Observe damper blade operation throughout travel to assure free, unobstructed movement. (See Figure 5.)
  - E. De-energize evaporator blower. Damper blade should close.
  - G. This completes ventilator checkout.
14. Adjust damper blade for required ventilation airflow. (See next section.)
15. Replace mist eliminator. Be sure it is installed with the drain holes to the bottom.
16. Remove blank off plate or barometric fresh air damper installed on service access door. Plug four (4) mounting holes with the plastic plugs provided with the ventilator.
17. Replace service access panel.
18. Ventilator is now ready for operation.



**FIGURE 5  
CRV POSITION ADJUSTMENT**

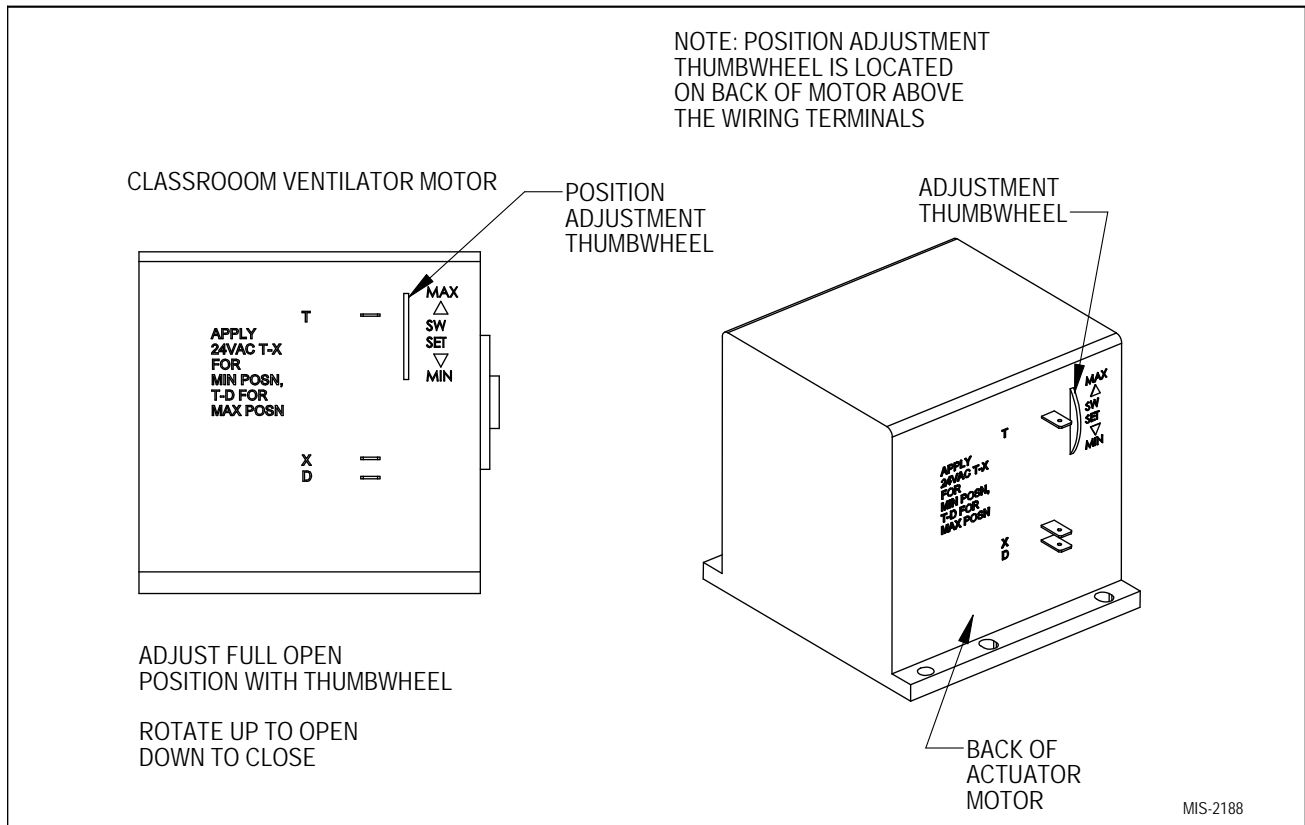

### BLADE ADJUSTMENT FOR DESIRED VENTILATOR AIR


The amount of ventilation air supplied by the commercial room ventilator is dependent on five (5) factors.

1. Return air duct static pressure drop.
2. Supply air duct static pressure drop.
3. Indoor blower motor speed.
4. Damper blade open position setting.
5. Tightness or looseness of building envelope.


Determine on what speed the evaporator motor is running.

Refer to the graphs on the following pages to determine the blade setting necessary to achieve the ventilation air required. With the blower energized, use the thumbwheel on the CRVS-5, adjust blade to desired blade position. On the CRVP-5 and CRVP-5L, move the blade stops on the sides of the CRVP to the desired blade position - making sure the stops are parallel side to side.


### S38H1 HIGH SPEED TOTAL AND VENTILATION AIRFLOW

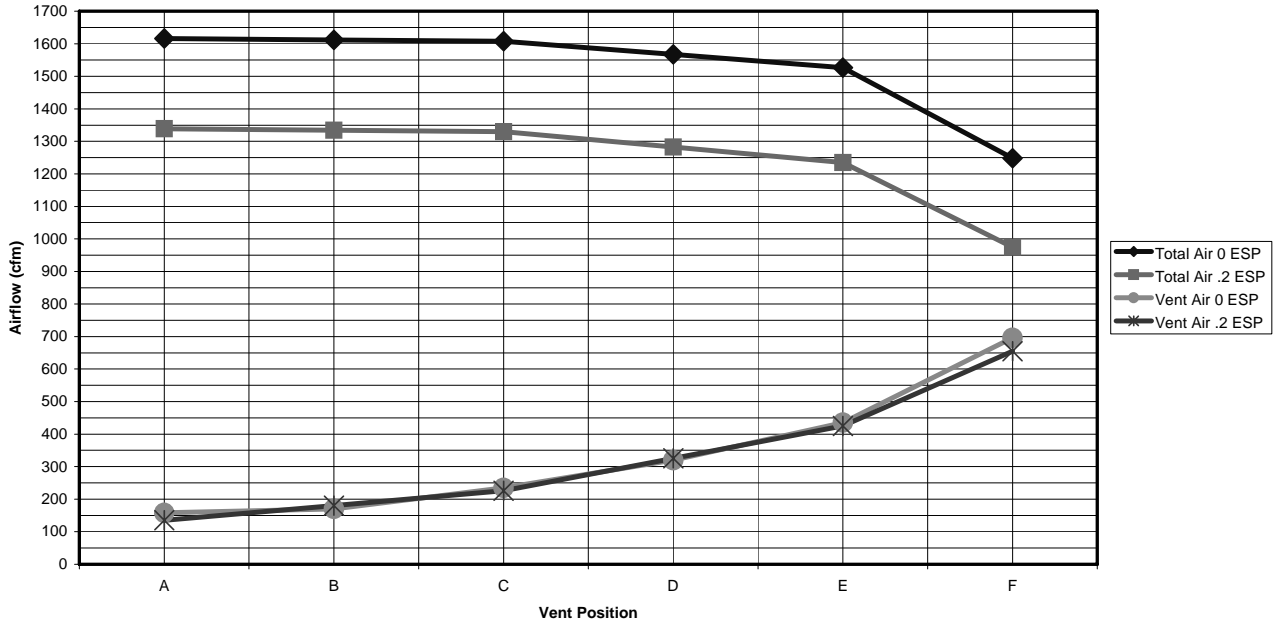


### S38H1 MEDIUM SPEED TOTAL AND VENTILATION AIRFLOW

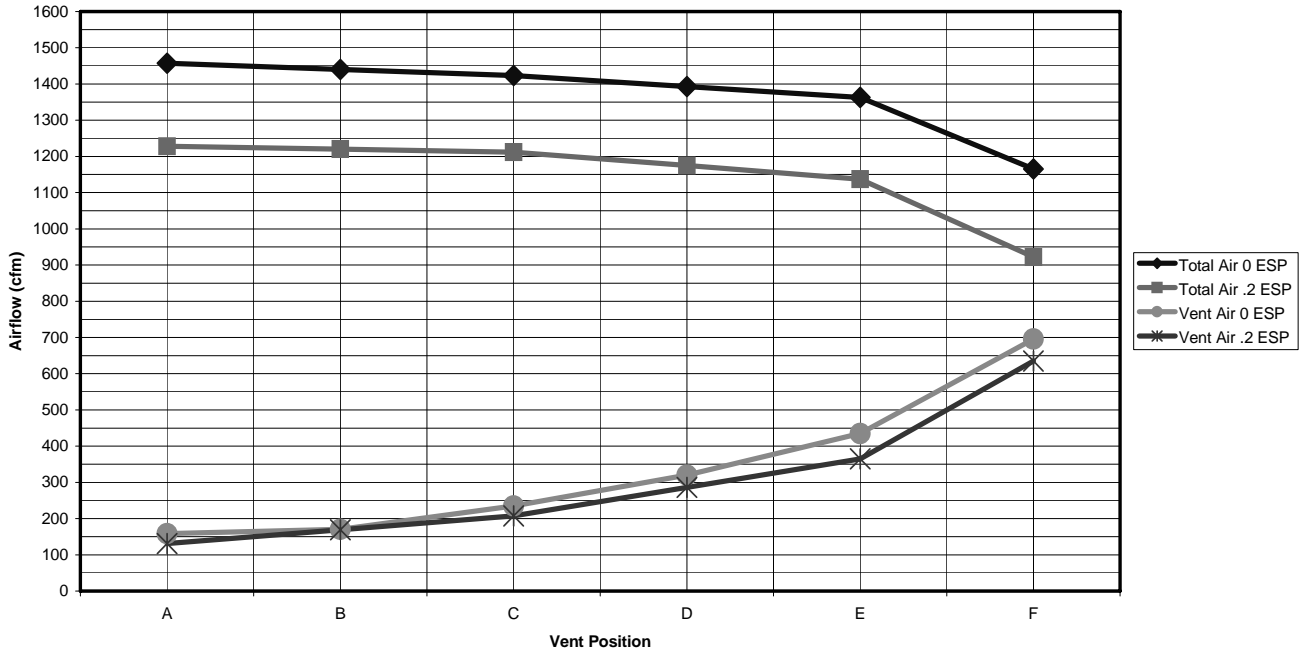


### S38H1 LOW SPEED TOTAL AND VENTILATION AIRFLOW

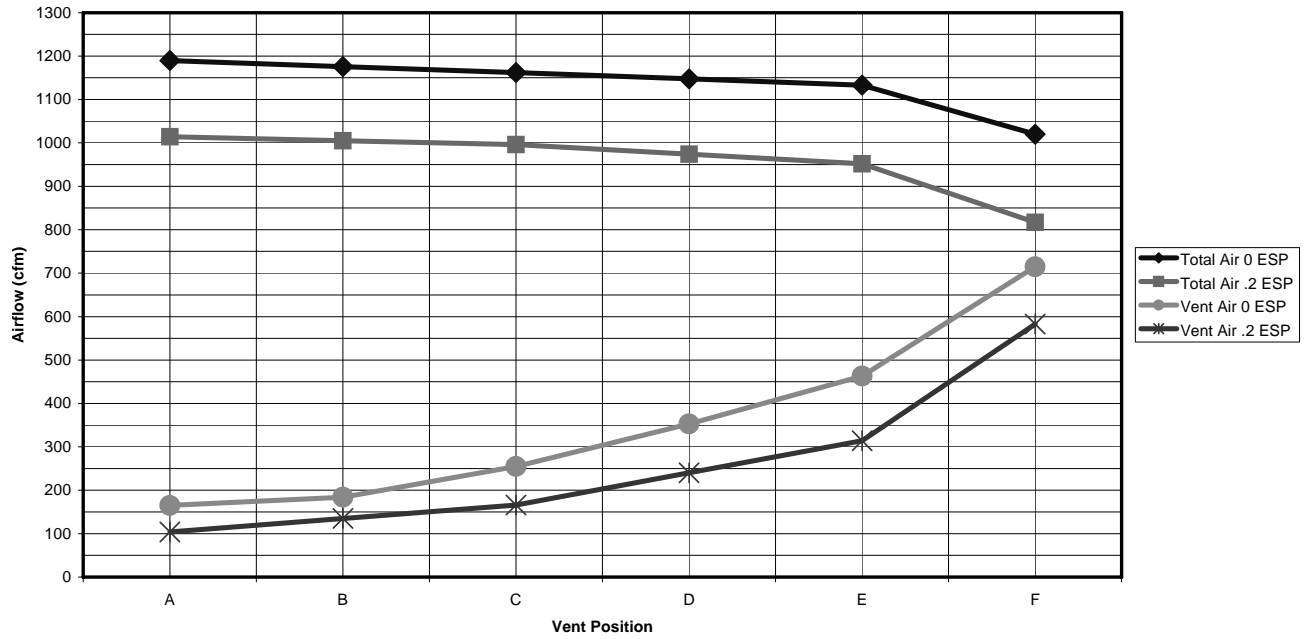


### S43H1/S49H1/S61H1 HIGH SPEED TOTAL AND VENTILATION AIRFLOW

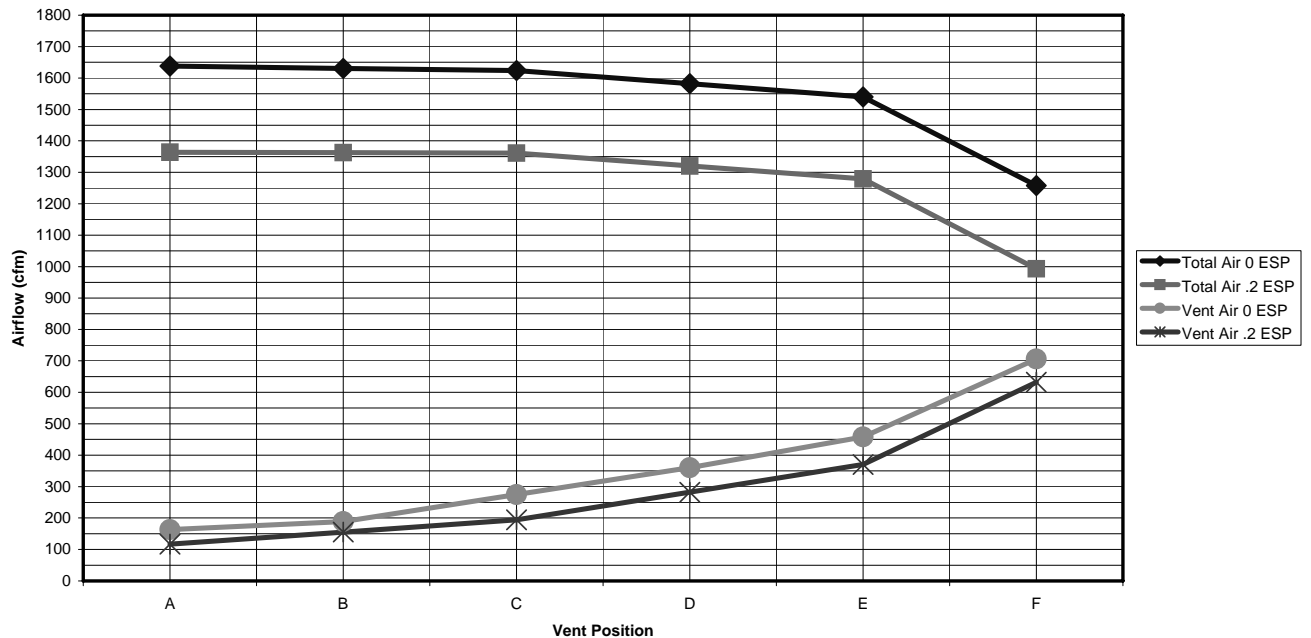


### S43H1/S49H1/S61H1 MEDIUM SPEED TOTAL AND VENTILATION AIRFLOW

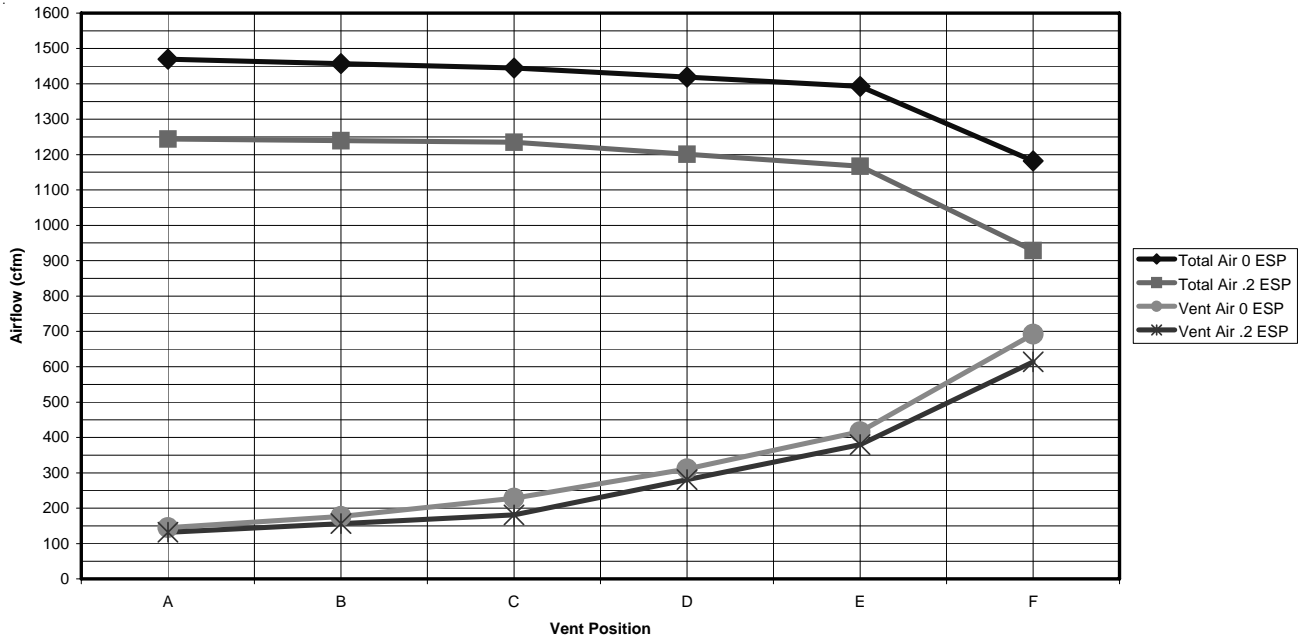


### W42A/H & W48A/H HIGH SPEED TOTAL AND VENTILATION AIRFLOW

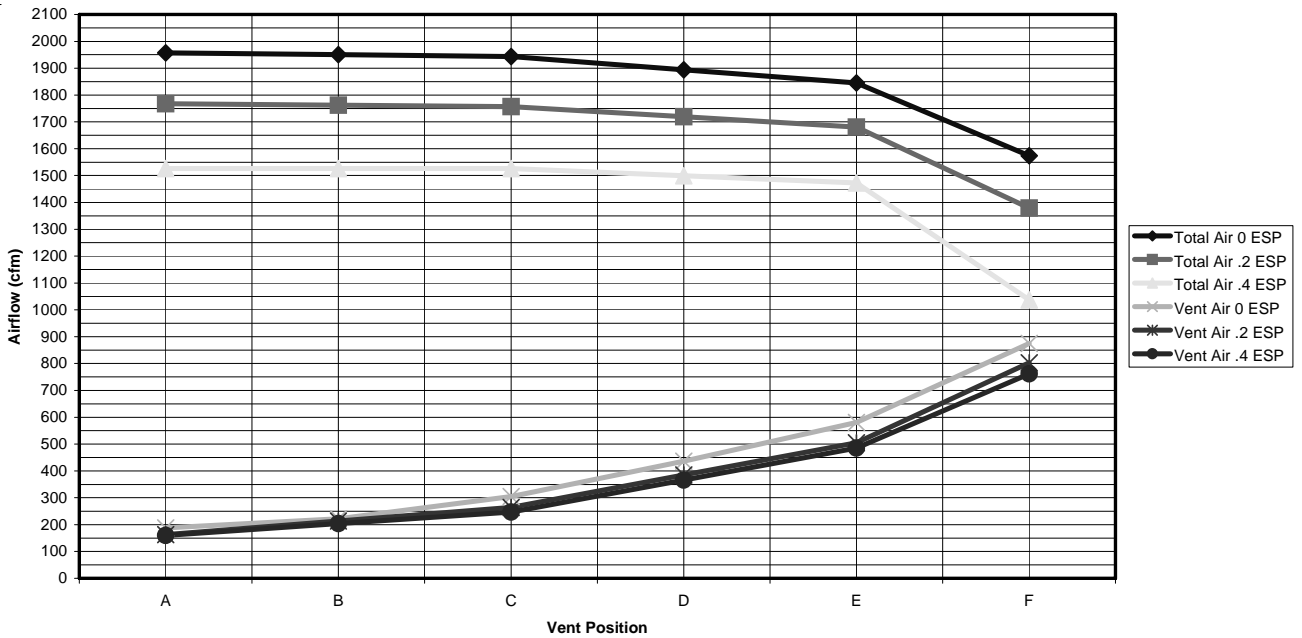


### W42A/H & W48A/H LOW SPEED TOTAL AND VENTILATION AIRFLOW

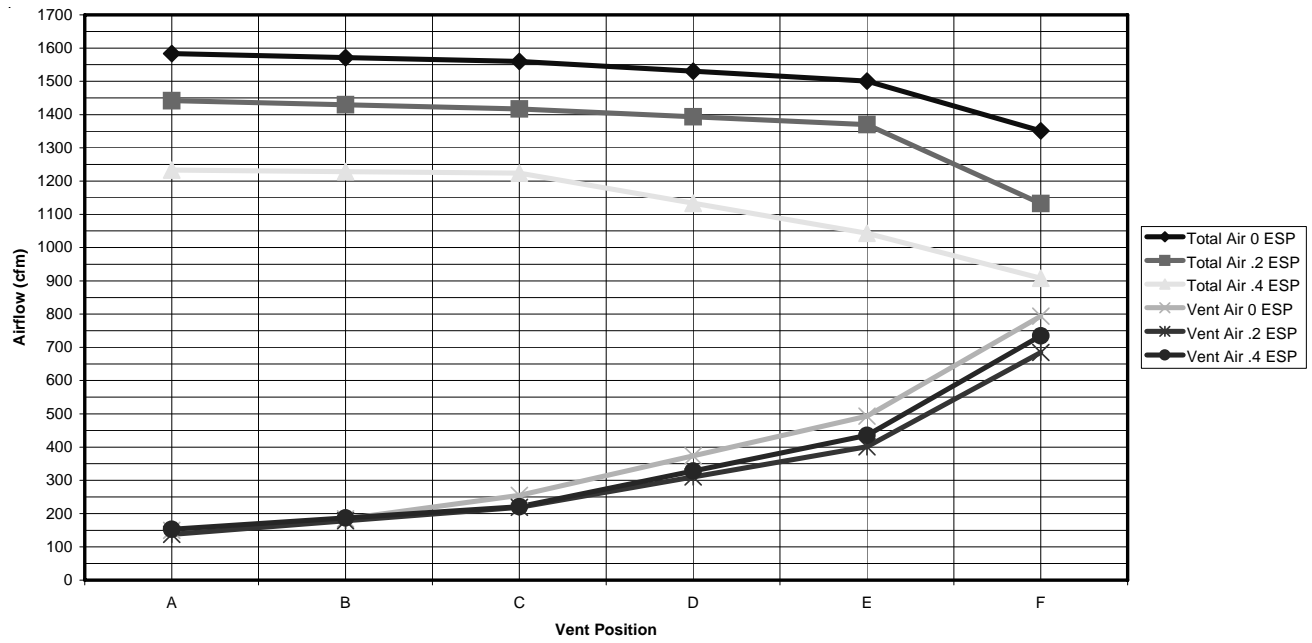

### W60A/H & W70/72A HIGH SPEED TOTAL AND VENTILATION AIRFLOW

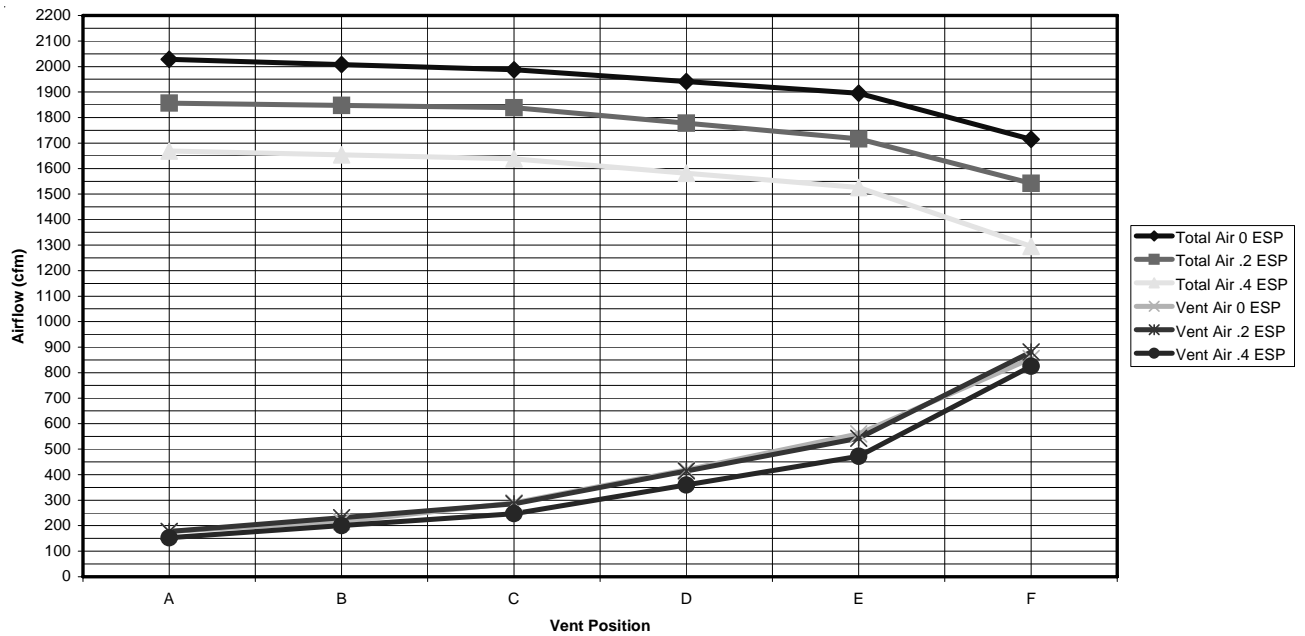

### W60A/H & W70/72A LOW SPEED TOTAL AND VENTILATION AIRFLOW

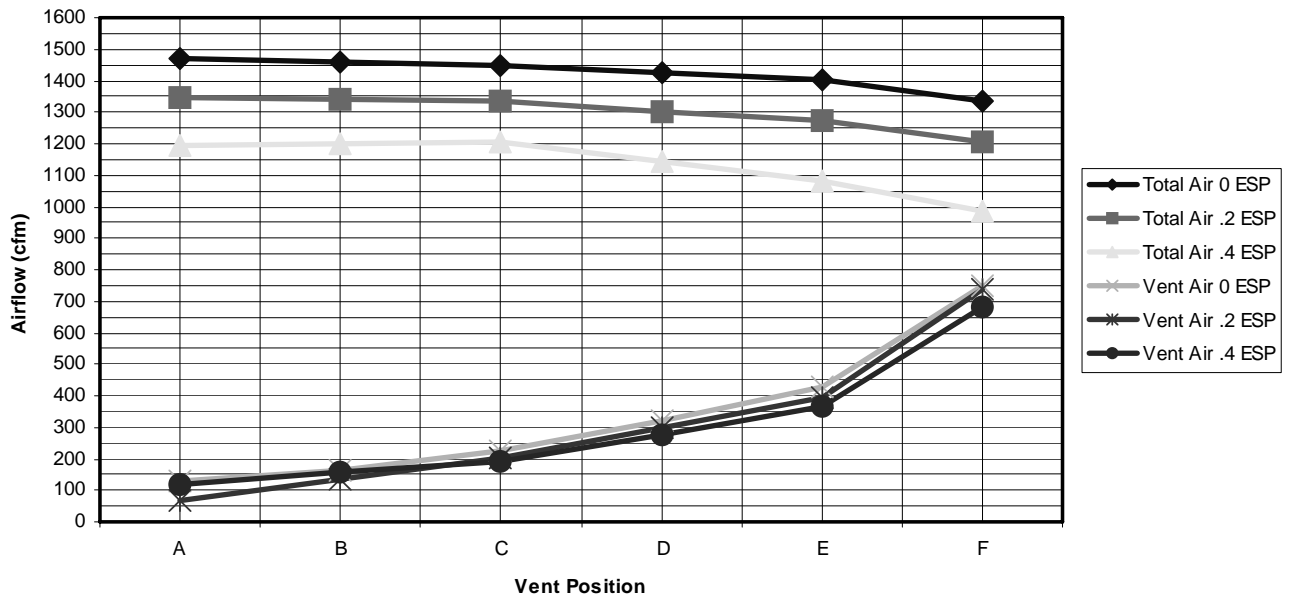

## COMMERCIAL ROOM VENTILATOR – W\*\*A, W\*\*H AND W\*\*L SERIES

### FEATURES


- One piece construction – easy to install with no mechanical linkage adjustment required.
- Exhaust air damper – built in with positive closed position. Provides exhaust air capability to prevent pressurization of tight buildings.

- Actuator motor – 24 volt, power open, spring return with built in torque limiting switch.
- Provides up to 75 percent of outside air.

### COMMERCIAL ROOM VENTILATOR SEQUENCE OF OPERATION

On a call for blower operation, CRV opens to a position as set by minimum position potentiometer. See Figure 6.


**FIGURE 6  
CALL FOR BLOWER OPERATION**

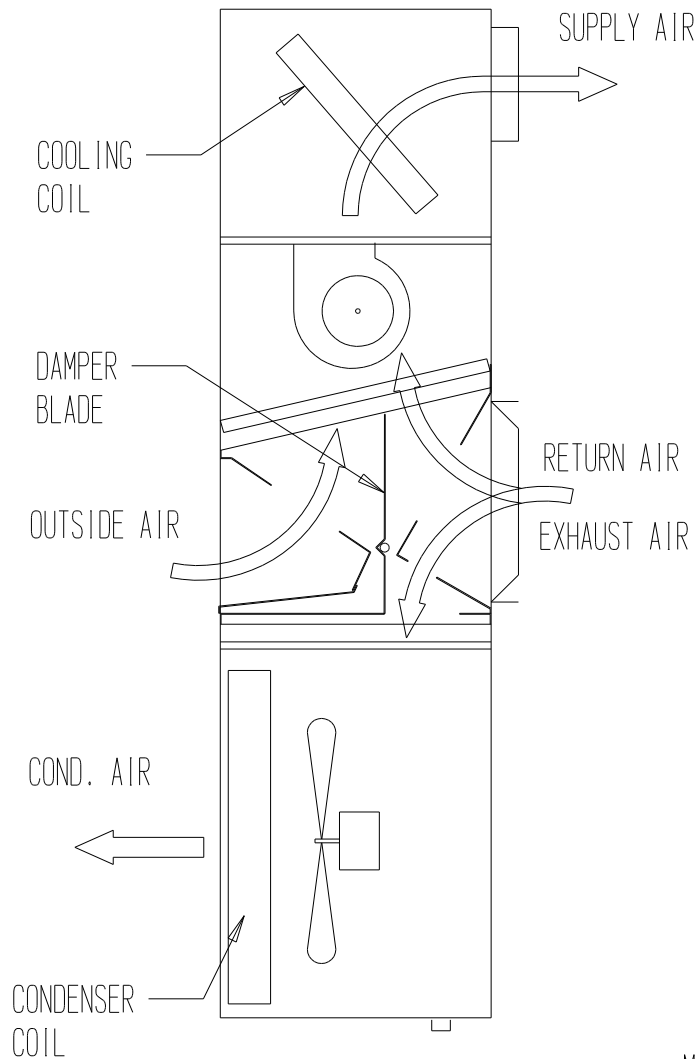

MIS-347

A call for cooling cycles the compressor, and dampers remain in the ventilation mode. On loss of blower operation, CRV closes fully. See Figure 7.

**FIGURE 7  
CALL FOR COOLING OPERATION**

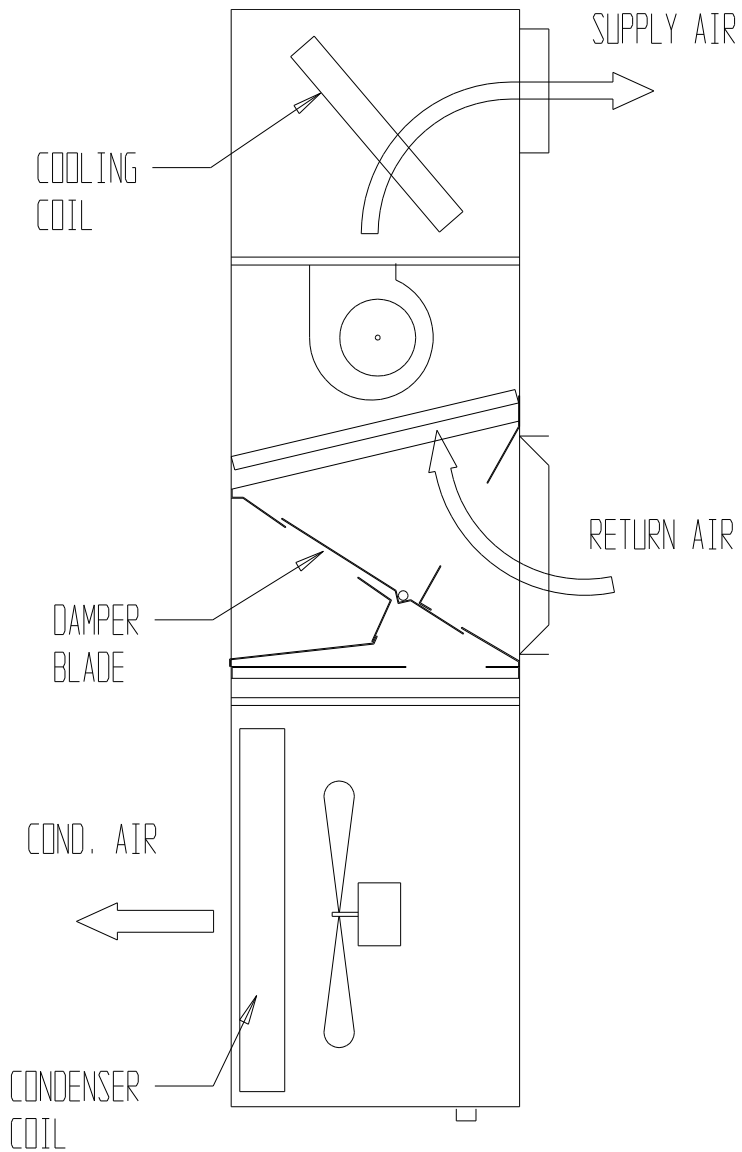

MIS-348