
INSTALLATION INSTRUCTIONS

Partial Flow Commercial Room Ventilator 24 Volt On/Off with Spring Return and Exhaust

Models:
CRV-F2 CRV-F3

For Use with Bard Single Stage Wall Mount
Air Conditioner and Heat Pump Models:

CRV-F2: W18A/LB, W24A/LB, W18HB, W24HB
CRV-F3: W30A/LB, W36A/LB, W30HB, W36HB



Climate Control Solutions

Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 2100-691
Supersedes: **NEW**
Date: 3-1-19

CONTENTS

General Information3

Commercial Room Ventilator Model Nomenclature ...	3
Unpacking	3
General	3
Description	3
Application	3

Installation of Field-Installed CRV-F*4

Basic Installation.....	4
Preparing Unit for CRV-F Installation.....	4
Commercial Room Ventilator (CRV) No Hood Installation	7
Blade Adjustment for Desired Ventilation Air	11

Figures

Figure 1	Wall Mount Unit Access Panels	4
Figure 2	Condenser Exhaust Plate with Screen.....	5
Figure 3	Filter Bracket and Filter Bracket Fill Plate Installation	6
Figure 4	Extension Cable Installation	7
Figure 5	Damper Assembly Installation	8
Figure 6	Vent Door Assembly.....	8
Figure 7	Required Control Connections for CRV with Air Conditioners	9
Figure 8	Required Control Connections for CRV with Heat Pumps	10
Figure 9	Blade Adjustment For Desired Ventilation Air.....	11
Figure 10	Call for Ventilation With or Without Compressor Operation	14
Figure 11	Call for Compressor or Fan Only with Ventilation Off	15


Graphs

Graph 1	W18 Ventilation Delivery.....	12
Graph 2	W24 Ventilation Delivery.....	12
Graph 3	W30 Ventilation Delivery.....	13
Graph 4	W36 Ventilation Delivery.....	13

CRV FEATURES

- One piece construction – easy to install with no mechanical linkage adjustment required.
- Exhaust air damper – built in with positive closed position. Provides exhaust air capability to prevent pressurization of tight buildings.
- Actuator motor – 24 volt, power open, spring return with built in torque limiting switch.

Commercial Room Ventilator Model Nomenclature

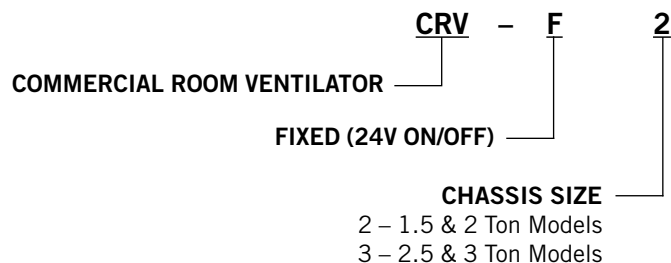

Unpacking

Upon receipt of the equipment be sure to compare the model number found on the shipping label with the accessory identification information on the ordering and shipping document to verify that the correct accessory has been shipped.

Inspect the carton housing of each ventilator as it is received, and before signing the freight bill, verify that all items have been received and that there is no visible damage. Note any shortages or damage on all copies of the freight bill. The receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent. Concealed damage not discovered until after loading must be reported to the carrier within 15 days of its receipt.

General

The ventilator should only be installed by a trained heating and air conditioning technician. These instructions serve as a guide to the technician installing the ventilator package. They are not intended as a step-by-step procedure with which the mechanically inclined owner can install the package.

The ventilator housing is shipped in one carton which contains the electrical harness, miscellaneous hardware and installation instructions.

Description

Commercial room ventilators CRV-F2 and CRV-F3 are designed to be used with the specific models with "letter" revision codes as designated on the front page of this installation instructions manual.

The CRV-F ventilator is an electromechanical vent system designed to provide fresh air to meet indoor air quality standards.

Commercial room ventilators CRV-F2 and CRV-F3 are internally mounted dampers with exhaust designed to provide up to 50% fresh air. The damper blade is powered by a 24 VAC motor with spring return on power loss. The damper is powered open anytime A is energized. Blade stop screws are located under the fresh air blade and will provide 10 different airflow settings.

When installed in the models listed on the front page, the CRV-F provides built-in exhaust provisions. When the damper blade opens to bring fresh air in, the damper also opens an exhaust relief. The exhaust air will flow into the condenser section of the unit. The condenser fan will help draw exhaust air out when it is operating with compressor in cooling or heat pump mode.

Application

The amount of outside fresh air brought into the structure is dependent on the supply and return duct static pressure present in the duct system. Refer to Graphs 1-4 on pages 12-13 for ventilation air that will be supplied at different blade settings and duct static pressures. For duct-free applications with return air filter grilles and supply grilles, use 0.00 supply air static pressure.

INSTALLATION OF FIELD-INSTALLED CRV-F*

Basic Installation

WARNING

Electrical shock hazard.

Disconnect remote electrical power supply or supplies before servicing.


Failure to do so could result in electric shock or death.

Preparing Unit for CRV-F Installation

1. Disconnect power to unit.
2. Unpack the CRV-F assembly, which includes the integral controls and electrical harness, body panels, miscellaneous hardware and installation instructions.


3. From existing wall mount unit, remove and save (or discard) as directed (see Figure 1):
 - Blower access panel (save)
 - Vent option panel (save)
 - Filter access panel (save)
 - Filter (save)
 - Outer and inner control panel doors (save)
 - Filter tray (discard, if applicable)
 - Exhaust cover plate (discard)
4. Install new condenser exhaust plate with screen over opening into condenser section (see Figure 2).
5. Remove filter brackets, if necessary. Two types of filter brackets have been used with these wall mount units. If the filter brackets are mounted flat, they can be used with the commercial room ventilator (CRV). If the brackets are set at a 30° angle, they must be removed and discarded. The circuit breaker offset plate must be loosened and moved slightly to gain access to several of the screws holding the filter brackets in place. Tighten the screws holding control panel after the filter brackets have been removed.

FIGURE 1
Wall Mount Unit Access Panels

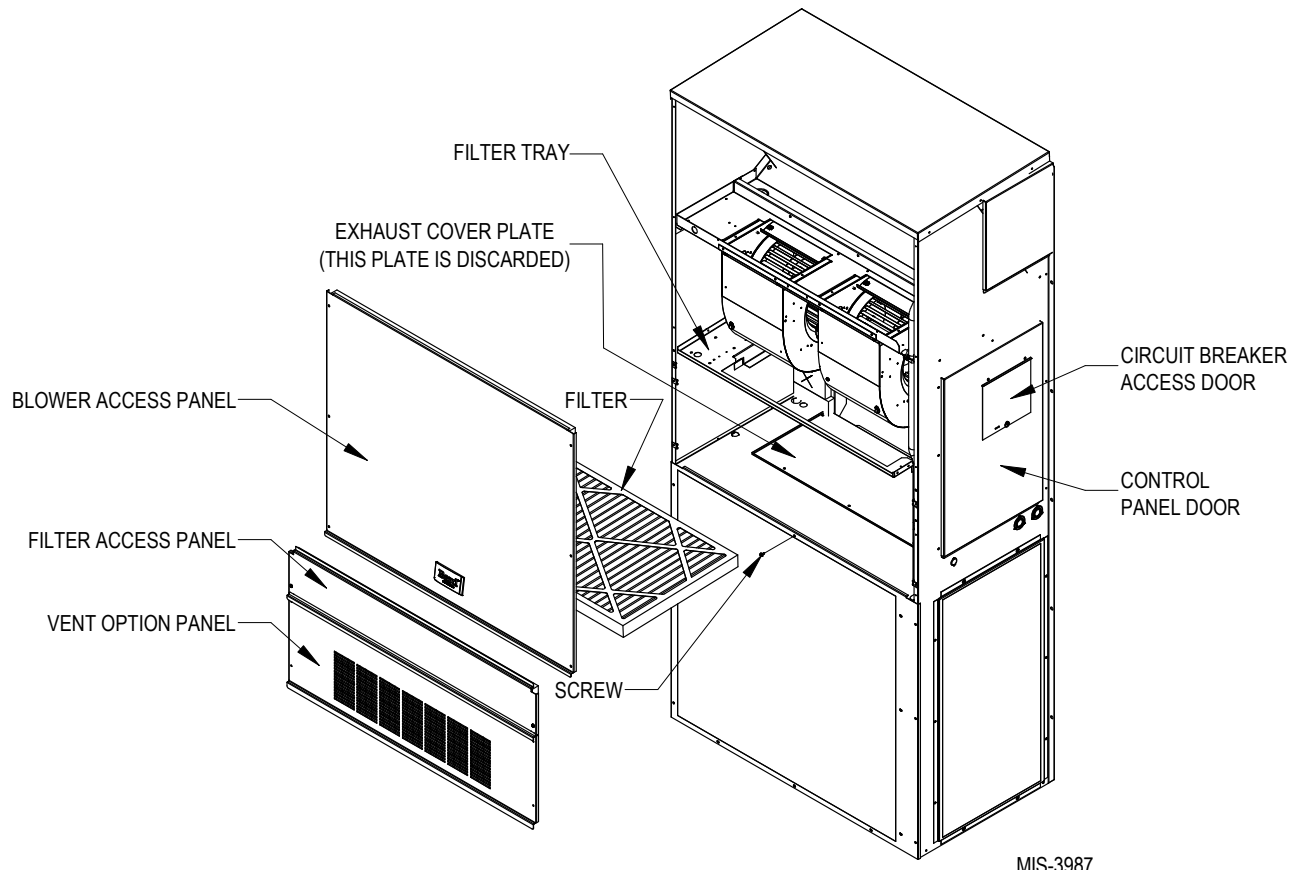

MIS-3987



FIGURE 2
Condenser Exhaust Plate with Screen

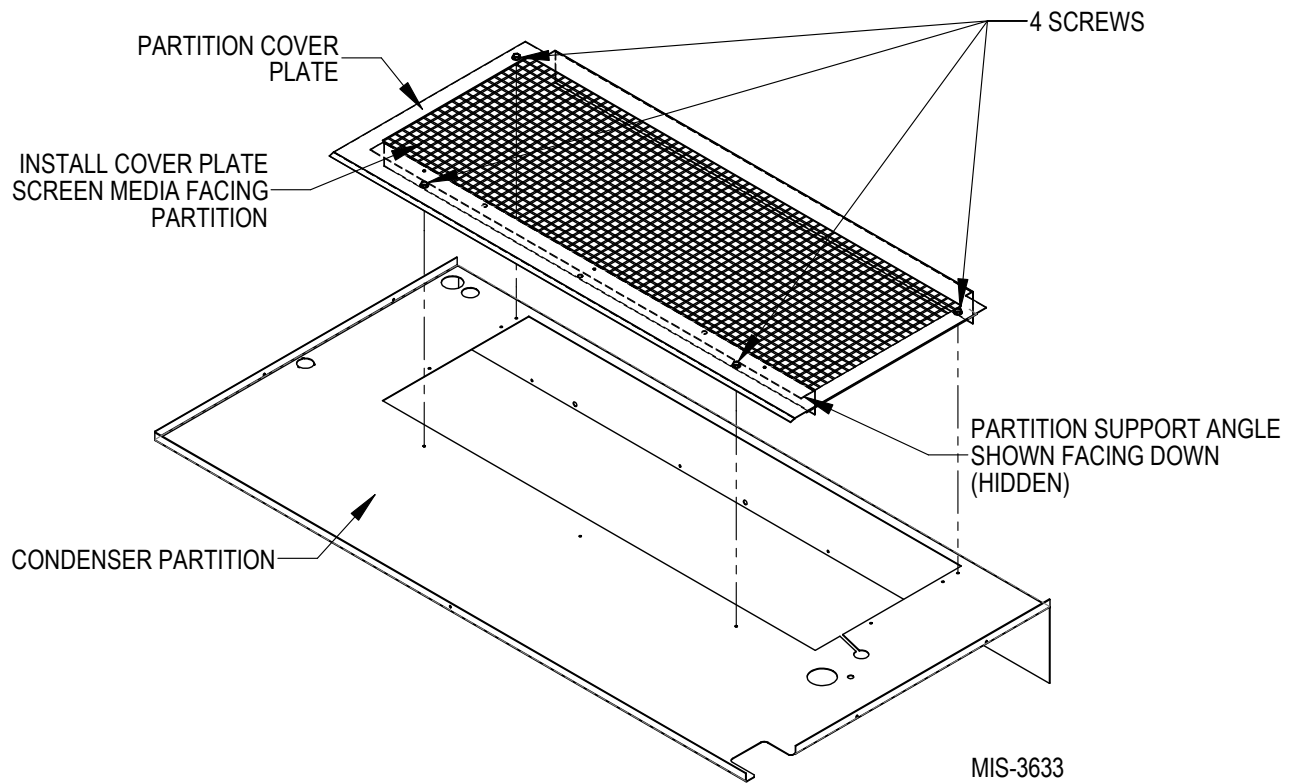

If filter brackets were removed in Step 5, proceed to Step 6. If the brackets were not removed, proceed to **Commercial Room Ventilator (CRV) No Hood Installation** on page 7.

6. Install filter bracket fill plate (if applicable) as shown in Figure 3 on page 6.
7. Install provided filter brackets on CRV-F assembly (see Figure 3).

FIGURE 3
Filter Bracket and Filter Bracket Fill Plate Installation

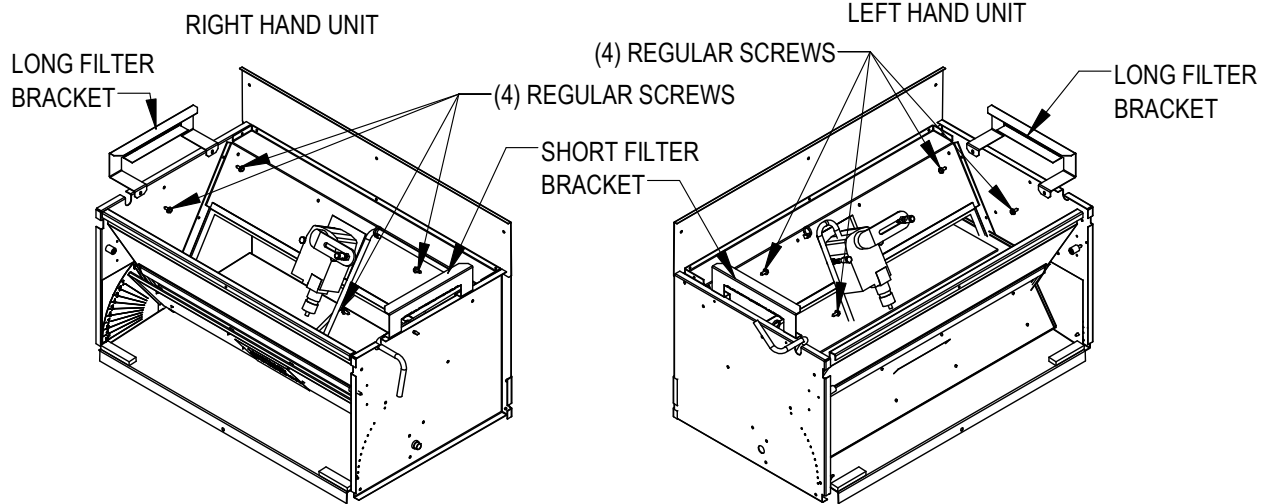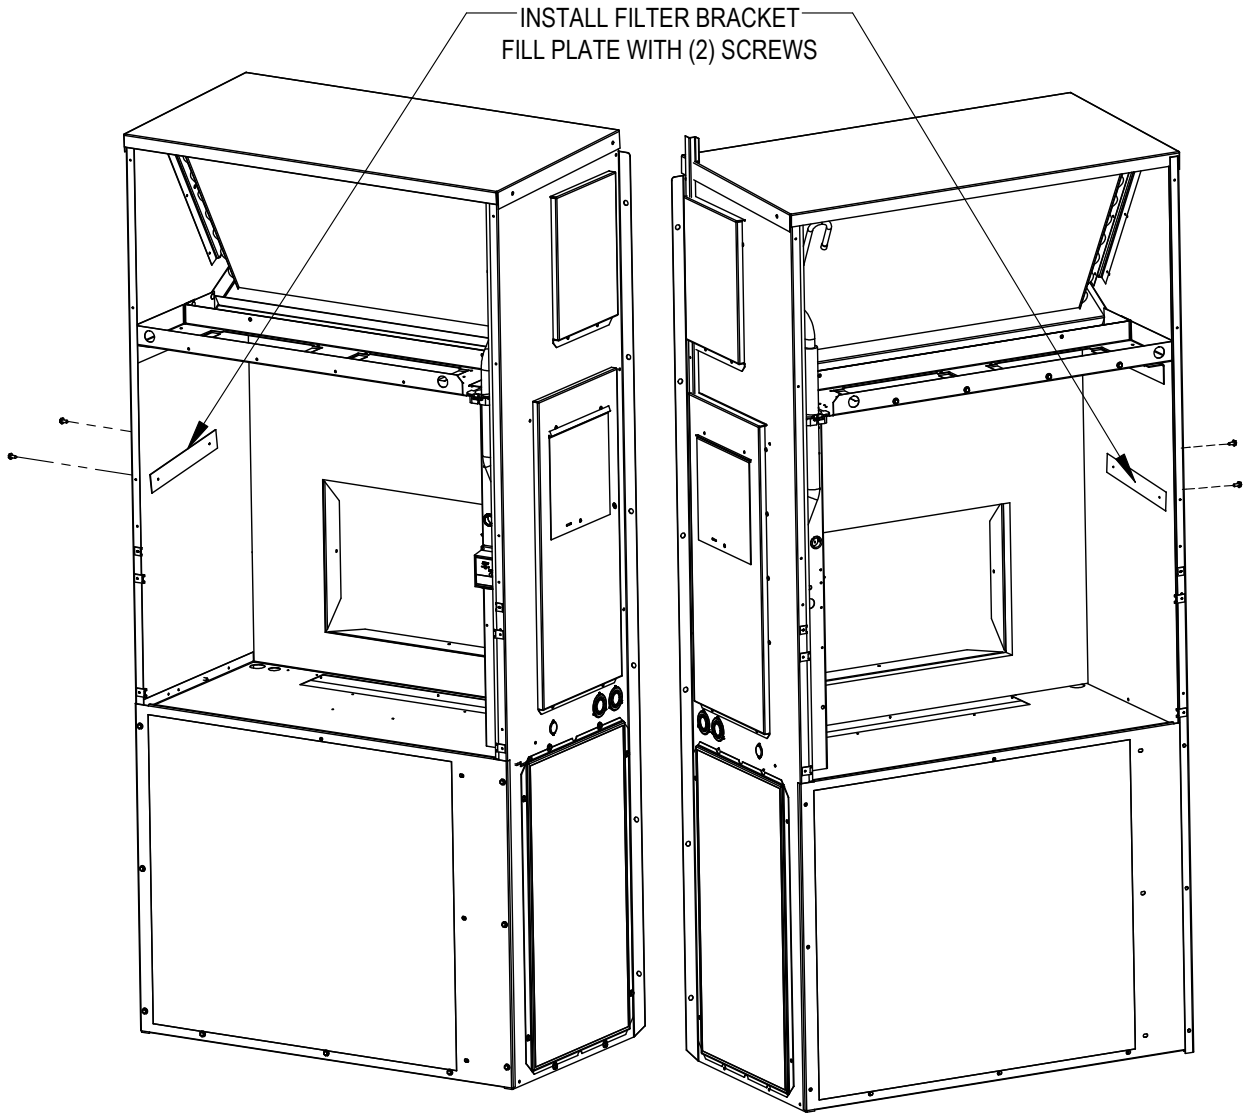


MIS-3988

Commercial Room Ventilator (CRV) No Hood Installation

1. Insert CRV into opening in the wall mount unit between the filter rack and the condenser section, being careful not to tear the unit insulation. Fully seat CRV assembly to rear of the cavity. Slide the CRV toward the control panel so that it lines up with the return air opening in the rear of the wall mount unit (see Figure 5 on page 8).
2. Insert and lock in the 12-pin plug end of the wire assembly into the front side of the unit's control panel (see Figure 5).
3. Replace the air filters if they were removed (airflow direction is up).
4. Put mist eliminator filter into place (as shown in Figure 6 on page 8), then install the unit filter door.
5. Make all the required thermostat connections per the applicable connection diagram found on pages 9 or 10, and restore power to the unit.
6. Replace the lower vent option door with the four (4) screws provided as shown in Figure 6.


FIGURE 4
Extension Cable Installation

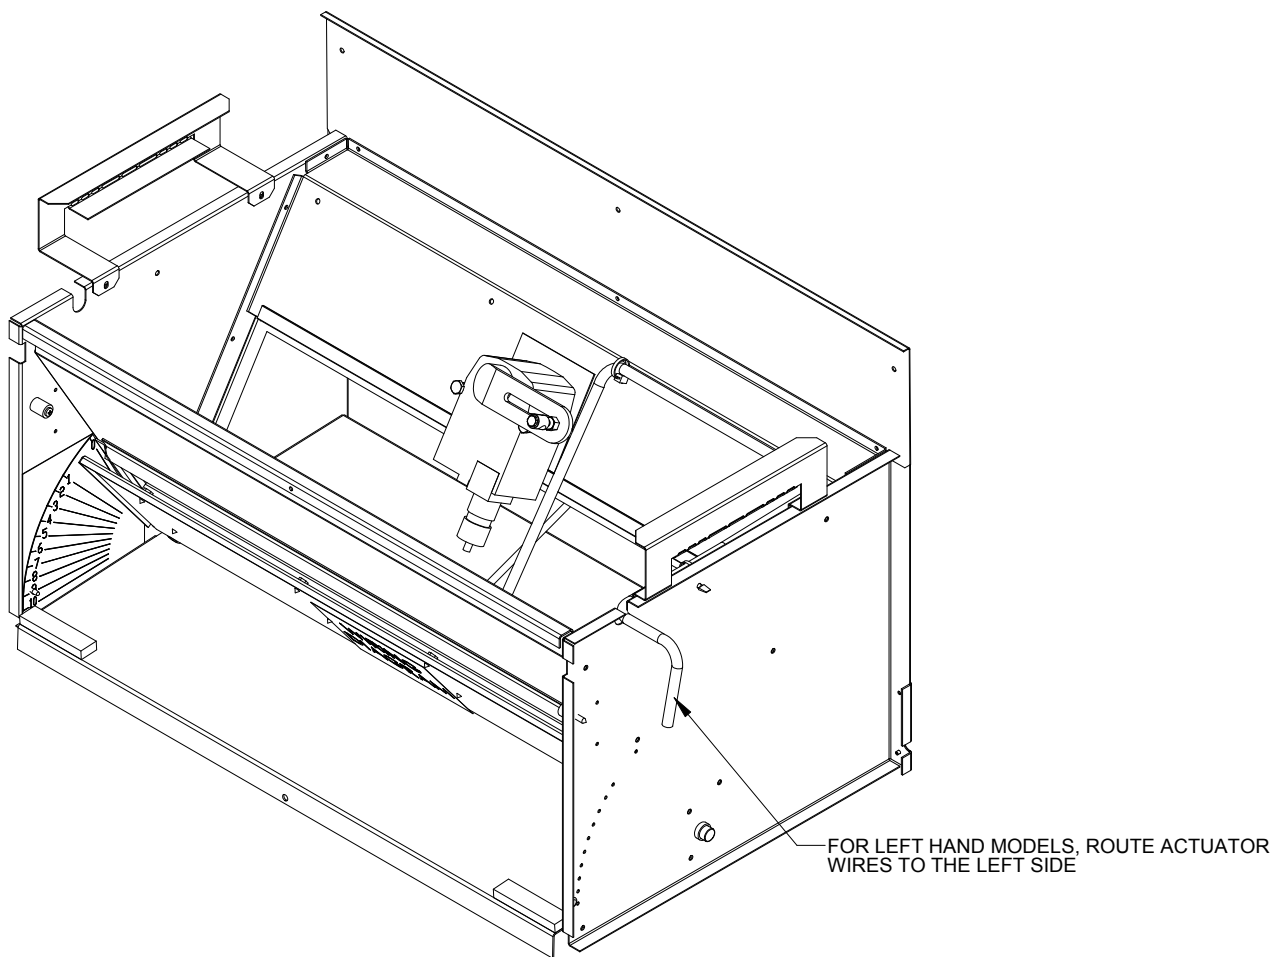

NOTE: Incorporated with the CRV-F is one piece of 20" split tubing. The tubing will cover the wire assembly routed to the actuator. The tubing and wires will be routed under the actuator assembly.


MIS-3989

FIGURE 5
Damper Assembly Installation

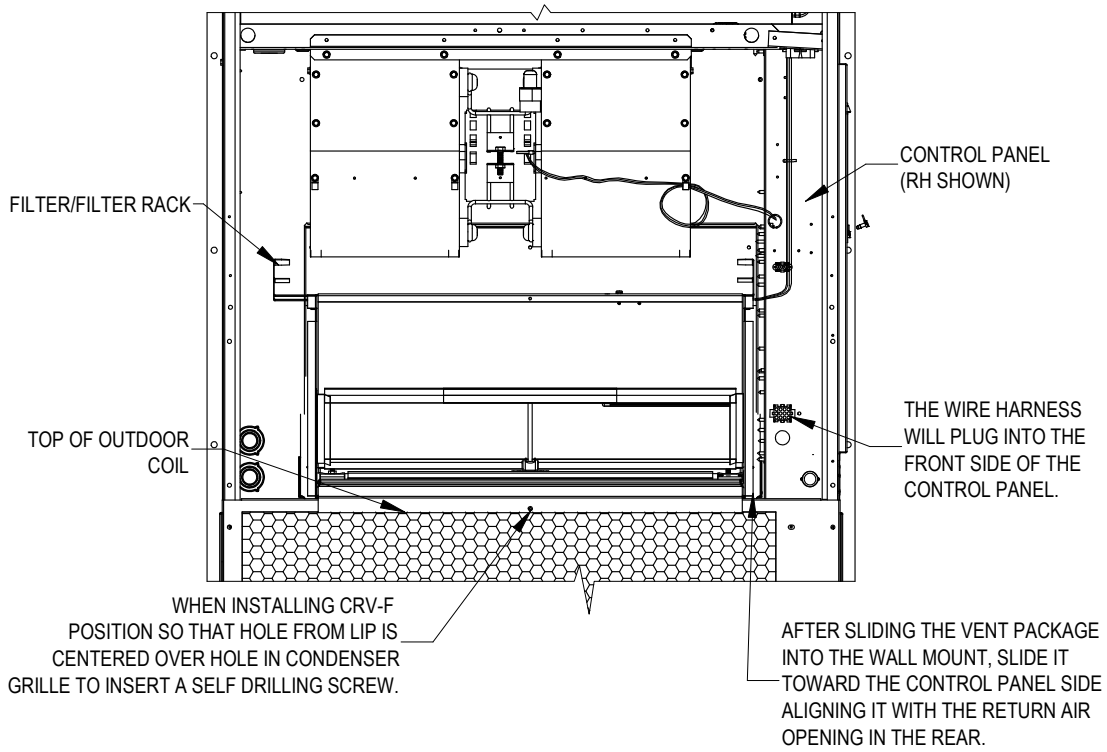


MIS-3999

FIGURE 6
Vent Door Assembly

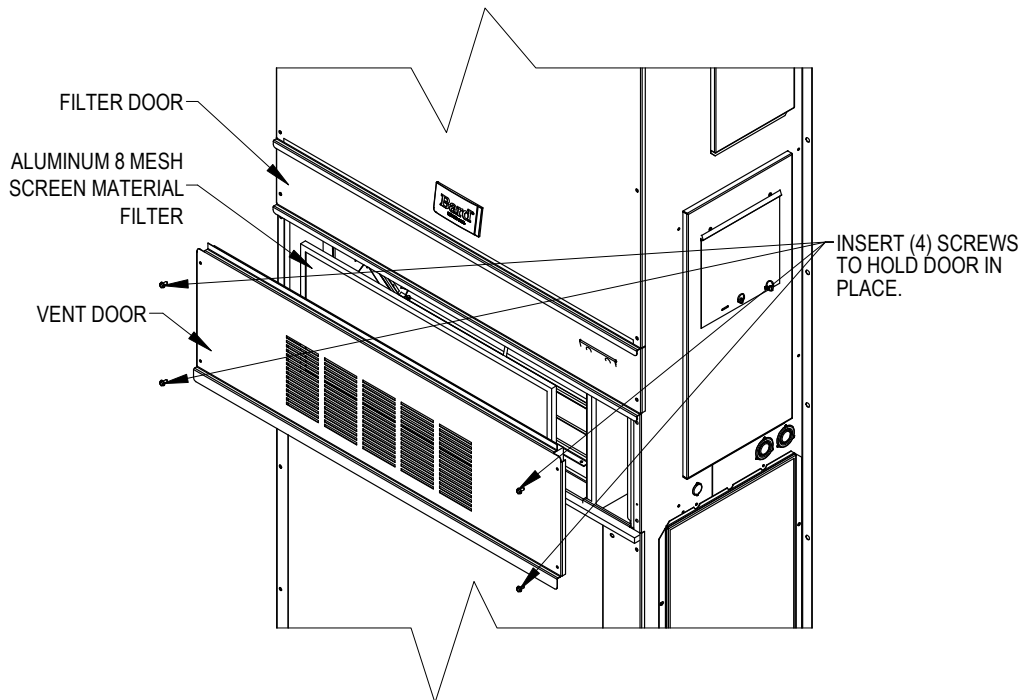

MIS-3865


FIGURE 7
Required Control Connections for CRV with Air Conditioners

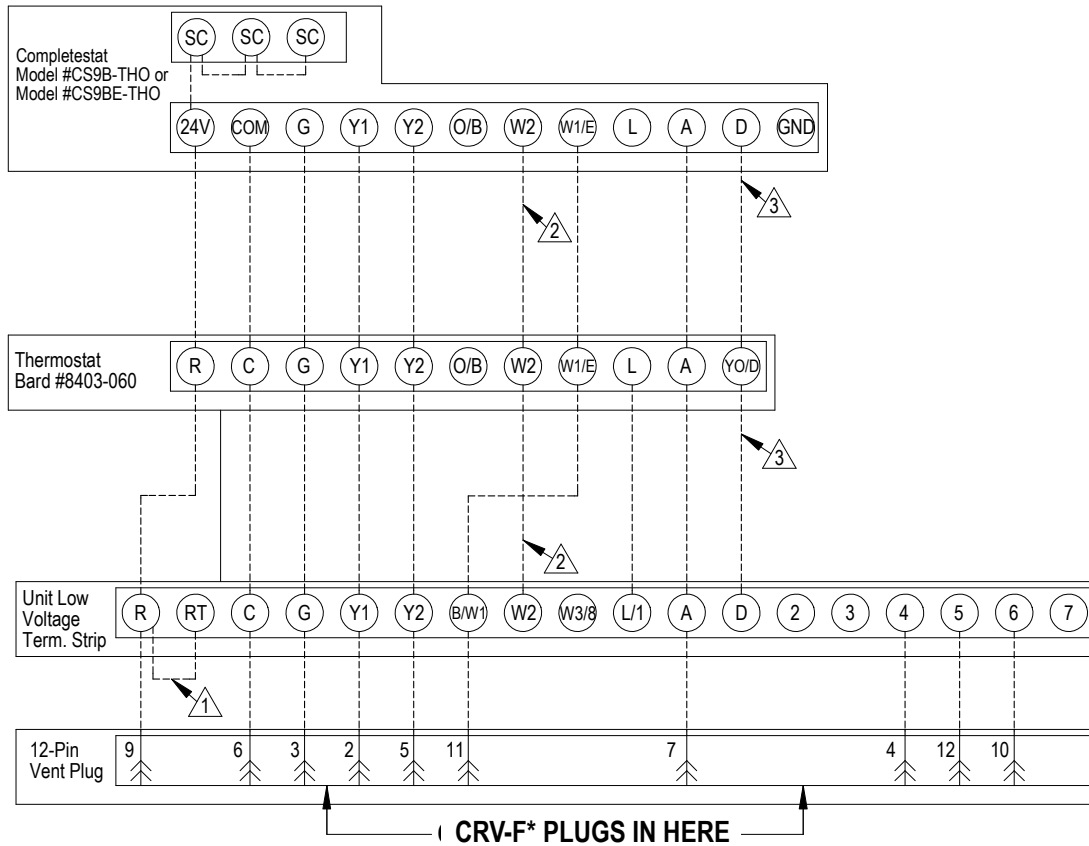

- △ 1 Factory installed jumper. Remove jumper and connect to N.C fire alarm circuit if emergency shutdown required.
- △ 2 Not needed below 15KW.
- △ 3 Additional wire required for dehumidification models.
- △ 4 Demand ventilation control, which could include switched CO2 control, or secondary motion activated switch.

MIS-4000

FIGURE 8
Required Control Connections for CRV with Heat Pumps

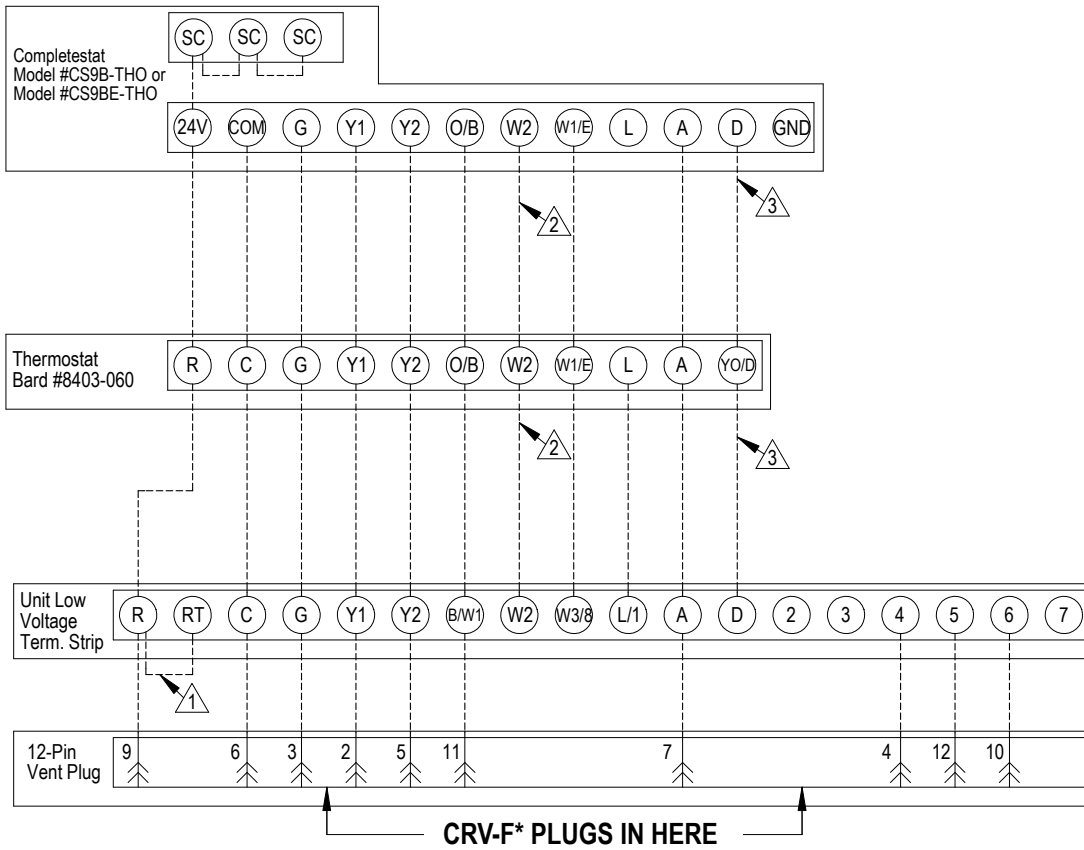

MIS-4001


Blade Adjustment for Desired Ventilator Air

The amount of ventilation air supplied by the commercial room ventilator is dependant on four factors.


1. Return air duct static pressure drop.
2. Supply air duct static pressure drop.
3. Indoor blower motor speed.
4. Damper blade open position setting.

Refer to the appropriate graph on the following pages to determine the blade setting needed for required airflow. Adjust blade stop screws accordingly (see Figure 9).

FIGURE 9
Blade Adjustment for Desired Ventilation Air

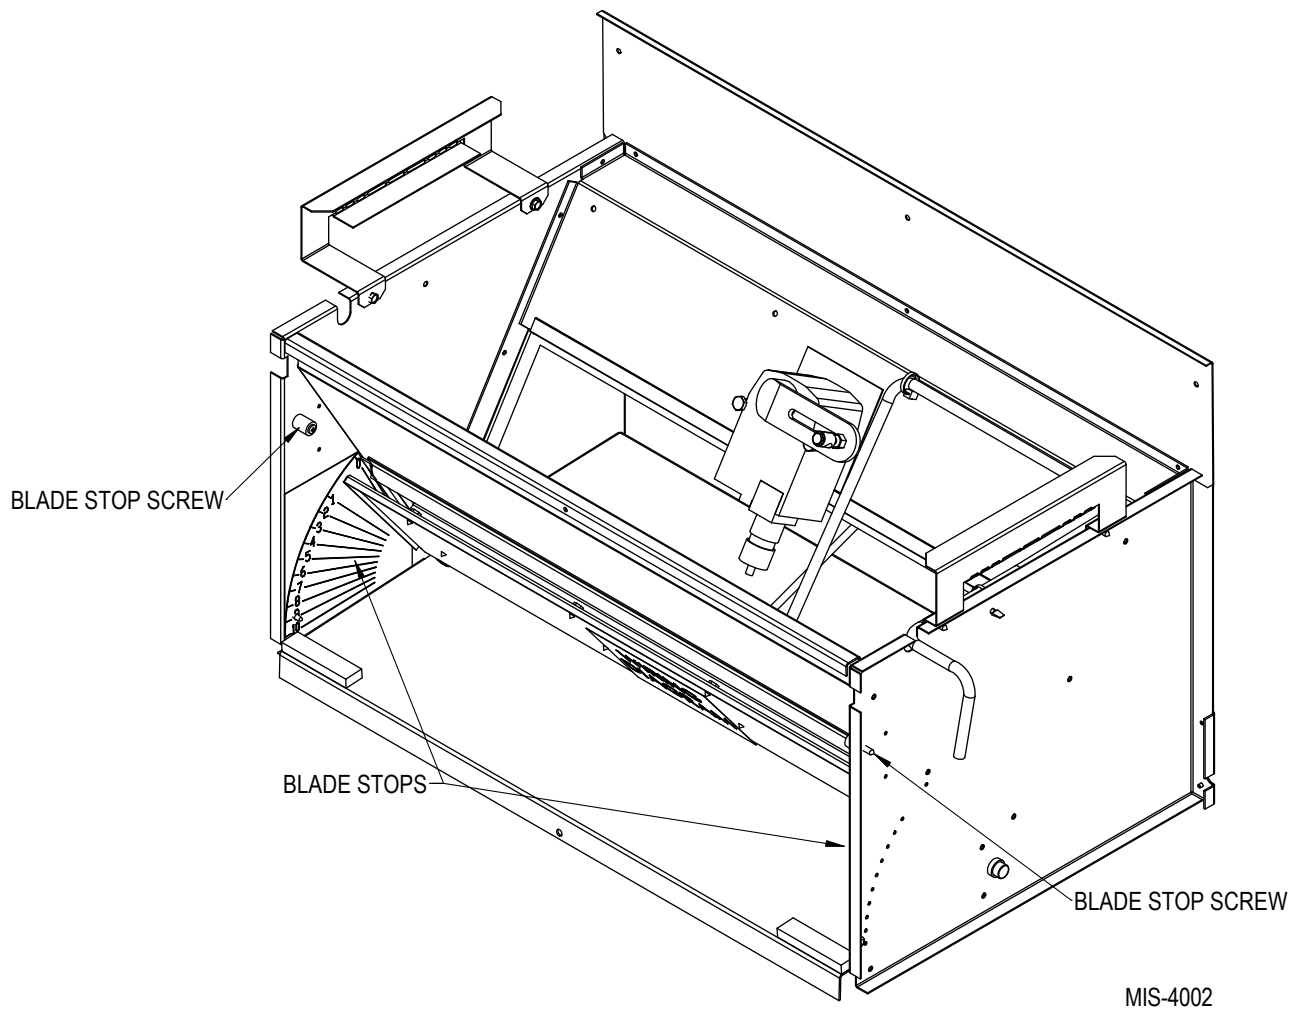

GRAPH 1
W18 Ventilation Delivery

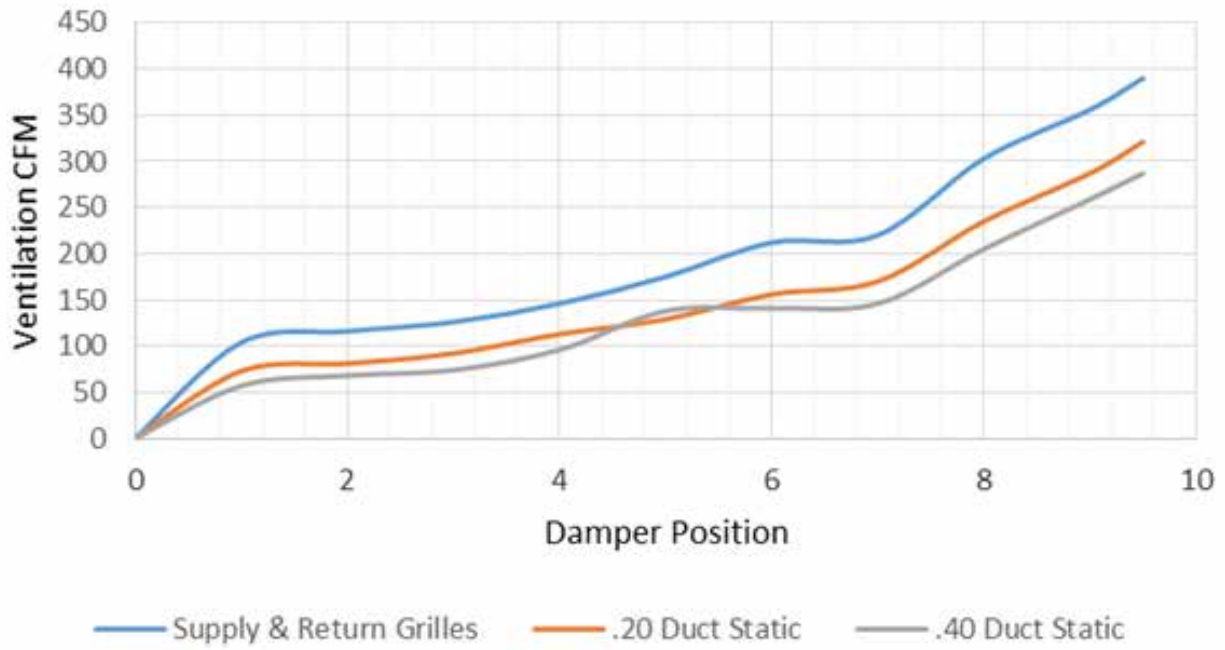

GRAPH 2
W24 Ventilation Delivery




GRAPH 3
W30 Ventilation Delivery



GRAPH 4
W36 Ventilation Delivery




FIGURE 10
Call for Ventilation With or Without Compressor Operation

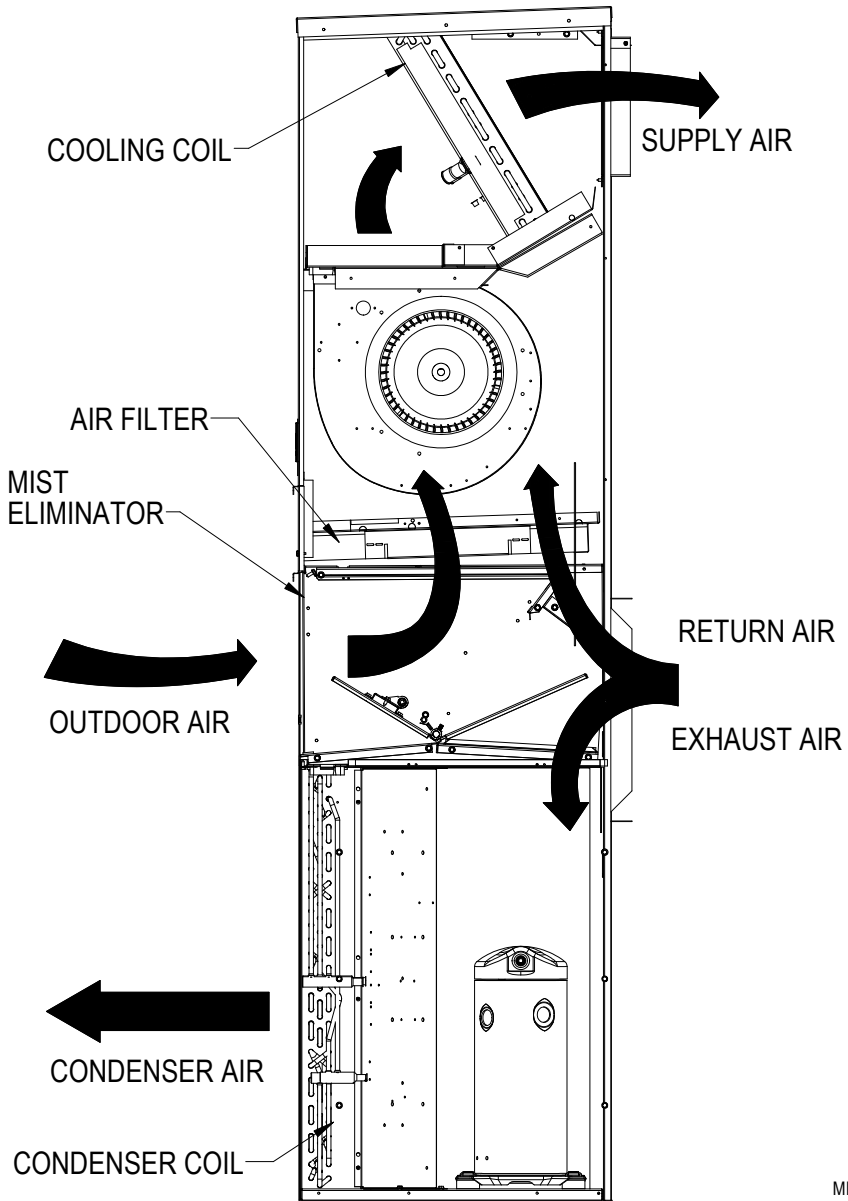

MIS-3866

FIGURE 11
Call for Compressor or Fan Only with Ventilation Off

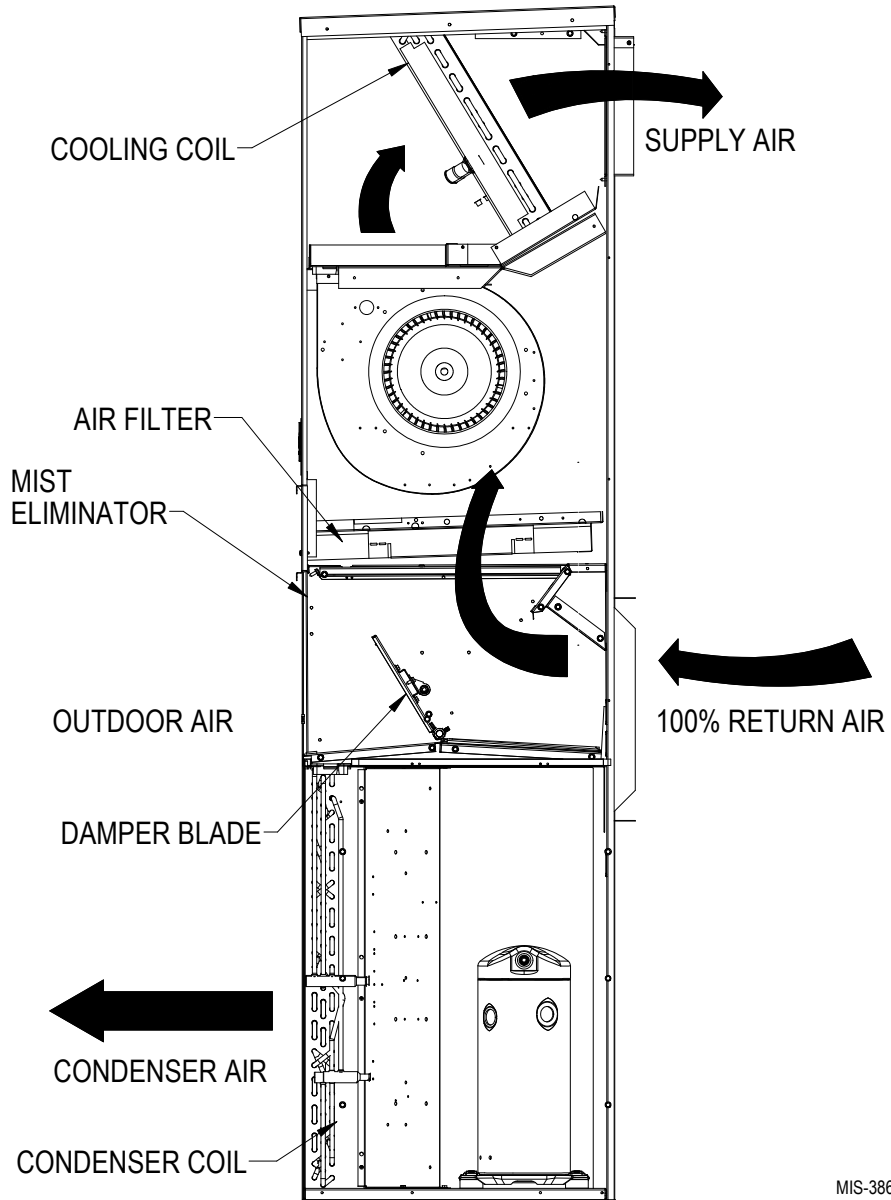

MIS-3867