

---

# INSTALLATION INSTRUCTIONS

---

## ELECTRIC HEAT PACKAGES

Models:

EHWA42C-A05	EHWA60C-F07	EHWA60C-A15	EHWA42CD-C09
EHWA60C-A10	EHWA60C-F12	EHWA42C-B06	EHWA60CD-A05
EHWA72C-A15	EHWA72C-A05	EHWA42C-B09	EHWA72CD-B09
EHWA60C-A20	EHWA72C-A10	EHWA42C-B15	EHWA60CD-A10
EHWA42C-B05	EHWA42C-A15	EHWA42C-B18	EHWA42CD-A15
EHWA60C-B06	EHWA42C-A20	EHWA48C-C09	EHWA42CD-B18
EHWA60C-B09	EHWA48C-B15	EHWA72C-C15	EHWA48CD-A05
EHWA60C-B15	EHWA60C-B18	EHWA72CD-A05	EHWA48CD-A10
EHWA48C-B18	EHWA42C-C09	EHWA72CD-B06	EHWA48CD-B09
EHWA42C-C05	EHWA42C-C15	EHWA42CD-A10	EHWA42CD-A05
EHWA60C-C09	EHWA42C-F07	EHWA72CD-A15	EHWA60CD-B09
EHWA60C-C15	EHWA42C-F12	EHWA42CD-B09	
EHWA42C-E09	EHWA48C-A05	EHWA60CD-B15	
EHWA42C-E15	EHWA42C-A10	EHWA48CD-B18	

For Use with W\*\*AC Series  
Wall-Mounted Air Conditioners



Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
[www.bardhvac.com](http://www.bardhvac.com)

Manual: 2100-731  
Supersedes: **NEW**  
Date: 9-9-19

# CONTENTS

---

<b>General Information .....</b>	<b>3</b>
Description of Equipment .....	3
Important.....	3
Shipping Damage .....	3
Unpacking Electric Heat Package.....	3
Wiring Main Power.....	5

<b>Installation .....</b>	<b>7</b>
Installation of Heater Package .....	7

## Tables

Table 1	Electrical Data and BTU Output .....	4
Table 2	References to Figures 3 and 4 by Model Number .....	9

## Figures

Figure 1	Electrical Connections.....	6
Figure 2	Installation of Heater Package.....	8
Figure 3	Rod Support and Screw Mounting Positions .....	10
Figure 4	A Through D .....	11
Figure 4	E and F.....	12
Figure 5	Installing Heater Base and Connecting Wiring.....	13
Figure 6	Serial Plate Label.....	14

## Description of Equipment

The EHWA series electric heater packages are field-installable heater packages suitable for use with Bard wall mount air conditioners. The packages consist of the electric heat strip, the heater control base (which includes the heat contactors and circuit breaker or toggle or rotary disconnects), installation instructions and wiring diagrams. See Table 1 on page 4 for nominal electrical data and BTU output. **Before installation, check unit serial plate to ensure the heater package model to be installed is listed as a heater package that is suitable for use with the Bard wall mount** (see Figure 6 on page 14).

## Important

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

## Shipping Damage

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

## Unpacking Electric Heat Package

Remove the heat package from the shipping carton. The heat package must consist of the following:

1. Basic heater.
2. Electric heat control base and wiring.
3. Installation instructions.
4. Two wiring diagrams, one to be applied to unit.
5. Adhesive label to re-mark serial plate to indicate new model number. This is attached to the front of these instructions.

## Recommended Installation Tools

- Personal protection equipment, including gloves and safety glasses
- 5/16" nut driver
- Phillips head screwdriver
- Straight head screwdriver
- Needle nose pliers
- Multimeter

**TABLE 1**  
**Electrical Data and BTU Output**

Heater Package Model	Volts	Phase	Nominal KW	Nominal BTU
EHWA42C-A05	240/208	1	5/3.75	17,065/12800
EHWA60C-A10	240/208	1	10/7.5	34130/25600
EHWA72C-A15	240/208	1	15/11.25	51200/38400
EHWA60C-A20	240/208	1	20/15	68,260/51,200
EHWA72C-A05	240/208	1	5/3.75	17,065/12800
EHWA72C-A10	240/208	1	10/7.5	34130/25600
EHWA42C-A15	240/208	1	15/11.25	51200/38400
EHWA42C-A20	240/208	1	20/15	68,260/51,200
EHWA48C-A05	240/208	1	5/3.75	17,065/12800
EHWA42C-A10	240/208	1	10/7.5	34130/25600
EHWA60C-A15	240/208	1	15/11.25	51200/38400
EHWA60CD-A05	240/208	1	5/3.75	17,065/12800
EHWA60CD-A10	240/208	1	10/7.5	34130/25600
EHWA42CD-A15	240/208	1	15/11.25	51200/38400
EHWA48CD-A05	240/208	1	5/3.75	17,065/12800
EHWA48CD-A10	240/208	1	10/7.5	34130/25600
EHWA42CD-A05	240/208	1	5/3.75	17,065/12800
EHWA72CD-A05	240/208	1	5/3.75	17,065/12800
EHWA42CD-A10	240/208	1	10/7.5	34130/25600
EHWA72CD-A15	240/208	1	15/11.25	51200/38400
EHWA42C-B05	240/208	3	5/3.75	17,065/12,799
EHWA60C-B06	240/208	3	6/4.5	20,475/15,356
EHWA60C-B09	240/208	3	9/6.75	30,600/23,030
EHWA60C-B15	240/208	3	15/11.25	51,200/38,400
EHWA48C-B18	240/208	3	18/13.5	61,430/46,100
EHWA48C-B15	240/208	3	15/11.25	51,200/38,400
EHWA60C-B18	240/208	3	18/13.5	61,430/46,100
EHWA42C-B06	240/208	3	6/4.5	20,475/15,356
EHWA42C-B09	240/208	3	9/6.75	30,600/23,030
EHWA42C-B15	240/208	3	15/11.25	51,200/38,400
EHWA42C-B18	240/208	3	18/13.5	61,430/46,100
EHWA42CD-B09	240/208	3	9/6.75	30,600/23,030
EHWA60CD-B15	240/208	3	15/11.25	51,200/38,400
EHWA48CD-B18	240/208	3	18/13.5	61,430/46,100
EHWA42CD-B18	240/208	3	18/13.5	61,430/46,100
EHWA48CD-B09	240/208	3	9/6.75	30,600/23,030
EHWA60CD-B09	240/208	3	9/6.75	30,600/23,030
EHWA72CD-B06	240/208	3	6/4.5	20,475/15,356
EHWA72CD-B09	240/208	3	9/6.75	30,600/23,030
EHWA42C-C05	480	3	5	17,065
EHWA60C-C09	480	3	9	30,700
EHWA60C-C15	480	3	15	47,000
EHWA42C-C09	480	3	9	30,700
EHWA42C-C15	480	3	15	47,000
EHWA48C-C09	480	3	9	30,700
EHWA72C-C15	480	3	15	47,000
EHWA42CD-C09	480	3	9	30,700
EHWA42C-E09	220/200	3	9	30,700
EHWA42C-E15	220/200	3	15	47,000
EHWA60C-F07	415	3	7	23,877
EHWA60C-F12	415	3	12	37,600
EHWA42C-F07	415	3	7	23,877
EHWA42C-F12	415	3	12	37,600

## WIRING MAIN POWER

1. On all installations, size unit power supply wiring for the minimum circuit ampacity requirement for the unit and heater package combination listed on the unit serial plate.

For existing installations, addition or upgrading of a heater package may require that larger supply wires be run to the unit. Resize all power supply wires for the minimum circuit ampacity rating listed on the unit serial plate that is applicable for the combination of unit and heater package.

### **WARNING**

***Install properly sized power supply leads for the unit/heater combination minimum circuit ampacity as listed on the unit serial plate. Hazard of fire. Failure to install properly sized conductors could result in fire causing damage, bodily injury or death.***


2. All heater packages covered by this manual are factory wired for a single supply circuit. The following heater packages are field convertible to a dual supply circuit if required or desired.

EHWA72C-A10  
EHWA42C-A15  
EHWA42C-A20  
EHWA60C-A15  
EHWA42CD-A15

3. To convert the above heater packages to dual circuit configuration before installation, loosen four (4) screws holding jumper bar in place and remove jumper bar. Circuit A + B are now identified on the heater package (see Figure 1 on page 6).

Wire should be sized to the minimum circuit ampacity as specified on the serial plates of units that accept these heater packages for circuits A + B.

**FIGURE 1**  
**Electrical Connections**

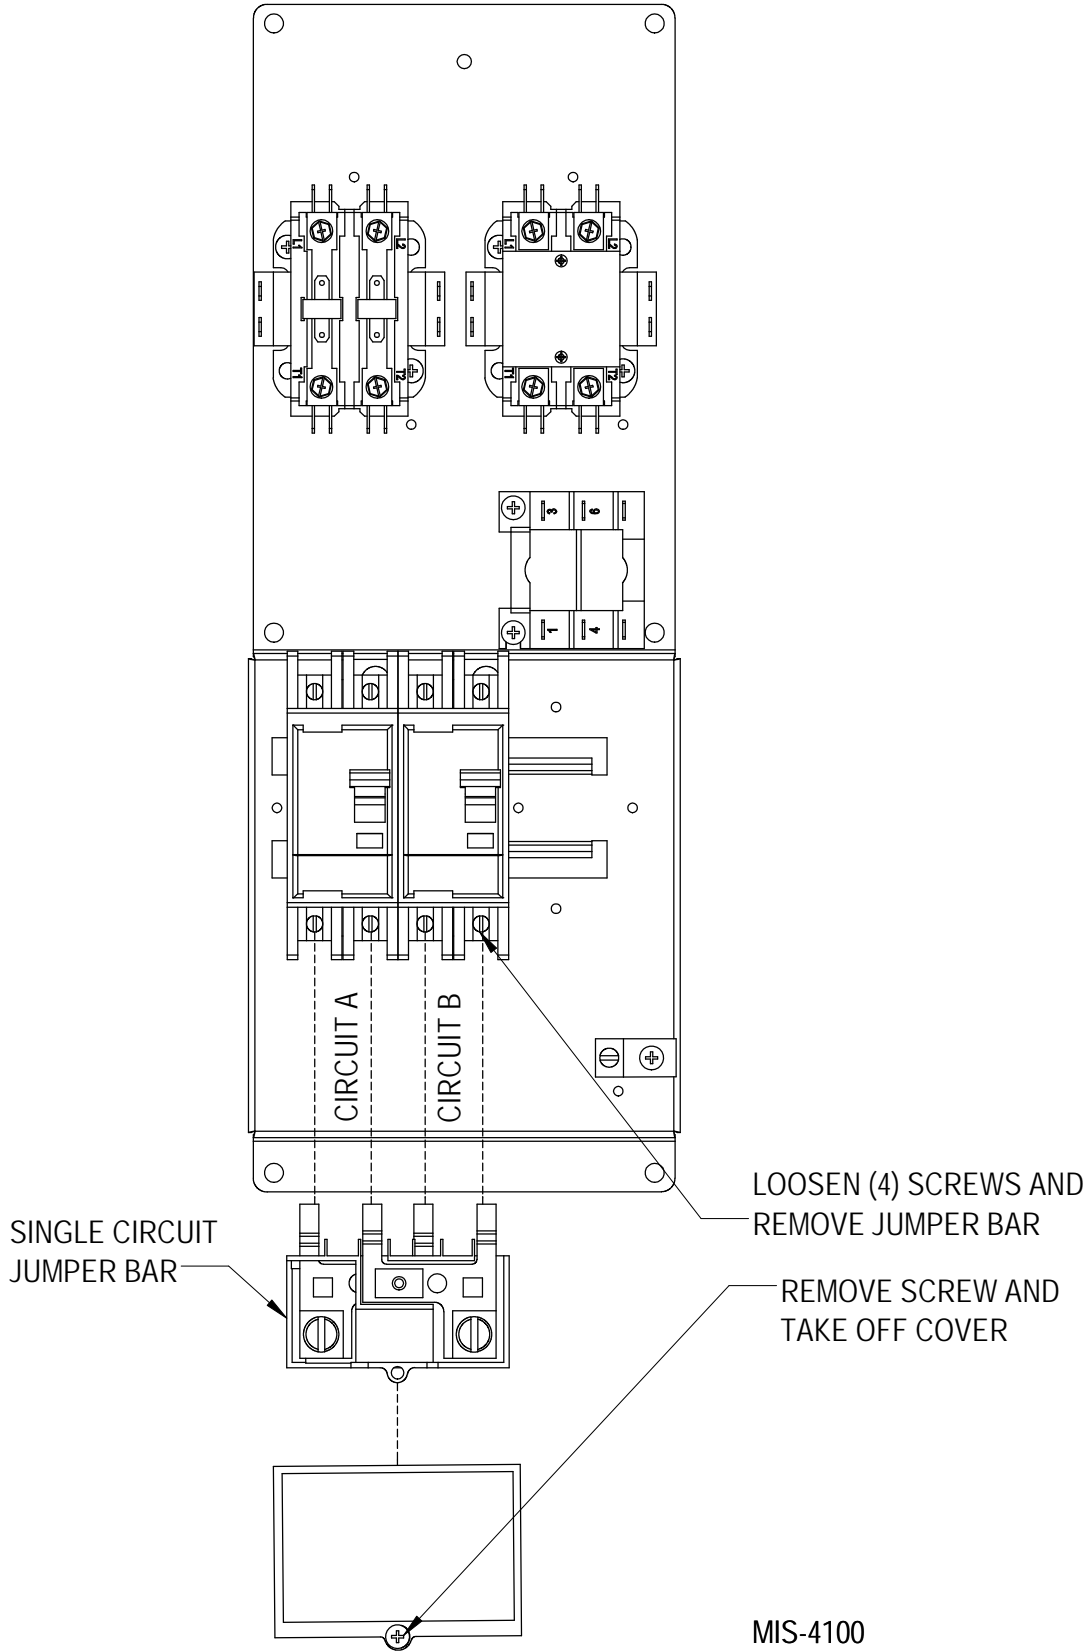

## INSTALLATION OF HEATER PACKAGE

1. Disconnect all power to unit before installation.

### **WARNING**

***Disconnect all power to unit before installing heater package. Hazard of electrical shock. Failure to disconnect power could result in injury or death.***

2. Before installation, check unit serial plate to ensure that the heater package model to be installed is listed as a heater package suitable for use with the unit.

Under no circumstances shall a heater package be installed in a unit if the model number of the heater package does not appear on the unit serial plate.


### **WARNING**

***Install only heater packages listed on unit serial plate. Hazard of fire or electrical shock. Failure to install listed heater package could result in fire, injury or death.***

3. Remove electric heater access panel and control panel cover, both inner and outer (see Figure 2 on page 8).
4. All heaters are installed with the thermal cutoffs positioned to the top of the unit. Install heat strip(s) through heater access opening. Position heat strip support rod in heater support hole 1, 2 or 3 as indicated in Table 2 on page 9 and Figure 3 on page 10. Secure in place with two (2) sheet metal screws in mounting holes. On heater packages with two heat strips, install 9KW or 10KW heater first in position closest to the outlet air frame (see Figures 4E and 4F on page 12).

5. Install heater control base into top of control panel as shown in Figure 5 on page 13. Secure with four (4) sheet metal screws provided.
6. Plug male 6-pin connector into mating connector mounted in control panel (see Figure 5).
7. Connect red compressor supply lead to L1 of terminal block. Connect black compressor supply lead to L2 of terminal block. If 3 phase, connect yellow supply lead to L3 of terminal block. See Figure 5 and wiring diagram.
8. Route wires from heater control base up through raceway in top right corner of control panel to the heaters (see Figure 5).
9. Wire heater package per wiring diagram supplied with this heater package. All wires are stamped with wire numbers that correspond with terminal numbers on the wiring diagram and stamped numbers on the heat strip. Limit switch wires are terminated with insulated quick connect terminals. See appropriate Figure 4 on page 11 or 12.
10. Attach adhesive wiring diagram directly above unit wiring diagram on inner control panel cover.
11. Recheck all wiring. Break out appropriate circuit breaker tabs on inner control panel cover to allow trip lever to protrude. Replace control panel and heater access panels
12. Resupply power to the unit and check for proper operation.
13. Re-mark serial plate with self-adhesive label attached to the front of this manual (see Figure 6 on page 14).

**FIGURE 2**  
**Installation of Heater Package**

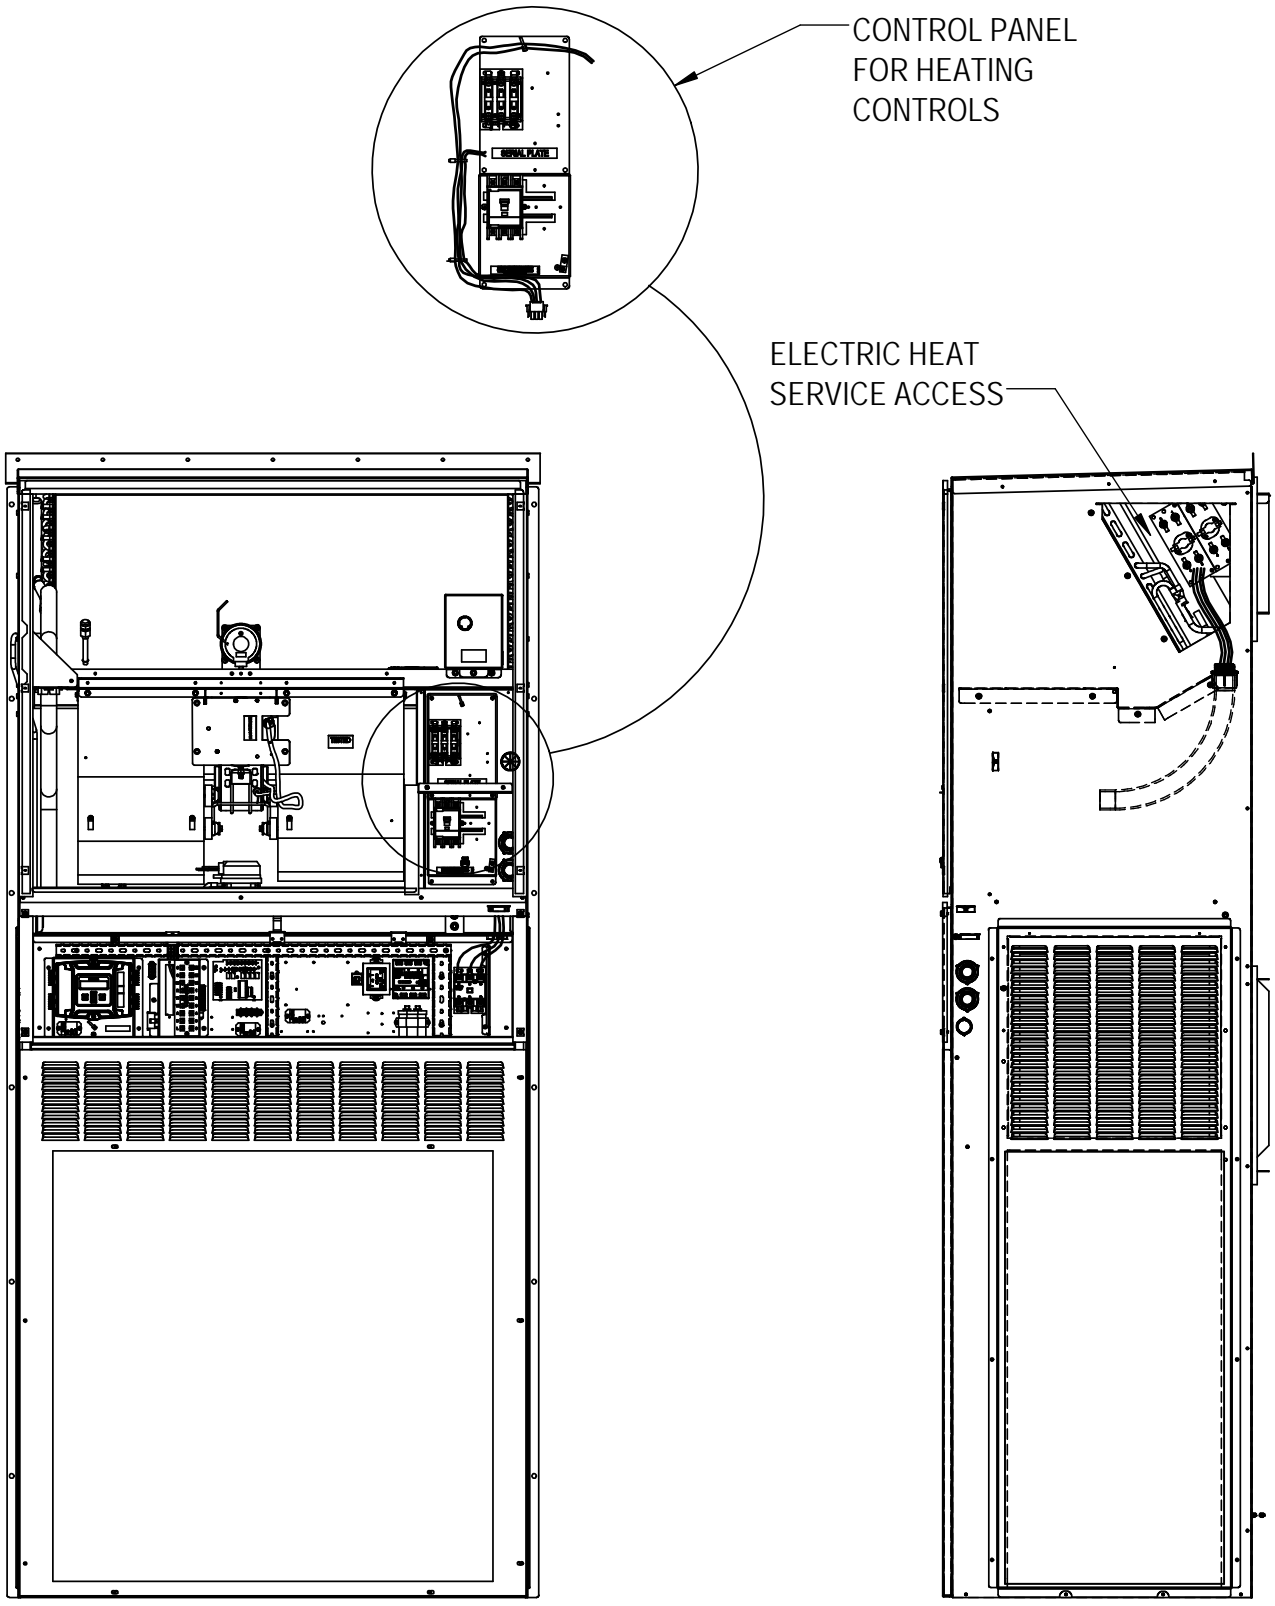


MIS-4899



**TABLE 2**  
**References to Figures 3 and 4 by Model Number**


Heater Package Model	Figure 3 Rod Support and Screw Mounting Position	Figure 4 Heater Terminal Identification Drawing
EHWA42C-A05	1	4A
EHWA60C-A10	1	4B
EHWA72C-A15	1 + 3	4D
EHWA60C-A20	1 + 3	4F
EHWA72C-A05	1	4A
EHWA72C-A10	1	4B
EHWA42C-A15	1 + 3	4D
EHWA42C-A20	1 + 3	4F
EHWA48C-A05	1	4A
EHWA42C-A10	1	4B
EHWA60C-A15	1 + 3	4D
EHWA60CD-A05	1	4A
EHWA60CD-A10	1 + 3	4B
EHWA42CD-A15	1	4D
EHWA48CD-A05	1	4A
EHWA48CD-A10	1	4B
EHWA42CD-A05	1	4A
EHWA72CD-A05	1	4A
EHWA42CD-A10	1	4B
EHWA72CD-A15	1 + 3	4D
EHWA42C-B05	1	4C
EHWA60C-B06	1	4C
EHWA60C-B09	1	4C
EHWA60C-B15	1 + 3	4E
EHWA48C-B18	1 + 3	4E
EHWA48C-B15	1 + 3	4E
EHWA60C-B18	1 + 3	4E
EHWA42C-B06	1	4C
EHWA42C-B09	1	4C
EHWA42C-B15	1 + 3	4E
EHWA42C-B18	1 + 3	4E
EHWA42CD-B09	1	4C
EHWA60CD-B15	1 + 3	4E
EHWA48CD-B18	1 + 3	4E
EHWA42CD-B18	1 + 3	4E
EHWA48CD-B09	1	4C
EHWA60CD-B09	1	4C
EHWA72CD-B06	1	4C
EHWA72CD-B09	1	4C
EHWA42C-C05	1	4C
EHWA60C-C09	1	4C
EHWA60C-C15	1 + 3	4E
EHWA42C-C09	1	4C
EHWA42C-C15	1 + 3	4E
EHWA48C-C09	1	4C
EHWA72C-C15	1 + 3	4E
EHWA42CD-C09	1	4C
EHWA42C-E09	1	4C
EHWA42C-E15	1 + 3	4D
EHWA60C-F07	1	4C
EHWA60C-F12	1 + 3	4E
EHWA42C-F07	1	4C
EHWA42C-F12	1 + 3	4E

**FIGURE 3**  
**Rod Support and Screw Mounting Positions**

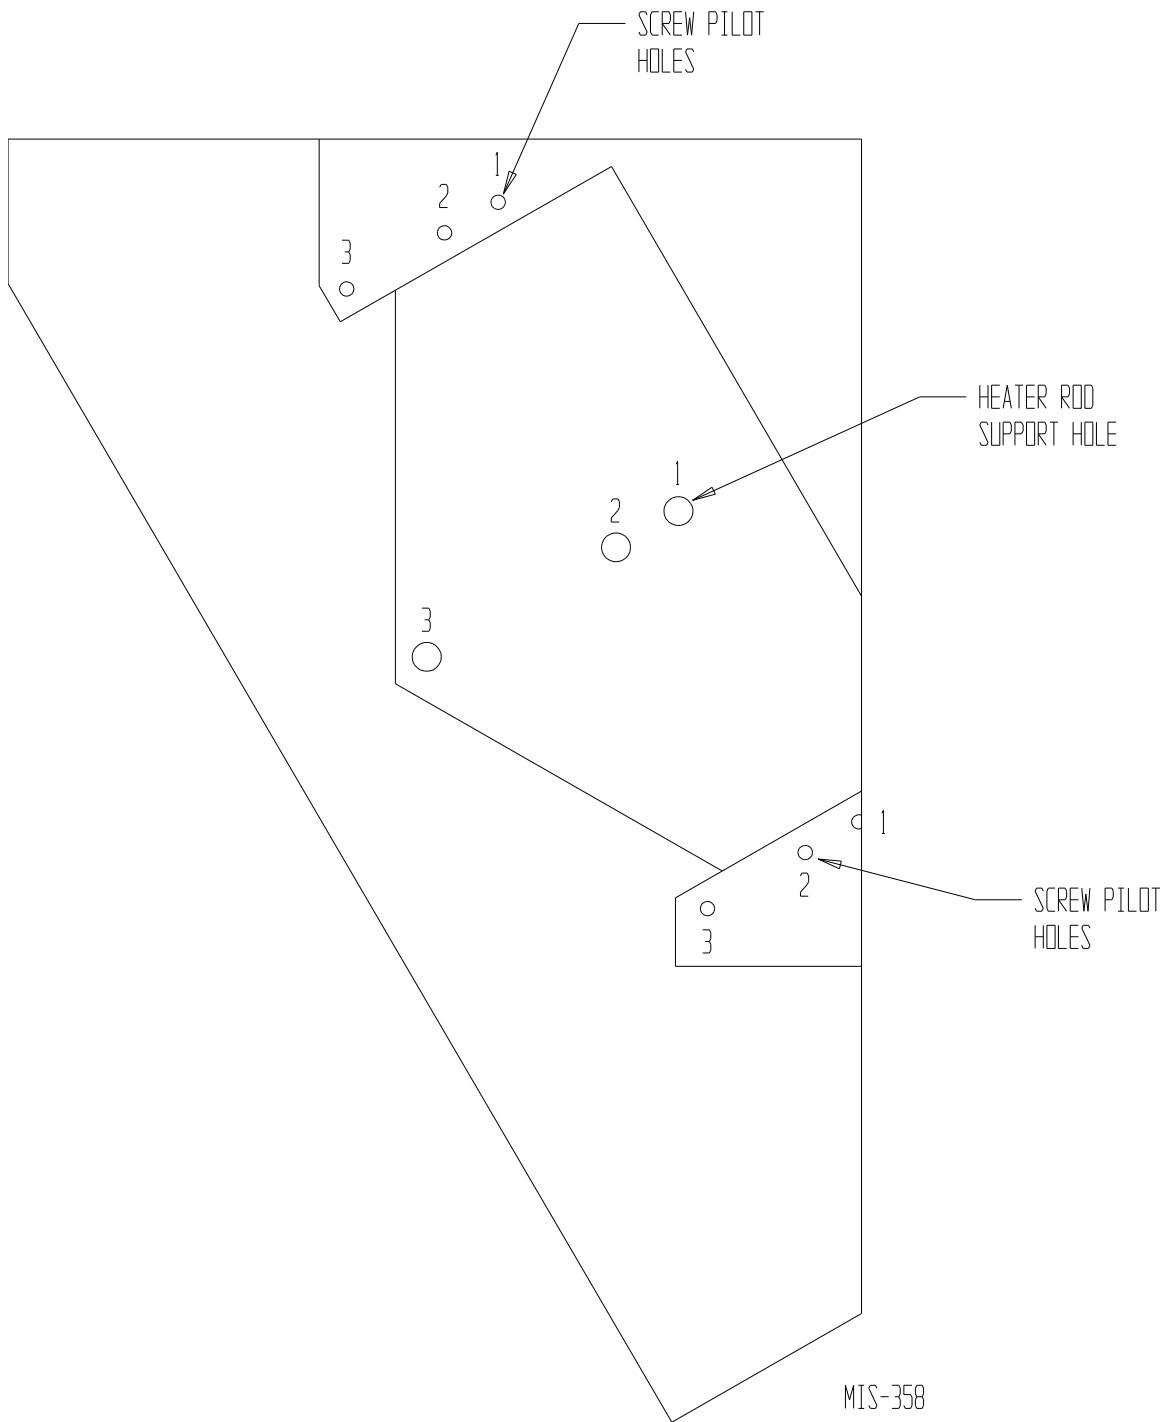


**FIGURE 4  
A Through D**


**FIGURE 4A**

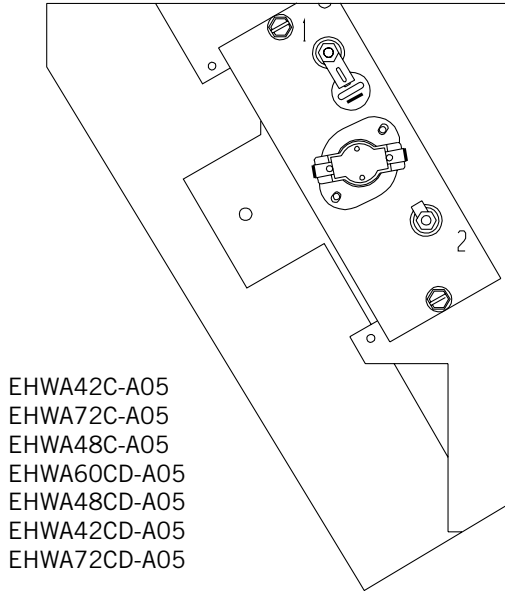


**FIGURE 4C**

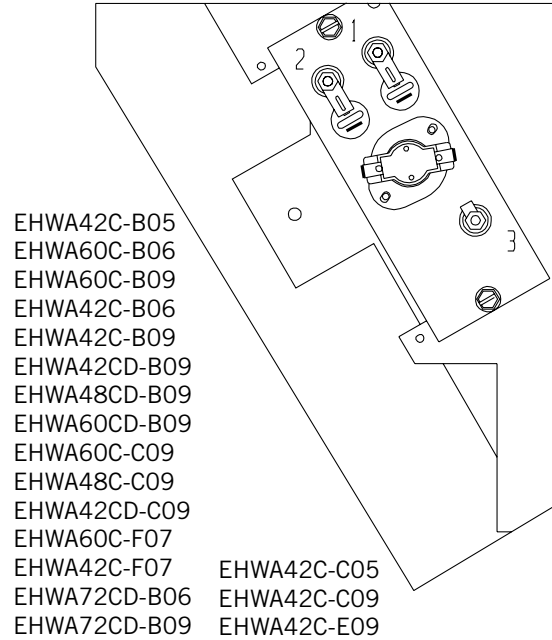

**FIGURE 4B**

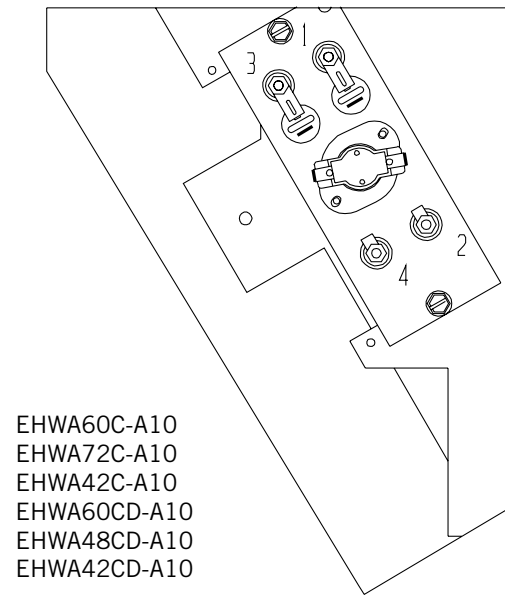


**FIGURE 4D**

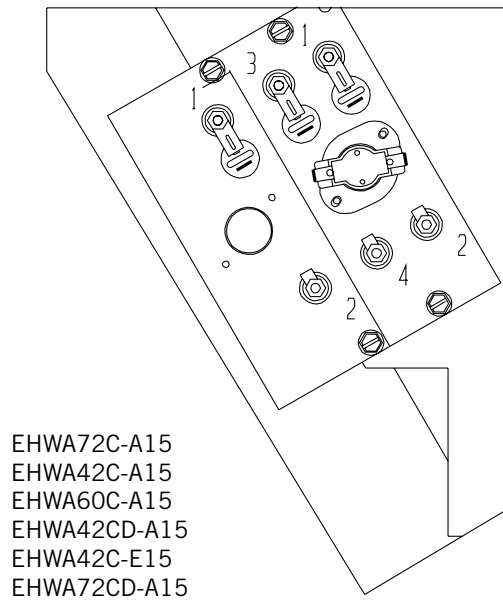

NOTE: THERMAL CUTOFFS TO BE AT  
TOP OF AIR FRAME WHEN INSTALLING.

MIS-420 F


**FIGURE 4  
E and F**

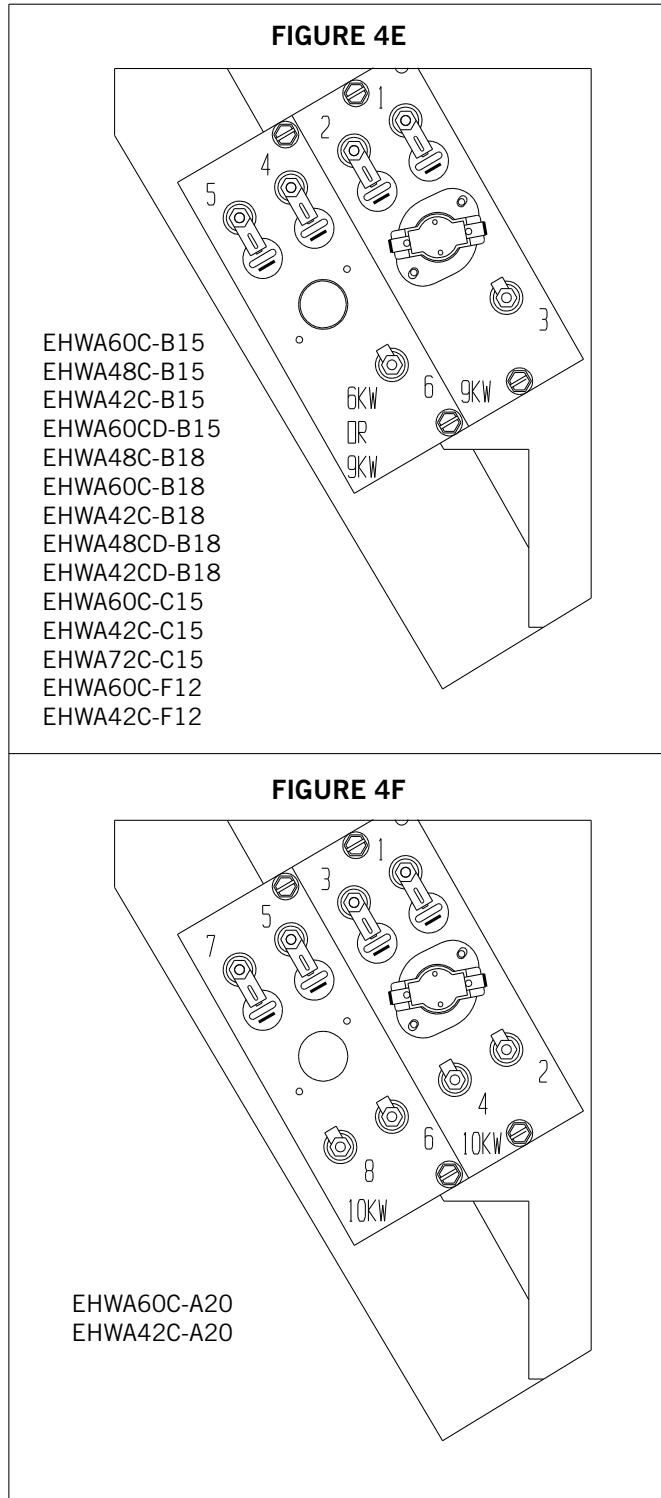

NOTE: THERMAL CUTOFFS TO BE AT TOP OF AIR FRAME WHEN INSTALLING.

MIS-421 E

**FIGURE 5**  
**Installing Heater Base and Connecting Wiring**

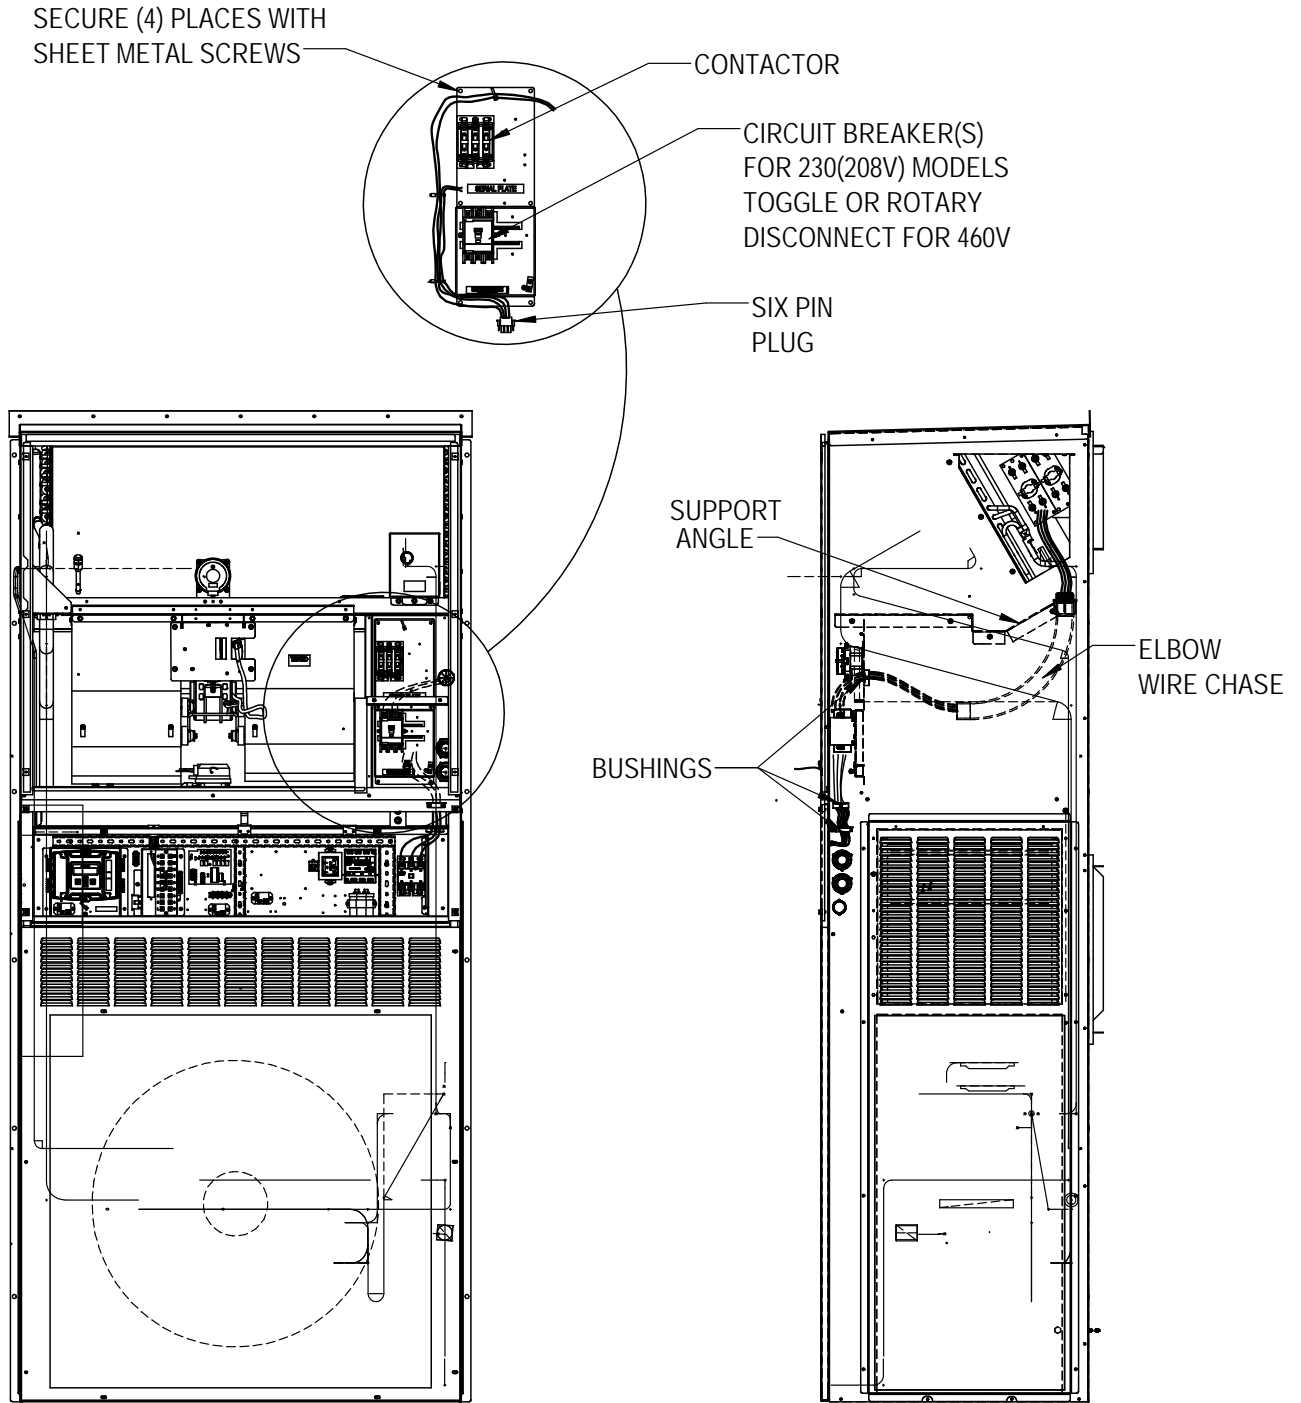

mis-4898

**FIGURE 6  
Serial Plate Label**

INSTALL ONLY HEATER PACKAGES LISTED HERE.

BARD MANUFACTURING COMPANY, 1914 RANDOLPH DRIVE

(X)	( )	( )	( )	( )	( )
( )	(X)	( )	( )	( )	( )
( )	( )	(X)	( )	( )	( )
( )	( )	( )	(X)	( )	( )
( )	( )	( )	( )	( )	(X)

ASSURE THAT SERIAL PLATE IS CLEAN AND DRY, REMOVE APPROPRIATE LABEL STRIP FOR KW REQUIRED AND REMARK SERIAL PLATE AS SHOWN FOR THE HEATER PACKAGE THAT IS INSTALLED

(1)  
APPROVED  
HEATER  
PACKAGE

MODEL	APPROVED HEATER PACKAGE	VAC	HZ
( ) JWA361-A0012345	NONE	230/208	60
( ) JWA361-A0512345	EHWA03-A05	230/208	60
(X) JWA361-A0812345	EHWA03-A08	230/208	60
( ) JWA361-A1012345	EHWA03-A10	230/208	60
( ) JWA361-A1512345	EHWA03-A15	230/208	60

BRANCH CIRCUIT SELECT CURRENT 17 OPERATION

SERIAL NUMBER 125H920711193-01 UL FILE NO.

SUITABLE FOR OUTDOOR USE

COMPRESSOR OUTDOOR MOTOR INDOOR MOTOR	VAC	HZ	PH	HP	ELECTRICAL
	230/208	60	1	1	1/5
	230/208	60	1	1	1/3
HEATER PACKAGE					KW
EHWA03-A05	240/208	60	1	1	5/3.75
EHWA03-A08	240/208	60	1	1	8/6
EHWA03-A10	240/208	60	1	1	10/7.5
EHWA03-A15	240/208	60	1	1	15/11.25

FACTORY CHARGED R22: 68 OZ. DESI  
-- FACTORY  
-- CLEAR

MIS-384