

# REPLACEMENT PARTS MANUAL

BLOWER COIL  
HEATER PACKAGE  
MODEL EH2BA  
EH2BB

Manual 2110-151

Revision A

Date

Supersedes

\*\*\*\*\*  
\* GENERAL NOTES \*  
\*\*\*\*\*

\*Revised and/or additional pages may be issued from time to time.  
\*A complete and current manual consists of pages dated as shown in the following index.


\*\*\*\*\*  
\*\* INDEX \*\*  
\*\*\*\*\*

<u>Page Description</u>	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>
Functional Components--Exploded View	1	7-11-89	
" " --Usage List	2	2-04-91	7-11-89

\*\*\*\*\*  
\*\*\* IMPORTANT \*\*\*  
\*\*\*\*\*

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

FUNCTIONAL PARTS

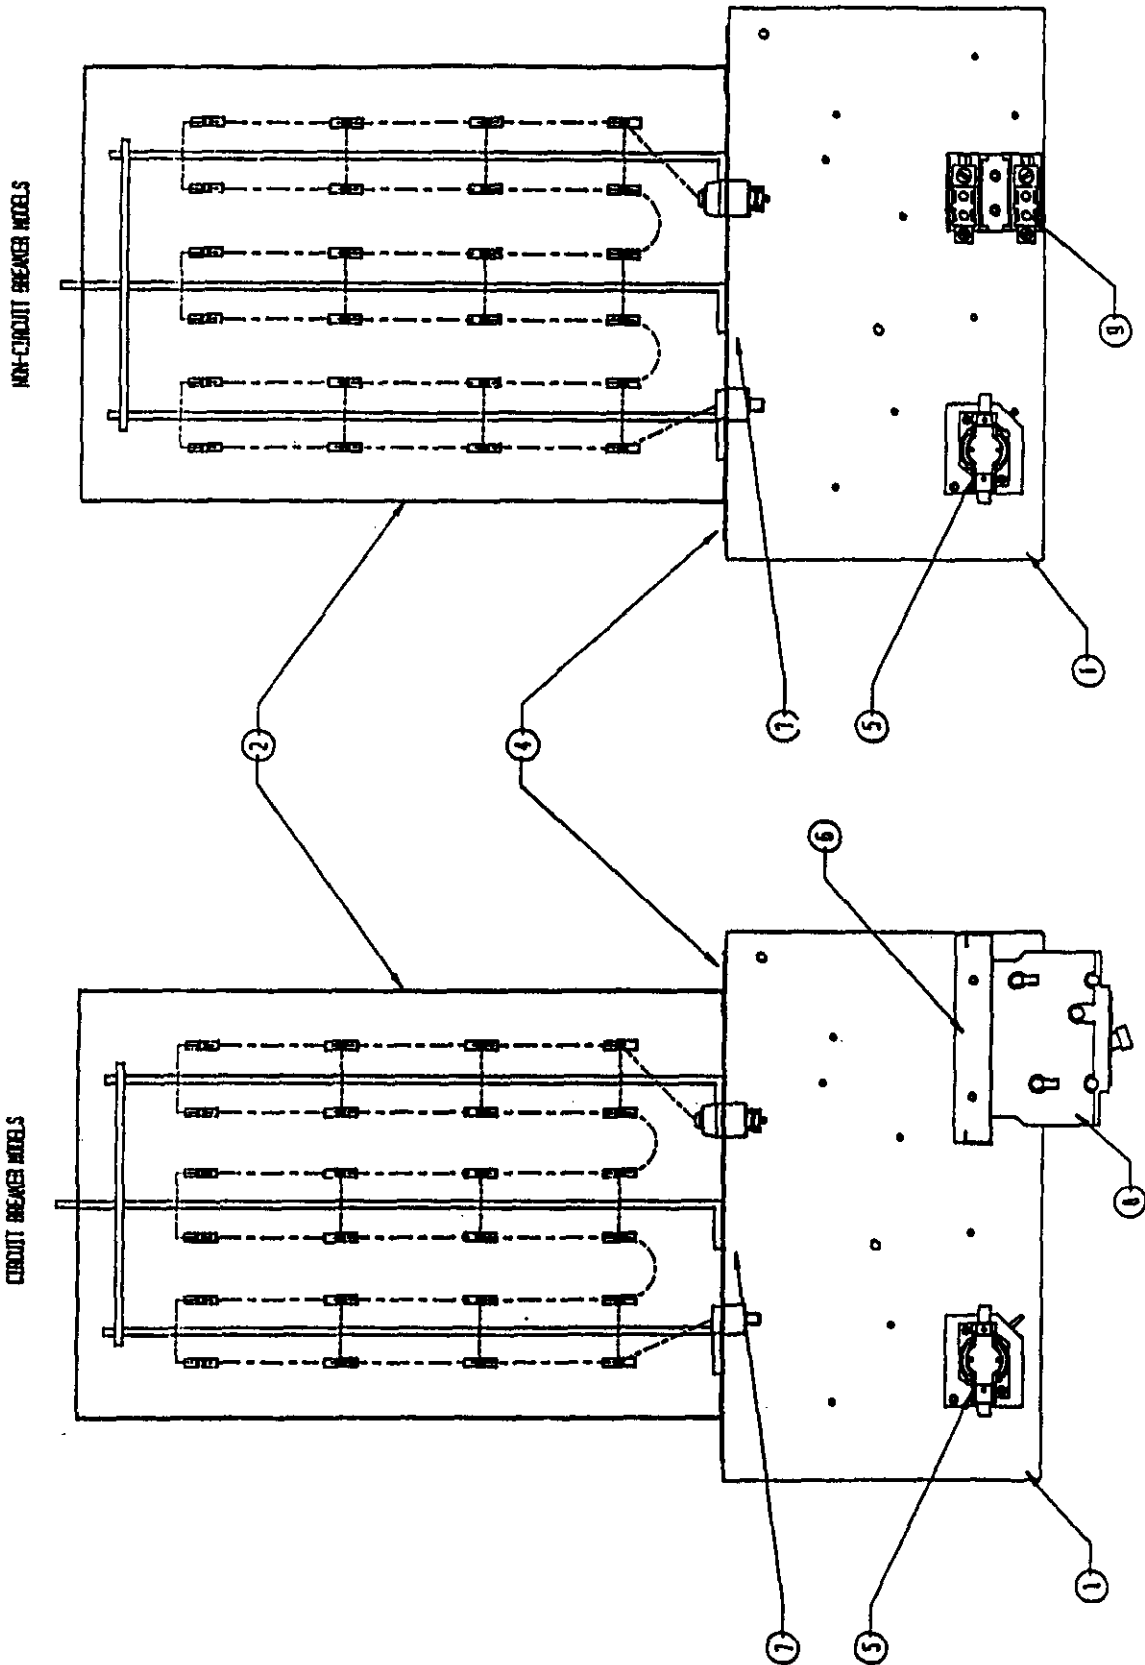

Date: 7-11-89  
Supersedes:

FUNCTIONAL PARTS

Dwg. No.	Part No.	Description	B H 2 B A   A O 5 N	B H 2 B A   A O 9 N	B H 2 B A   A O 5 C	B H 2 B A   A O 9 C	B H 2 B B   A O 9 N	B H 2 B B   A O 9 C
1	134-104	Heater Package Base	X	X	X	X	X	X
2	134-106	Heater Package Wrapper	X	X	X	X	X	X
4	8604-092	4.5KW Heat Strip 240V	1		1			
4	8604-093	9KW Heat Strip 240V		1		1	1	1
4	136-145	Fill Plate	X	X	X	X	X	X
5	8201-057	Time Delay Relay H30-75 C1-40	1		1		2	2
5	8201-058	Time Delay Relay H1-30 C45-70		1		1		
6	8607-013	Terminal Block	1	1			1	
8	8615-013	Circuit Breaker 30A			1			
8	8615-015	Circuit Breaker 50A				1		1
12	112-092	Circuit Breaker Mounting Plate			X	X		X
13	8402-058	Limit Control L140-3.5	1	2	1	2	2	2
	4090-110	Wiring Diagram	X					
	4090-111	Wiring Diagram			X			
	4090-120	Wiring Diagram		X				
	4090-121	Wiring Diagram				X		
	4090-122	Wiring Diagram					X	
	4090-123	Wiring Diagram						X

Date: 2-04-91  
Supersedes: 7-11-89

